 




iPettie

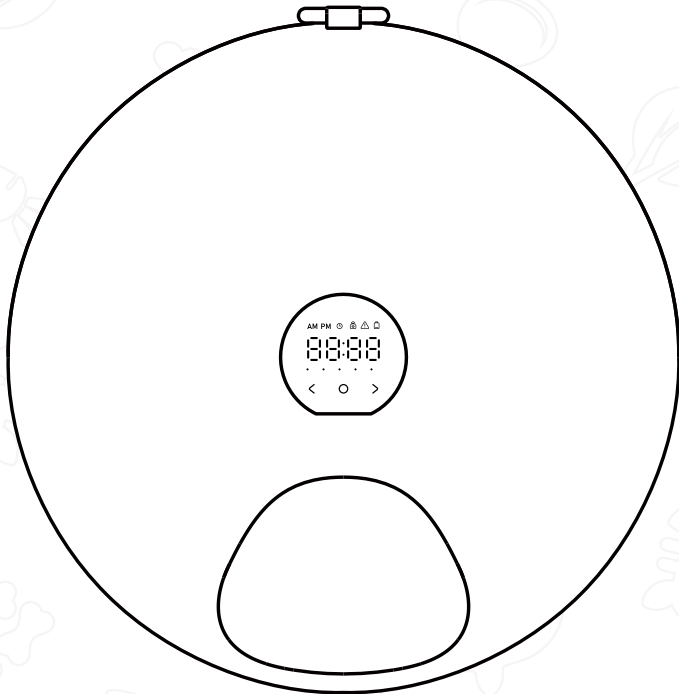

User manual

Donut Frost

6-Meal Automatic Pet Feeder

This guide details the setup and functions of the Donut Frost Pet Feeder. Please follow the steps in this manual while using the device, and keep this manual for future reference.

CONTENTS

SAFETY GUIDELINES	01
WHAT'S IN THE BOX	02
SPECIFICATIONS	02
GETTING TO KNOW YOUR PET FEEDER	03
INSTRUCTIONS FOR USE	04
CLEANING AND MAINTENANCE	07
TROUBLESHOOTING	09
SETTING THE FEEDING TIME	10
iPettie PRODUCT CATALOG	11

SAFETY GUIDELINES

⚠ Device placement

1. Pet feeder should be placed on a level surface. Do not place or store an appliance where it can fall or be pulled.
2. Only for use indoors, away from areas of direct sunlight or moisture.
3. Do not expose the feeder to temperatures below 0°C (32°F).
4. Do not place any foreign objects in the feeder.
5. Make sure there are no objects on and around the food bowl that would prevent pets from eating normally.

⚠ Important Safety Information

1. Make sure the power supply is securely plugged in to ensure the feeder functions properly.
2. This product is only suitable for cats and small dogs.
3. Do not allow small children to play with, in, or around the feeder.
4. Do not consume the fillings of the ice pack. If the pack is damaged, do not use it.
5. Do not submerge control board in water at any time, as this may damage electronic components.
6. Do not disassemble the pet feeder beyond its individual components.
7. Do not place or store in a tub or sink.
8. Do not get the charging port wet. If the charging port gets wet, it should be allowed to fully dry before charging.
9. The feeder only supports charging with 5V 1/2A adapters.
10. Always unplug the feeder when not in use. If storing for over six (6) months, the device should be fully charged beforehand.
11. Do not allow pets to chew on or swallow any part of the device.
12. Do not use the pet feeder for any purpose other than feeding pets.


WHAT'S IN THE BOX

Item	Quantity
Pet Feeder	1
Ice Pack	2
Type-C Cable	1
User Manual	1


SPECIFICATIONS

Material	Food-grade ABS、 Polypropylene (pp)
Battery Capacity	3,600 mAh
Compatible Food	All types of pet food
Capacity	200 ml x 6
Charge Voltage	Type-C 5V 1/2A
Rated Power	1 W
Dimension	320 mm x 327 mm x 87 mm (12.6 in. x 12.8 in. x 3.4 in.)
NW	1.3 kg/2.86 lb

 GETTING TO KNOW YOUR PET FEEDER

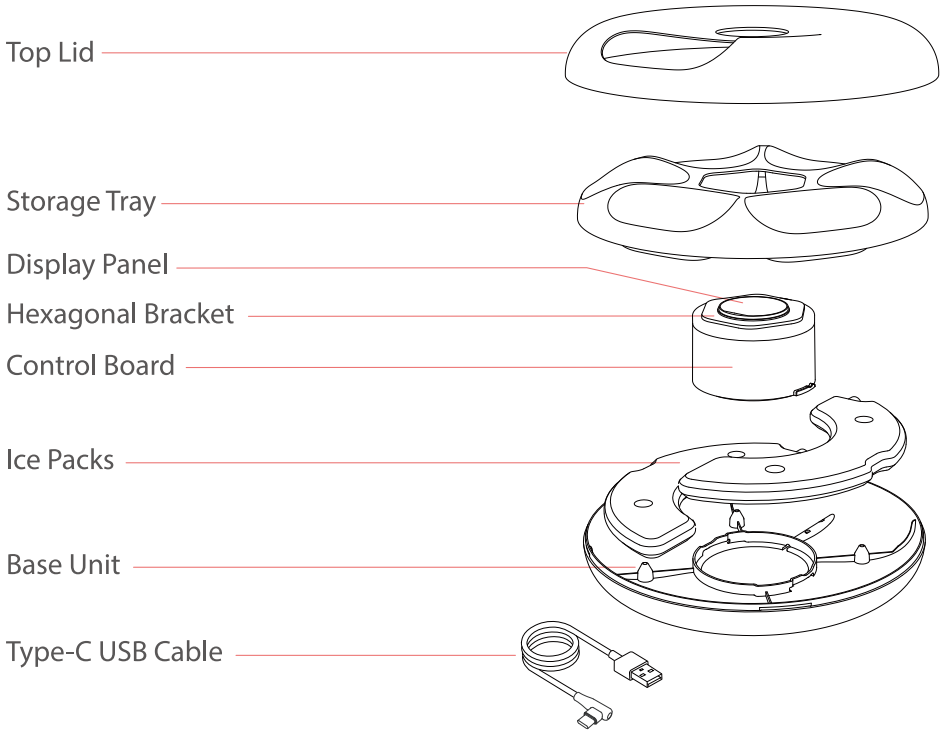


Display Panel

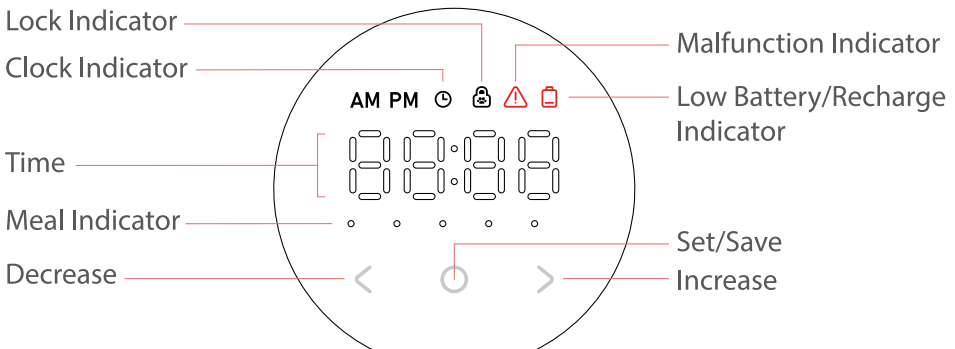 

INSTRUCTIONS FOR USE


Open the Lid

Place the feeder flat on a surface, pull the ring lock on the back of the feeder upward with one hand, and lift the entire Top Lid.

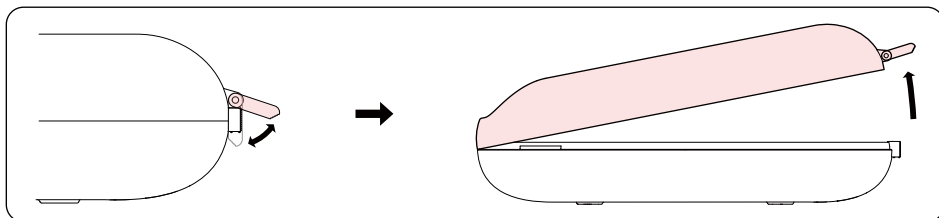

Insert the Ice Packs

Place the Ice Packs horizontally in your refrigerator's freezer at around -18°C for at least six (6) hours. Then, insert the frozen packs into the feeder to keep wet food fresh.

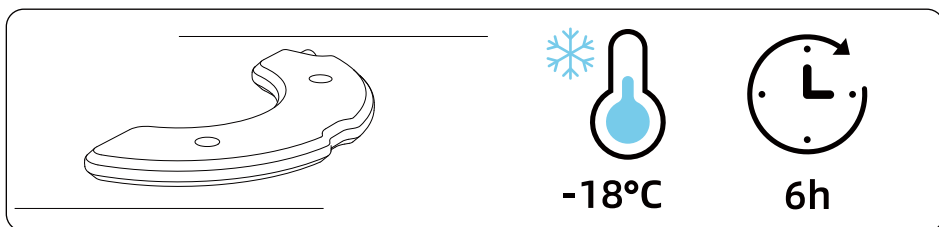


* Note:

- Do not freeze the Ice Packs while they are vertically situated, as this will cause them to bulge and become misshapen.
- There is no need to use the Ice Packs for dry pet food.
- The freshness preserved by the use of the Ice Packs can also be affected by exterior environmental factors.
- The Ice Packs are for reasonable use with canned food, fresh food, and other perishable food that benefits from low-temperature preservation.
- Freeze-dried food and other forms of dry pet food do not need low temperatures to stay fresh.

INSTRUCTIONS FOR USE

Fill the Food Supply

- ① Place the storage tray into the Base Unit, and then fill the bowl(s) with pet food.
- ② Cover the Top Lid and lock it.

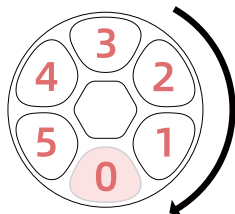

Wet Food
(85 g per bowl)




Dry Food
(85 g–90 g per bowl)

* Note:


- Avoid storing too much fresh food in the device, as the surplus fresh food can lead to odors and insects.
- While filling the food supply, please give priority to foods with short shelf lives, such as canned and fresh food.

Unlock the Display

- Press and hold the < and > buttons at the same time for three (3) seconds to unlock the display. The screen will then light up.
- Press and hold the < and > buttons at the same time for three (3) seconds again to lock the display. The screen will darken, and the lock indicator will light up.

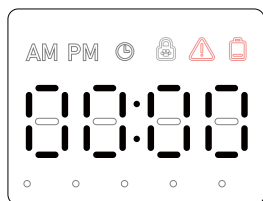



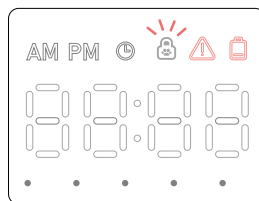








Unlocked Status




Locked Status





INSTRUCTIONS FOR USE

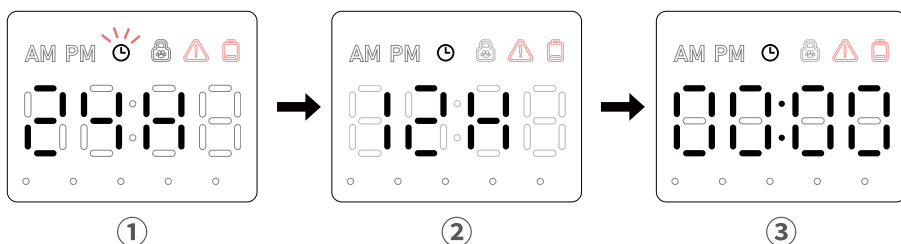
Set the Current Time

- ① Unlock the display, then press the  button to set the time. The Clock Indicator  will light up and flash.
- ② Set the Hour System: Press  or  to select either a 24- or 12-hour system. Press  to save.
- ③ Set the Time: Press  or  to adjust the hour value, and then press  to save. Press  or  to adjust the minute value, and then press  to save.



Set Feeding Time

 - ① After you set the clock, the first Meal Indicator will flash. Press  or  to set the time for the first meal. (If using a 12-hour system, please note the AM or PM logo in the upper-left corner of the screen when setting the feeding time.)
- ② Quickly pressing the  button will save the schedule for Meal 1 and go to the settings for Meal 2. When you are finished scheduling the day's meals, please long press the  button to return to the screen showing the current time. Your feeding schedule will be automatically saved.

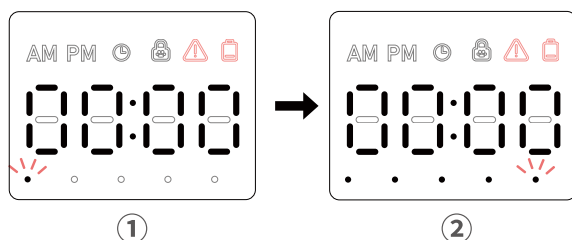

Note: When the meal indicator goes out, indicating that the meal has been dispensed, the indicator will light up again after 00:00 midnight (12:00 am).

INSTRUCTIONS FOR USE

Instant Feed

To instantly feed your pet, unlock the display and long press the < button.

Cancel Feedings

If the feeding time is set to 00:00 or 12:00 AM, the feeding will not occur.


Restore Factory Settings

Unlock the display, then press ○ and < at the same time for three (3) seconds to clear all settings.

CLEANING AND MAINTENANCE

Clean device interior and food bowl

- ① Rotate the Control Board clockwise and remove it, as it is not washable.
- ② All other parts are washable. Avoid using metal materials for cleaning, as these can damage the product's surface.

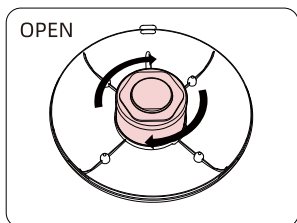

①



②

CLEANING AND MAINTENANCE

Clean the Control Board

After removing the control board, wipe the outside with soft damp cloth.


*** Note:**

The control board is not waterproof and cannot be washed in water.




Reconnect the Control Board

- ① Align the control board buckle with the bottom housing installation slot and rotate it counterclockwise until hearing a “click” sound.
- ② Check whether the control board is fully reconnected in the right place.

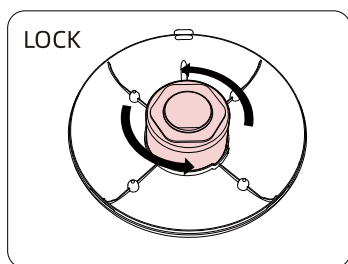

①

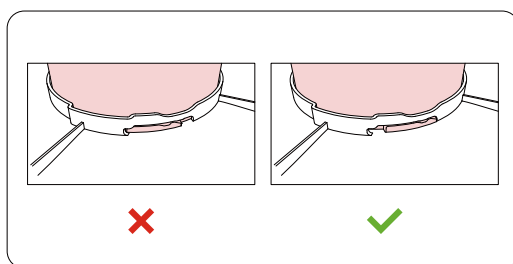

②

*** Note:**

If the control board is not re-installed properly, the food bowl will be misaligned and the feeder won't work properly.

Where to buy the replacement ice packs and the food tray?

Please search the below model NO. on Amazon to find the products.


Replacement ice packs: IP-FD-C01-I2

Replacement food tray: IP-FD-C01-FT

TROUBLESHOOTING

Error/Symptom	Cause	How to solve it
Display OFF	No power	Charge as soon as possible
	Power not turned on	Flip the switch on the bottom of the device
	Device abnormal	Contact after-sales support
Unable to charge	Device abnormal	Contact after-sales support
Misaligned food bowl	Control board installed improperly	Ensure that the control board is installed properly
	Device abnormal	Contact after-sales support
E1: -- Display	Food bowl is clogged with foreign matter	Clean any foreign matter from the food bowl and manually dispense food once
	Too much food in food bowl	Only fill with the appropriate size and amount of food
E4: -- Display	Photoelectric sensor error	Contact after-sales support.
	Device abnormal	Contact after-sales support.
E5: LP Display	Low battery	Charge as soon as possible

SETTING THE FEEDING TIME

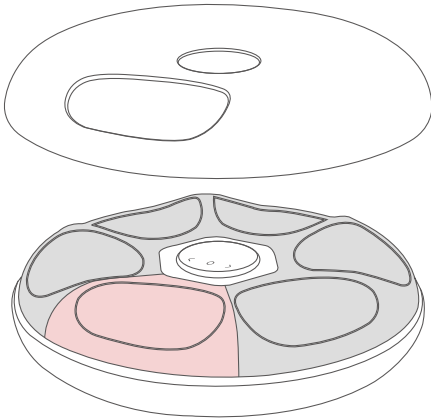







 Scheduled







 Ready to Eat

The exposed compartment is meal NO.1, which can't be programmed.

EXAMPLE1: Schedule A (Now : 7:00 AM | Meal 1 Time : 8:00 AM)

SETTING	NOW	8:00 AM	12:00 PM	6:00 PM
DAY 1				
DAY 2	---			Refill food

EXAMPLE2: Schedule B (Now : 9:00 AM | Meal 1 Time : 8:00 AM)

SETTING	NOW	8:00 AM	12:00 PM
DAY 1		---	
DAY 2	---		
DAY 3	---		

iPettie PRODUCT CATALOG



Neverland



Bear



Runway



Kamino



W5



Tritone



iPettie

MADE IN CHINA



This device complies with Part 15 of the FCC Regulations.

Operation is subject to the following two conditions:

(1) this device may not cause harmful interference,
and (2) this device must accept any interference received,
including interference that may cause undesired operation.