

***INSTRUCTION MANUAL***



***RECLINABLE TOWER FAN WITH IONIZER***

***MODEL: SF-1523***

## PLEASE READ BEFORE USE AND SAVE THIS MANUAL

### **IMPORTANT SAFETY INSTRUCTIONS**

***When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electrical shock, and injury to persons, including the following:***

1. Use this fan only as described in this manual. Other uses not recommended may cause fire, electrical shock or injury to persons.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
3. This product is intended for household use ONLY and not for commercial, industrial or outdoor use.
4. To protect against electrical shock: do not place fan on windowsills, immerse unit, plug or cord in water or spray with any liquids.
5. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of shock, this plug is intended to fit only one way in a polarized outlet. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. DO NOT attempt to bypass this safety feature by using adapters.
6. Close supervision is necessary when any appliance is used by or near children.
7. Turn the fan OFF and unplug the fan from the outlet when not in use, when moving the fan from one location to another and prior to cleaning.
8. To disconnect the fan, first turn the unit OFF, grip the plug and pull it from the wall outlet. Never remove from the outlet by pulling the cord.
9. Do not operate the fan in the presence of explosive and/or flammable fumes and materials.
10. Do not place the fan or any parts near an open flame, cooking or other heating appliance.
11. Do not operate fan with a damaged cord or plug, or if the product malfunctions, or is dropped and damaged in any manner (see warranty).
12. If supply cord is damaged, it must be replaced by the manufacture or similarly qualified person in order to avoid a hazard.
13. Avoid contact with moving fan parts.
14. The use of attachments not recommended by the manufacturer may be hazardous.
15. Only use the fan on a dry level surface.
16. Do not hang or mount fan on a wall or ceiling.
17. Do not operate if the fan housing is damaged.
18. A loose fit between the AC outlet (receptacle) and plug may cause overheating and a distortion of the plug. Contact a qualified electrician to replace loose or worn outlet.
19. This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the unit from the outlet and replace fuse or contact Sunpentown.
20. Do not run cord under carpeting. Do not cover cord with throw rugs, runners or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.

***WARNING: To reduce the risk of fire and electrical shock, do not use this fan with any solid-state speed control device.***

 
## ***PARTS IDENTIFICATION***





## ***ASSEMBLY INSTRUCTIONS***



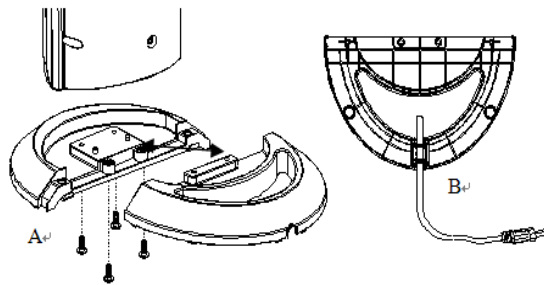


Do not use this fan before assembling the base.

  1. Assemble the front and rear base with power cord traveling through the center.
2. Secure base assembly to fan by inserting and tightening the (4) screws on the bottom of base. (A)
3. Place power cord securely in the power cord holding bracket. (B)

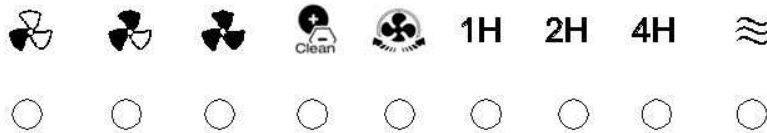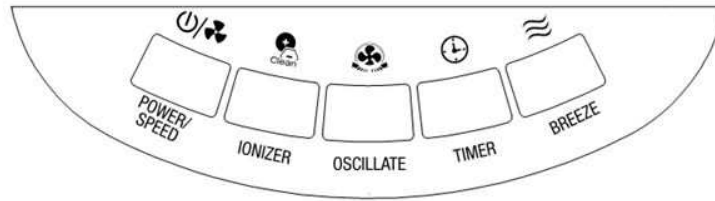


## **CONTROL PANEL AND OPERATION INSTRUCTIONS**



1. Connect power and press the Power/Speed  button. Fan will begin operation at high speed.
2. Change fan speed by pressing the Power/Speed  button. Selected speed will be indicated by illuminated symbols: Low , Medium  and High .
3. Oscillation – press to start or stop the oscillation function.
4. Timer – press to set off-timer in 1 hour increments, up to 7 hours. Illuminated numbers add up to set time.
5. Breeze – press to select wind mode, Normal or Natural:
  - Normal wind: fan will run at selected fan speed.
  - Natural wind: fan will run at pre-set program, alternating between the three speeds to imitate the flow of natural wind.
6. Ionizer – when fan is operating, press to start or stop the Ionizing function.

## **REMOTE CONTROL**

 The remote control has the same functions as the control panel.

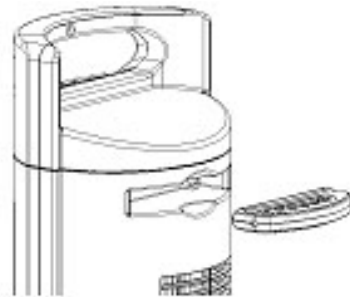

Remote control storage



Replacing batteries

### **ANGLE SELECTION**

The angle of the fan's body can be adjusted to 0, 6 or 12 degrees.



### **CLEANING AND STORAGE**

- Turn off power and unplug the fan before cleaning.
- Use only a soft, damp cloth to gently wipe the outer surfaces.
- To clean between the grilles, we recommend using a pipe cleaner, flexible dust wand, vacuum cleaner or compressed air to gently remove the dust.
- DO NOT immerse fan in water and never allow water to drip into the motor housing.
- DO NOT use gasoline, paint thinner or other chemicals to clean the fan.
- For storage, you may leave the fan assembled. Cover the fan to protect from dust and store in a cool, dry, place.

### **WARNING!**

 
If the fan has any problems, please contact Sunpentown Customer Service at 1-800-330-0388.

**DO NOT ATTEMPT TO OPEN OR REPAIR THE FAN YOURSELF. DOING SO COULD VOID THE WARRANTY AND CAUSE DAMAGE OR PERSONAL INJURY**

### **SPECIFICATIONS**

Noise level (High/Med/Low)	52 / 48 / 43 dB
Speed, RPM (High/Med/Low)	1250 / 1100 / 900 (±10%)
Oscillation	55 Degrees
Power input	120V / 60Hz
Wattage	40 W
Power cord length	5.9 ft
Unit dimension (base) x height	10.25W x 12D x 37.5H inches
Package dimension	9.13 x 8.58 x 38.74
Net / Gross weight	9.92 / 13.67 lbs
Safety approval	ETL

**ELECTRIC SCHEMATIC DRAWING**

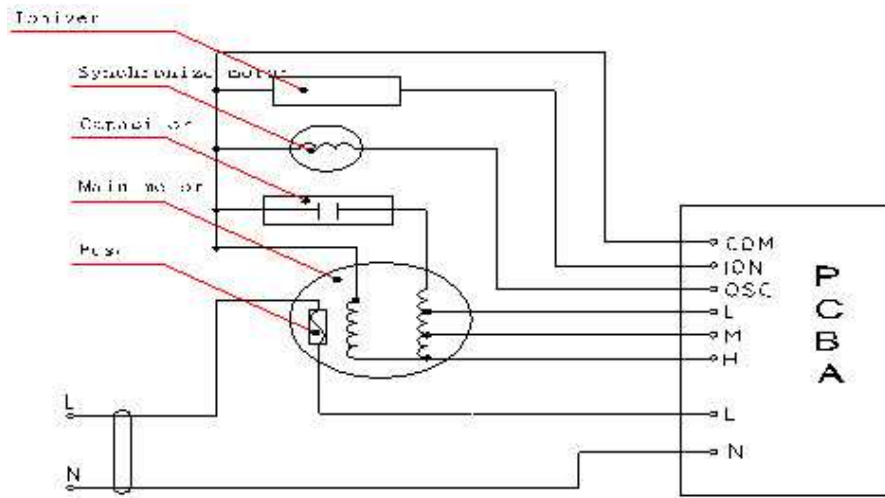



## Your Guarantee

***If this product is found to be faulty as a result of faulty materials or workmanship within one year from date of purchase, it will be repaired free of charge.***

This guarantee is subject to the following terms:

- Sunpentown must be notified of the fault.
- Proof of purchase must be presented to Sunpentown's nominated representative.
- The warranty will be void if the product is modified, misused or repaired by an unauthorized person.
- The warranty after repair will not be extended beyond the original one-year period.
- All replacement parts will be new or reconditioned.
- Parts, which are replaced, become the property of Sunpentown.
- The warranty applies for the use of the product in the USA only.

***What is NOT COVERED:***

- Warranty does not include freight charges.
- Incidental or consequential damage caused by possible defects with this product.
- Damage to product caused by improper power supply voltage, accident, fire, floods or acts of nature.
- Failure of product resulting from unauthorized modifications to the product.
- Improper installation or failure to perform the necessary maintenance.

This GUARANTEE is in addition to your Statutory Rights

**SUNPENTOWN INTERNATIONAL INC.**  
**14625 Clark Ave., City of Industry, CA 91745**  
**Tel: 1-800-330-0388 · Fax: 626-336-7116**  
***service@sunpentown.com***  
**[www.sunpentown.com](http://www.sunpentown.com)**