

# STS-410 Manufacturer Manual

Pending Update

Manufacturer Manual - Since the manuals we created for our products are a HUGE selling point, we currently only offer the manufacturer's manuals for pre-purchase download.

We are currently updating this PDF file. Please contact us to download this manufacturer manual or check back later.

## OUR MANUAL



English Manual Written by US!  
Exclusive to our customers!

### Section 7.0: Change the User Code

The user's security code is used to disarm the alarm system. It is also needed when receiving and calling the alarm system from a remote location. Your security code should be a private four-digit number that is not easily guessed.

CHANGE USER CODE  
Default Code: 1234

\* → ? ? ? ? # → 1 # →

Press \* for 3-Sec    ?'s= Enter Installer Code (Default= 9876), followed by #    Code Menu

2 # → N N N N # → Exit Exit

Change Code    N's= New User Code, followed by #    Press (Exit) 2 times.

## THEIR MANUAL



Poorly Translated English...  
Makes little to no sense!!!

### 4.3.2 setting password

In this system, there are two password: system password and user password, users can use user password to conduct arm/disarm on the keyboard or remote access by telephone(mobile). we suggest you to change it as your private one, system password used to set the system.

★ Modify user password: For example: change the old user password "1111" to new one "9876". Click "\*" enter system password, enter "18" enter old user password [4-digit], enter new user password (4-digit) enter new user password again (4-digit), click "\*"

[1]administrative setting  
[2]password setting  
Press back key to back to previous menu.

Please enter new four-digit user password. Press back key to exist. press confirm key to save.