

USER MANUAL

ELECTRIC FIREPLACE

MODEL NO: SUBURBS TS17Q

IMPORTANT SAFEGUARDS


READ ALL INSTRUCTIONS BEFORE USE.

WARNING!

FAILURE TO FOLLOW INSTRUCTIONS MAY
LEAD TO DAMAGE OF THE MACHINE OR
PERSONAL INJURY.

RETAIN THIS MANUAL FOR
FUTURE REFERENCE

TURBRO

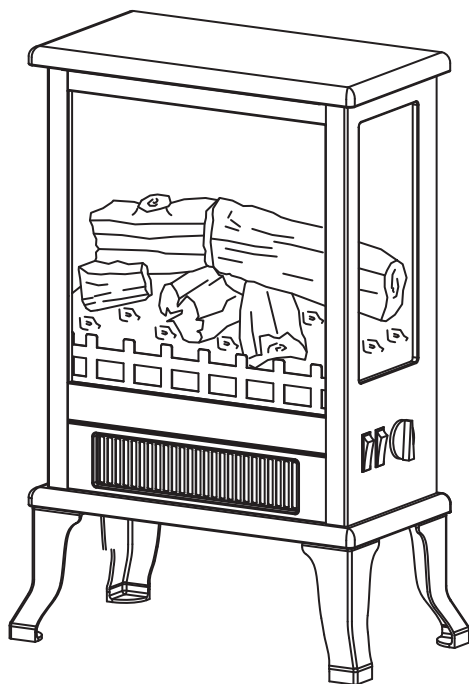

Contents

Contents

Safety Information

Pre-Installation

Installation

Operation

Maintenance

FCC / IC Information

Troubleshooting

Warranty

01

02

04

06

07

08

08

09

10

 **WARNING**

Any attempt to disassemble or modify the product may cause damage.

When using this fireplace for the first time, or after a long period of storage, let the fireplace run for at least 15 minutes with the thermostat set at “maximum” to remove the “new product” smell. This is because the fireplace absorbs moisture, creating an odor similar to that of old leather.

Safety Information

Please read all instructions before attempting to assemble, operate or install the product.

- Do not use this fireplace with missing, damaged, or broken legs.
- Do not use outdoors.
- This fireplace is not intended for use in bathrooms, laundry areas, and similar indoor locations. Do not place this appliance where it may fall into a bathtub or other water containers.
- This appliance is hot when in use. To avoid burns, do not touch hot air outlet with bare skin. If necessary, use handles when moving the fireplace. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes and curtains at least 3 ft. (914 mm) from the appliance.
- Do not use this fireplace in elevated locations, such as on shelves, raised platforms, etc.
- Do not run the cord under carpeting. Do not cover the cord with throw rugs, runners and the like. Arrange the cord away from high traffic areas so that they will not be tripped over.
- Extreme caution is necessary when the fireplace is used by or near children or invalids and whenever the fireplace is left operating unattended.
- Do not operate the fireplace with a damaged cord or plug or after the appliance malfunctions, or is damaged.
- Any repairs to this appliance should be carried out by a qualified service person.
- Under no circumstances should this appliance be modified.
- Connect to properly grounded outlets only.
- Always plug the fireplace directly into a wall outlet/receptacle. An extension cord or relocatable power tap, (outlet/power strip), should never be used.
- This appliance, when installed, must be electrically grounded in accordance with local codes (For Canada: CSA C22.1 Canadian Electrical codes, For USA: National Electric Code, ANSI/NFPA No.70).
- To disconnect this appliance, turn the fireplace off, then remove the plug from the outlet.
- Always unplug the fireplace if you do not plan to use it for a long period of time.
- Do not insert allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire, or damage to the appliance.
- To prevent possible fires, do not block air intakes or exhausts in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- The fireplace has hot, sparking, and arcing parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored. This appliance should not be used as a drying rack for clothing.
- Use this appliance only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or personal injury.

Safety Information

**DANGER****ELECTRICAL SAFETY**
(High Voltage Appliance)

ELECTRICAL CONNECTION



A 15-Amp, 120-Volt, 60 Hz circuit with a properly grounded outlet is required. Preferably, the item will be on a dedicated circuit. Having other appliances on the same circuit may cause the circuit breaker to trip or the fuse to blow when the fireplace is in operation. The unit comes standard with a 6 ft. (1.8 m) long three wire cord, which can be found on the right side of the appliance.



Electrical outlet wiring must comply with local building codes and other applicable regulations to reduce the risk of fire, electrical shock and personal injury.






Do not use this item if any part of it has been under water. Immediately call a qualified service technician to inspect the item and replace any part of the electrical system which has been under water.

POLARIZED PLUG


This product is equipped with a polarized plug (one prong is wider than the other). For your safety, please insert the plug correctly. If you are unable to insert the plug into the electrical outlet, try reversing the plug. If the plug still does not fit, contact a qualified electrician.

Always plug the unit into a wall outlet/receptacle. An extension cord or relocatable power tap, (outlet/power strip), should never be used.

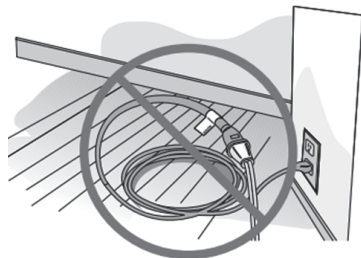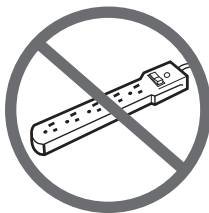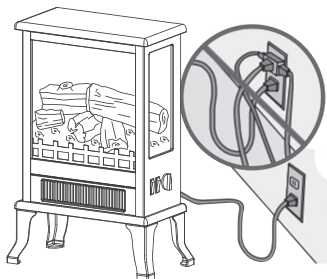

Pre-Installation

FIREPLACE DIMENSIONS

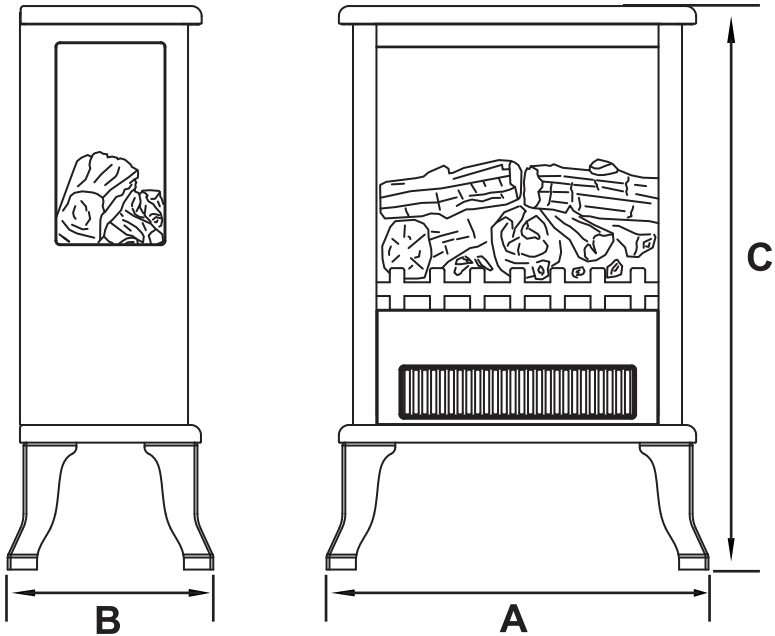

A 330 mm / 13 in.

B 178 mm / 7 in.


C 483 mm / 19 in.

Technical Specifications

Power Supply	110-120V / 60Hz
Rated Current	13.6A
Rated Power	1500W / 5120BTU
Heating Element	Infrared Quartz Tube
Noise Level	≤ 42dBA
Lighting Effect	LED

Pre-Installation

TOOLS REQUIRED




**Phillips
screwdriver**
(not included)

Tips:
Recommend to use a 6-8inch long screwdriver which can help you finish the installation quickly.

Open the unit and check carefully for visible damage. If you have any problems with installation, operation, missing parts, or damage, please contact the TURBRO Customer Service Team. DO NOT dispose of packaging until you are satisfied with your fireplace. Contact TURBRO Customer Service Team before returning the unit.

E-mail: support@turbro.com or **Call:** (323) 438-3334

PACKAGE CONTENTS

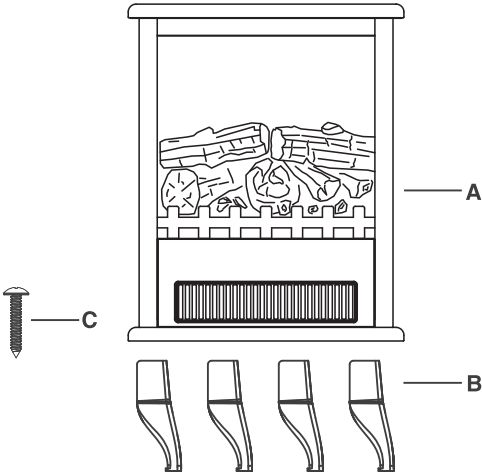

Part	Description	Quantity
A	Electric Fireplace	1
B	Leg	4
C	Screw	8

Installation

The fireplace should be located in an area:

- Out of direct sunlight
- Not susceptible to moisture
- Away from uninsulated outside wall



WARNING

- The Fireplace is heavy and should be assembled near its desired location.
- It is recommended that two people move the assembled Fireplace to prevent injury.




WARNING

- Do not install the unit on shelves, raised platforms, beds, blankets, pillows etc.
Keep combustible materials such as furniture, bedding, papers, clothes and curtains at least 3 ft. (914 mm) from the fireplace.

ASSEMBLY INSTRUCTIONS

1. Lay the fireplace (A) upside down on a padded surface with underside accessible.
2. Align the leg (B) with the pre-drilled holes on the fireplace. Each leg needs to be fixed with 2 screws (C).
3. Insert one screw first and just tight it into 1/3 depth making it a little loose for easily align with another hole.
4. Insert other screws, and then tighten all the screws securely for each leg

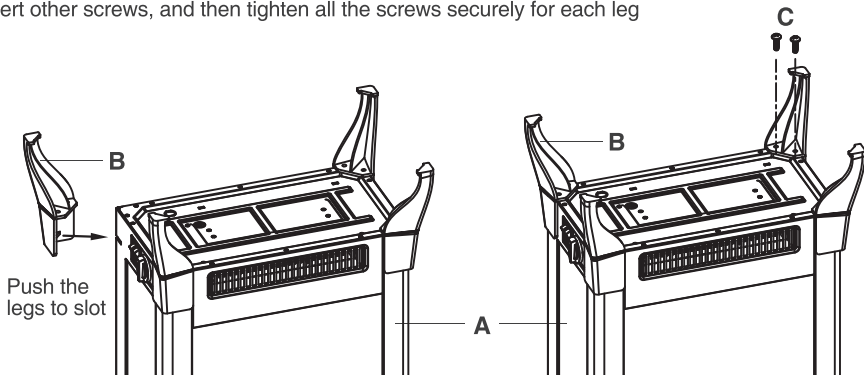




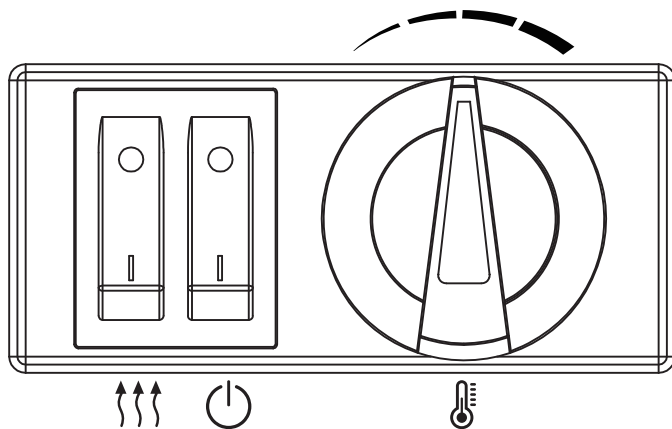
CAUTION

- Make sure that the unit is installed so that the power cord is not compressed against or caught on the Fireplace and that it has an unobstructed path to the grounded outlet.

Operation

USING THE CONTROL PANEL

- The control panel is located on the right side of the fireplace (when facing the fireplace).
- **Main Power Switch:** The power switch  supplies power to all of the functions of the fireplace. This switch must be in the ON position for any functions to work.
- **Flame Effect:** Toggle the power switch  ON. The power indicator light will glow. The flame effect will be visible through the front glass.
- **Temperature Knob:** Toggle the temperature switch  ON, the temperature control knob regulates the temperature level of the room. The further the knob is rotated clockwise, the higher the temperature setting. Turning the knob counterclockwise will lower the temperature setting. Use this function to help regulate the ambient temperature level.
- **Temperature Limiting Control:** This fireplace is equipped with a temperature limiting control. Should the fireplace reach an unsafe temperature because of misuse or accident, the fireplace will automatically turn off. To reset: Unplug the power cord from the outlet. Wait for 5 minutes. With the power switch in the OFF position, plug the power cord back into the outlet.



Maintenance

- Always turn the fireplace OFF and unplug the power cord from the outlet before cleaning.
- Use a vacuum or duster to remove dust and dirt from the fireplace and vent areas.
- To keep luster, clean with a soft, slightly damp cloth and buff with a dry cloth.
- Never use abrasive cleansers, liquid sprays, or any cleaner that could scratch the surface of the appliance.

FCC / IC Information

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Modifications not approved by the party responsible for compliance could void user's authority to operate the equipment.

This Class B digital apparatus complies with Canadian ICES-003.

Troubleshooting



WARNING

Disconnect power before servicing.

Problem	Possible Cause	Corrective Action
The fireplace does not operate.	<ul style="list-style-type: none">• The fireplace is not plugged in.• A circuit breaker is tripped or a fuse blown.• The ON/OFF switch is defective.• There is loose wiring.	<ul style="list-style-type: none">• Make sure the fireplace is plugged in to a standard 120V outlet.• Check additional appliances on the circuit; ideally the fireplace should be on a dedicated 15-amp circuit.• Contact customer service.• Contact customer service.
The power light is ON but the flame effect is not visible.	<ul style="list-style-type: none">• The fireplace is not operating correctly.	<ul style="list-style-type: none">• Refer to the operating instructions.• Contact customer service.
The fireplace is not operating.	<ul style="list-style-type: none">• The fireplace is not operating correctly.• The fireplace switch is defective.• The fireplace assembly is defective.• There is loose wiring.• The vents are dirty or clogged.	<ul style="list-style-type: none">• Refer to the operating instructions.• Contact customer service.• Contact customer service.• Contact customer service.• Unplug the unit. clear the vent area of dust and debris. wait for ten minutes, plug the unit in again and turn on the fireplace.
There is excessive noise when the fireplace is operating.	<ul style="list-style-type: none">• The fan is defective.• The fireplace assembly is defective.	<ul style="list-style-type: none">• Contact customer service.• Contact customer service.

Warranty

1-YEAR WARRANTY

TURBRO provides 1-year limited warranty for TURBRO Suburbs Electric Fireplace, from the date of purchase, subject to the following conditions and limitations.

What is covered?

- Any alteration misuse of the product will nullify this warranty
- This warranty is non-transferrable, which is effective for the original buyer from the authorized seller only.
- This warranty is limited to the repair or replacement of part(s) proved to be defective in material or workmanship, after said defect is confirmed by the manufacturer's inspection.

The manufacturer may, at its discretion, fully discharge all obligations with respect to this warranty by refunding the wholesale price of the defective part(s).

What's NOT covered?

- Damage caused by the owner when attempting to fix or alter the product themselves.
- Damage caused by misuse, abuse, neglect, alterations, or unauthorized repair.
- Natural depreciation.

How to request warranty services?

To obtain the benefit of this warranty please leave a message online (<https://www.turbro.com/pages/contact-us>), or send an email to support@turbro.com. Our customer service will address your issue within 24 hours.

What will TURBRO do?

- Repair the item.
- Replace the item if not repairable.
- Refund the item under certain circumstances.

ALL EXPRESSED AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.



CAUTION

- This product can expose you to toxic chemicals including Di (2-ethylhexyl) phthalate (DEHP), which may cause cancer or harm developmental growth.
- Wash hands after installation.

For more information go to www.p65Warnings.ca.gov




TURBRO



© Katmai Technology Limited

 support@turbro.com

 www.turbro.com

 [\(323\) 438-3334](tel:(323)438-3334)

