


Brand: JUSTKIDZ Vendor: Fun World (Asia) Ltd.

KSN / UPC code / Item description: 0-02407957-6 / 4897021203062 / 37 Keys Keyboard

Size: 140mm X 200mm Date: Jun 11, 2013

Back

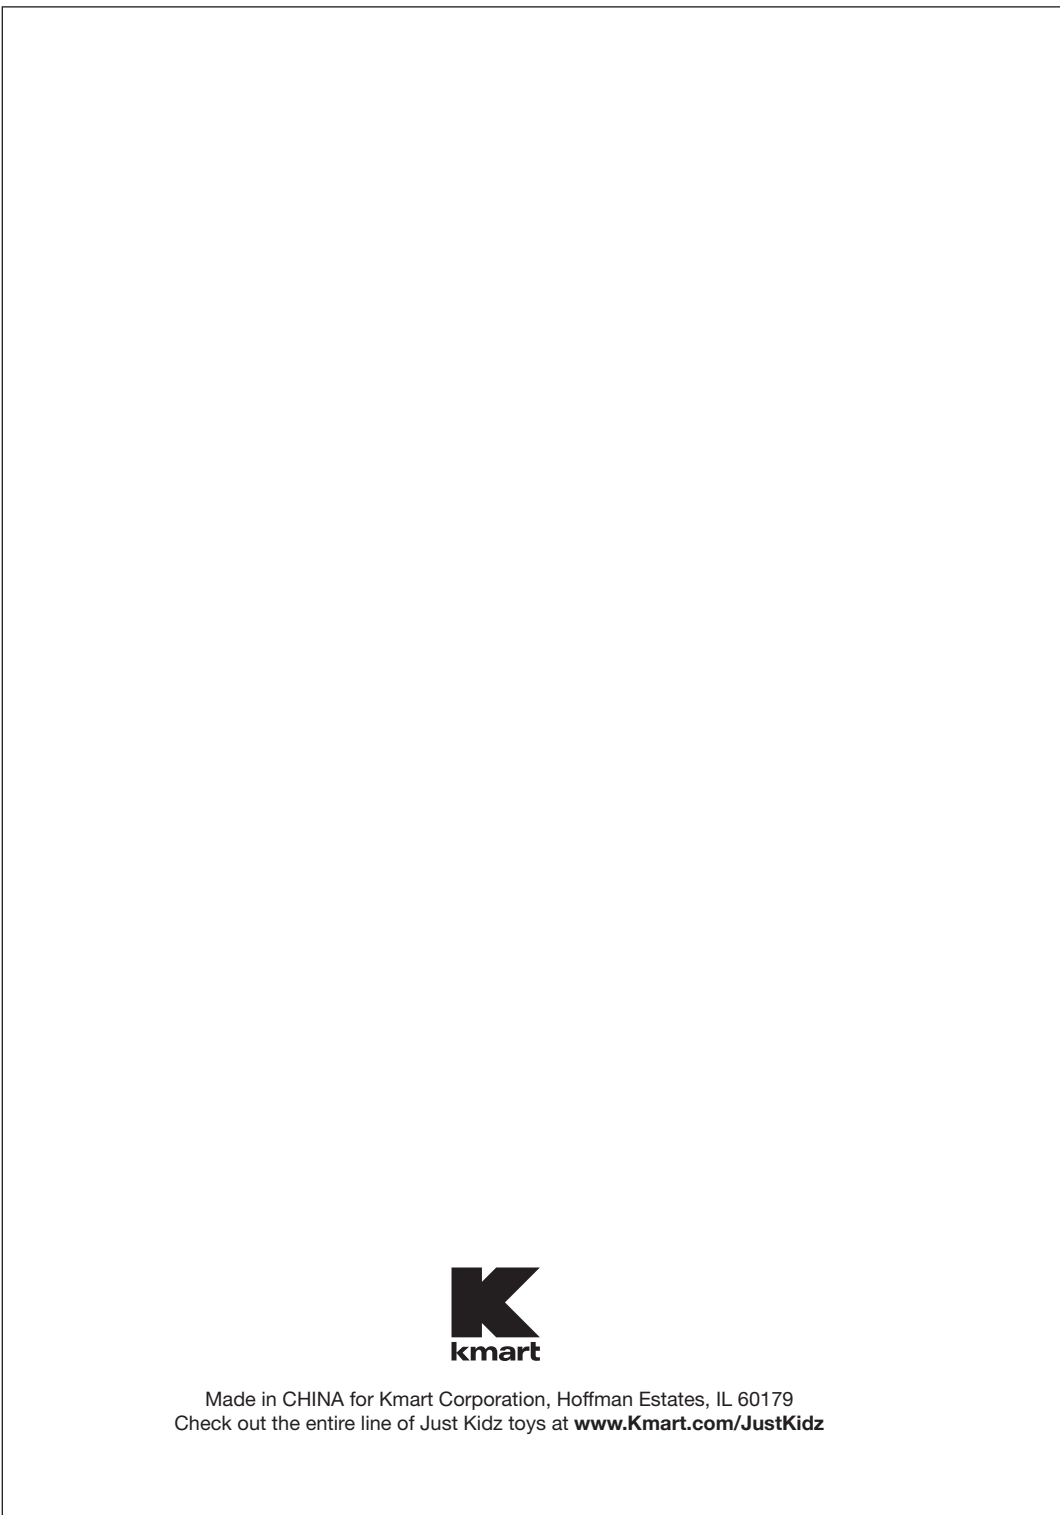

JUST KIDZ™

Kmart

Made in CHINA for Kmart Corporation, Hoffman Estates, IL 60179
Check out the entire line of Just Kidz toys at www.Kmart.com/JustKidz

Front



OWNER'S MANUAL


37 Keys Keyboard

CAUTION: All packing materials such as tape, plastic bags, plastic sheets, wire ties and tags are not part of the toy and should be discarded for children's safety.

Product code: 0-02407957-6
UPC code: 4897021203062

Date of purchase: ____/ ____/ ____

in-side 1

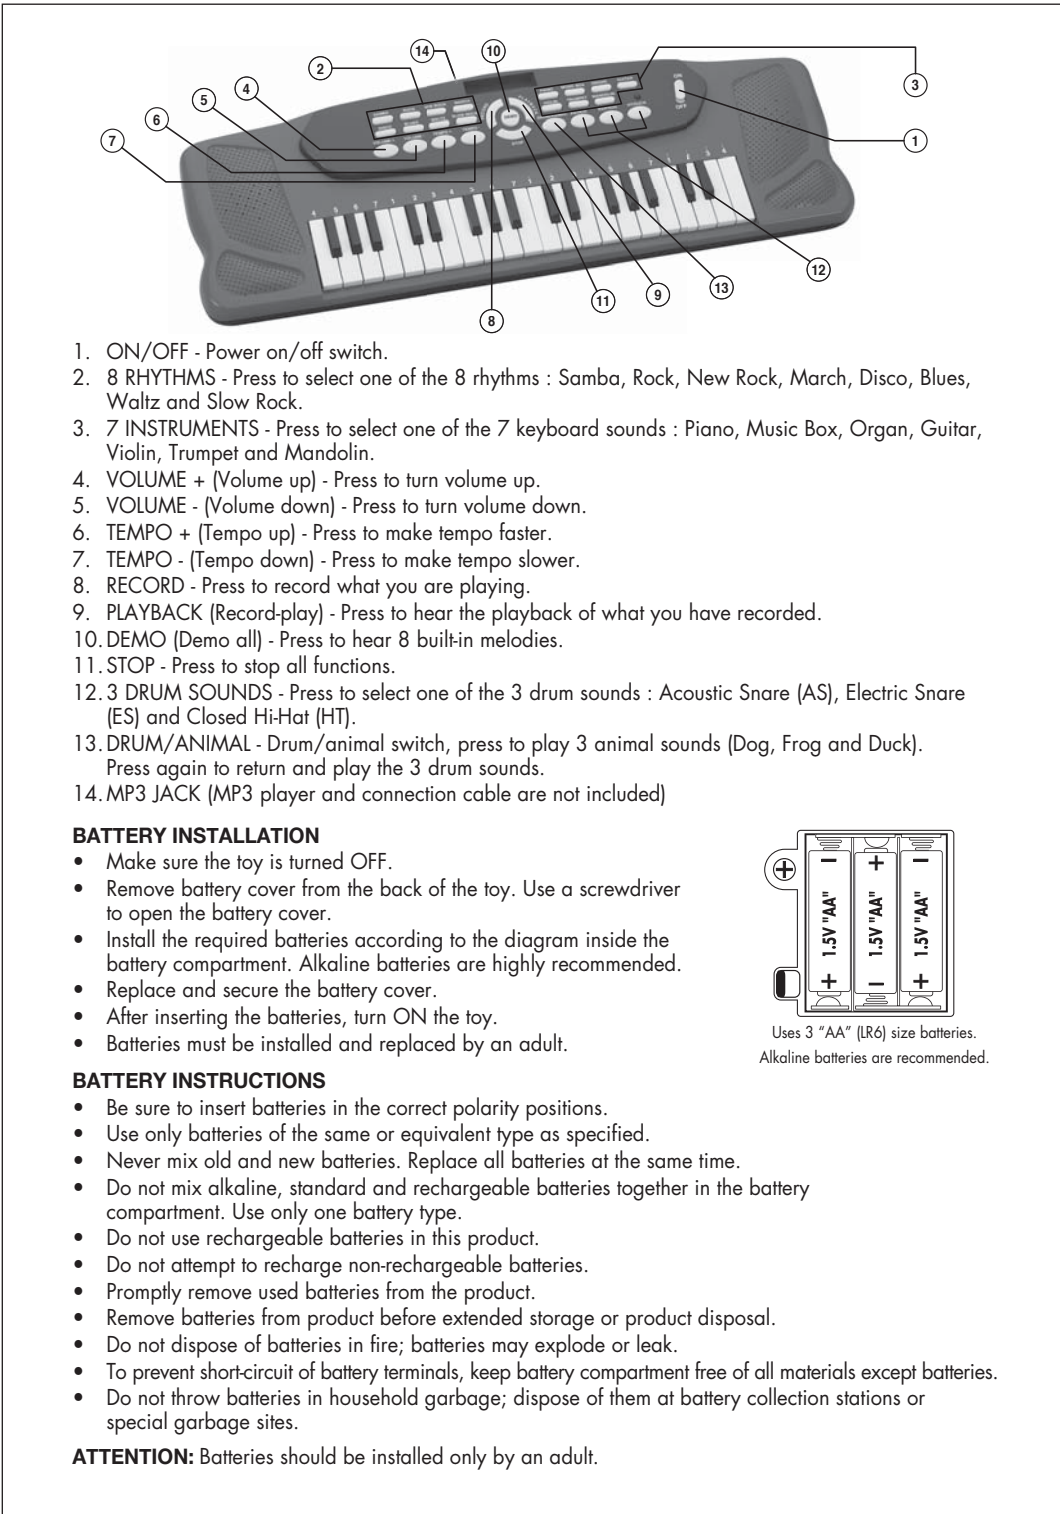

- ON/OFF - Power on/off switch.
- 8 RHYTHMS - Press to select one of the 8 rhythms : Samba, Rock, New Rock, March, Disco, Blues, Waltz and Slow Rock.
- 7 INSTRUMENTS - Press to select one of the 7 keyboard sounds : Piano, Music Box, Organ, Guitar, Violin, Trumpet and Mandolin.
- VOLUME + (Volume up) - Press to turn volume up.
- VOLUME - (Volume down) - Press to turn volume down.
- TEMPO + (Tempo up) - Press to make tempo faster.
- TEMPO - (Tempo down) - Press to make tempo slower.
- RECORD - Press to record what you are playing.
- PLAYBACK (Record-play) - Press to hear the playback of what you have recorded.
- DEMO (Demo all) - Press to hear 8 built-in melodies.
- STOP - Press to stop all functions.
- 3 DRUM SOUNDS - Press to select one of the 3 drum sounds : Acoustic Snare (AS), Electric Snare (ES) and Closed Hi-Hat (HT).
- DRUM/ANIMAL - Drum/animal switch, press to play 3 animal sounds (Dog, Frog and Duck). Press again to return and play the 3 drum sounds.
- MP3 JACK (MP3 player and connection cable are not included)

BATTERY INSTALLATION

- Make sure the toy is turned OFF.
- Remove battery cover from the back of the toy. Use a screwdriver to open the battery cover.
- Install the required batteries according to the diagram inside the battery compartment. Alkaline batteries are highly recommended.
- Replace and secure the battery cover.
- After inserting the batteries, turn ON the toy.
- Batteries must be installed and replaced by an adult.

BATTERY INSTRUCTIONS

- Be sure to insert batteries in the correct polarity positions.
- Use only batteries of the same or equivalent type as specified.
- Never mix old and new batteries. Replace all batteries at the same time.
- Do not mix alkaline, standard and rechargeable batteries together in the battery compartment. Use only one battery type.
- Do not use rechargeable batteries in this product.
- Do not attempt to recharge non-rechargeable batteries.
- Promptly remove used batteries from the product.
- Remove batteries from product before extended storage or product disposal.
- Do not dispose of batteries in fire; batteries may explode or leak.
- To prevent short-circuit of battery terminals, keep battery compartment free of all materials except batteries.
- Do not throw batteries in household garbage; dispose of them at battery collection stations or special garbage sites.


ATTENTION: Batteries should be installed only by an adult.

in-side 2

- ENCENDIDO/APAGADO - Interruptor de encendido/apagado.
- 8 RITMOS - Presione para seleccionar uno de los 8 ritmos : Samba, Rock, Nuevo Rock, Marcha, Disco, Blues, Vals y Rock Lento.
- 7 INSTRUMENTOS - Presione para seleccionar uno de los 7 sonidos del teclado : Piano, Caja de Musica, Órgano, Guitarra, Violín, Trompeta y Mandolina.
- VOLUMEN + (Subir volumen) - Presione para subir el volumen.
- VOLUMEN - (Bajar volumen) - Presione para bajar el volumen.
- TEMPO + (Aumentar tempo) - Presione para que el tempo sea más rápido.
- TEMPO - (Disminuir tempo) - Presione para que el tempo sea más lento.
- GRABAR - Presione para grabar lo que está tocando.
- REPRODUCIR (Grabar-reproducir) - Presione para escuchar la reproducción de lo que grabó.
- DEMO (Demostración de todo) - Presione para escuchar las 8 melodías incluidas.
- DETENER - Presione para detener todas las funciones.
- 3 SONIDOS DE TAMBOR - Presione para seleccionar uno de los 3 sonidos de tambor : Caja Acústica (AS), Caja Eléctrica (ES) y Contratiempo Cerrado (Hi-Hat/HT).
- TAMBOR/ANIMAL - Al presionar el interruptor de tambor/animal se reproducen 3 sonidos de animales (Perro, Rana y Pato). Presione de nuevo para volver a reproducir los tres sonidos del tambor.
- CONEXIÓN DE MP3 (El reproductor de MP3 y el cable de conexión no vienen incluidos)

INSTALACIÓN DE LAS BATERÍAS

- Asegúrese de que el juguete esté APAGADO.
- Quite la tapa de las baterías de la parte trasera del juguete. Utilice un destornillador para abrir la tapa.
- Coloque las baterías necesarias de acuerdo con el dibujo que viene dentro del compartimento de las baterías. Se recomienda mucho el uso de baterías alcalinas.
- Reemplace y asegure la tapa de las baterías.
- Después de insertar las baterías, ENCIENDA el juguete.
- Las baterías las debe colocar y reemplazar un adulto.

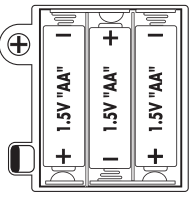

Utiliza 3 pilas "AA" (LR6).
Se recomienda el uso de pilas alcalinas.

INSTRUCCIONES PARA LAS BATERÍAS

- Asegúrese de insertar las baterías en las posiciones correctas de polaridad.
- Utilice solo baterías del mismo tipo o equivalente al que se especifica.
- Nunca mezcle baterías viejas con baterías nuevas. Reemplace todas las baterías al mismo tiempo.
- No mezcle baterías alcalinas, normales y recargables juntas en el compartimento. Utilice solo un tipo de batería.
- No utilice baterías recargables en este producto.
- No intente recargar baterías no recargables.
- Retire de inmediato las baterías usadas del producto.
- Retire las baterías del producto antes de guardarlo por un tiempo prolongado o al desecharlo.
- No arroje las baterías al fuego, ya que pueden explotar o derramar líquido.
- Para evitar un corto circuito de las terminales de las baterías, no introduzca nada en el compartimento, excepto las baterías.
- No tire las baterías en la basura de su casa, entréguelas en cualquier punto de recolección de baterías o en sitios para desechos especiales.

ATENCIÓN: Las baterías las debe instalar solo un adulto.