IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING
KEEP AWAY FROM WATER

DANGER – Any hair dryer is electrically live even when the switch is off. To reduce the risk of death or injury by electric shock:

1. Always "unplug it" immediately after using.

2. Do not use while bathing.

3. Do not place or store appliance where it can fall or be pulled into a tub or sink.

4. Do not place in, or drop into, water or other liquid.

5. If an appliance falls into water, "unplug it" immediately. **Do not reach into the water.**

WARNING – To reduce the risk of burns, electrocution, fire, or injury to persons:

1. This appliance should never be left unattended when plugged in. Do not pull, twist, or wrap line cord around dryer.

2. This appliance should not be used by, on, or near children or individuals with certain disabilities.

3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.

4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped, damaged, or dropped into water. Return the appliance to a Conair Service Center for examination and repair.

5. Keep the cord away from heated surfaces. Do not pull, twist, or wrap the cord around the appliance.

6. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.

7. Never use while sleeping.

8. Never drop or insert any object into any opening.

9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.

10. Do not use an extension cord with this appliance.

11. Do not direct hot air toward eyes or other heat-sensitive areas.

12. Attachments may be hot during use. Allow them to cool before handling.

13. Do not place appliance on any surface while it is operating.

14. While using the appliance, keep your hair away from the air inlets.

15. Do not use with voltage converter.

For a dual voltage hair dryer:

16. Be sure dual voltage selector is in correct voltage position before operating. Before plugging in, read the information about dual voltage contained in the instruction section of this manual.

17. This appliance was set at the factory to operate at 125 volts. Refer to Additional Information section of this manual for conversion to 250 volt operation.

SAVE THESE INSTRUCTIONS
OPERATING INSTRUCTIONS

This appliance is intended for household use only. Use on Alternating Current (50/60 hertz) only. Standard Dryers are designed to operate at 110 to 125 volts A.C. or 220 to 250 volts A.C.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **Do not attempt to defeat this safety feature.**

FOR DUAL VOLTAGE DRYERS

For use in the U.S.A., the voltage selector switch should be placed in the 125 position. For use in several countries overseas, the voltage selector may need to be placed in the 250 position. Confirm the voltage available at each overseas location before using the appliance. For connection to a 250 volt supply, use an attachment plug adapter of the proper configuration for the power supply receptacle.

FOR 110-125 VOLT OPERATION

Flick the dual voltage switch to the 125 position. In this position, the dryer operates on all available heat and speed settings.

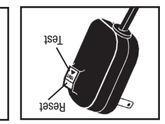

FOR 220-250 VOLT OPERATION

First put the speed switch to Low and the heat switch to Hot. Flick the dual-voltage switch to the 250 position. At 220-250V while the speed switch is set at low and the heat switch is set to hot, the dryer operates only at high speed with high heat. Do not attempt to operate/change the setting on the speed and heat switches or change to 125 position when operating on 220-250V. The switches must be set and remain in the Low (on speed switch), hot (on heat switch) and 250 positions. A plug adapter may be necessary in certain countries.

IMPORTANT

CHECK ALCI SAFETY FEATURE EVERY TIME YOU USE DRYER.

This hair dryer is equipped with an Appliance Leakage Circuit Interrupter (ALCI), a safety feature that renders it inoperable under some abnormal conditions, such as immersion in water.

To make sure the ALCI is functioning properly, perform the following test. The purpose of this test is to allow you to make sure the exclusive water sensing system (ALCI) is working.

1. Plug in the appliance and press test button on plug (See appropriate diagram below).
2. The appliance will stop working. There will be an audible click and reset button will pop out.
3. To reset ALCI with a reset button, unit should be unplugged. Then push reset button in, and reinsert plug into outlet.

4. If ALCI is not functioning properly, return appliance to nearest service center.

5. It is important that if immersion occurs, this unit be brought to a service center. Do not try to reset.

6. Be sure to repeat test every time you use the unit to confirm ALCI is operational.

Should the appliance go off and the reset button pop up during use, this could indicate a malfunction in the unit. Remove plug from outlet and allow the appliance to cool. Reinsert plug into outlet.

If the appliance should then function normally, the appliance is equipped with an Appliance Leakage Circuit Interrupter (ALCI), a safety feature that renders it inoperable under some abnormal conditions, such as immersion in water.

To make sure the ALCI is functioning properly, perform the following test. The purpose of this test is to allow you to make sure the exclusive water sensing system (ALCI) is working.

1. Plug in the appliance and press test button on plug (See appropriate diagram below).
2. The appliance will stop working. There will be an audible click and reset button will pop out.
3. To reset ALCI with a reset button, unit should be unplugged. Then push reset button in, and reinsert plug into outlet.
4. For quick touch ups between shampoos, dampen hair with a mist of water before styling with the dryer.

DRYING BASICS

1. Shampoo and condition hair with the products of your choice. Rinse thoroughly. Towel blot hair to remove excess moisture. Section hair. Using the dryer along with your styling brush, direct hot air through a section of hair at a time. Move dryer steadily across each section so that the hot air passes through hair. Direct air flow at hair, not scalp.
2. Keep dryer's air intake vents unobstructed and free from hair while drying.
3. To avoid over drying, do not concentrate heat on any one section for any length of time. Keep dryer moving as you style.

SUPER STYLING GUIDE

Your best looks begin with a good haircut that's well maintained. Always treat hair right with superior quality shampoos, conditioners, and finishing products.

MAKING WAVES

Tousled, natural-looking waves are easily created by grasping hair at the roots and scrunching between fingertips while drying.



BODY & VOLUME

To create extra volume, turn head upside down while drying. Position the air flow toward the roots for maximum lift. When hair is dry, toss head back and brush hair into place.

STRAIGHTENING

Work with hair in sections when creating a super straight look. Using a large round brush (approximately 2" in diameter), hold hair taut in each section and bend ends slightly under as you dry.

4. Dual Voltage
for world-wide travel.

3. Folding Handle
for easy storage.

2. 2 Heats/2 Speeds
for styling versatility.

1.Power
1600 watts of drying power.

FEATURES

The Conair® 1600 watt mini turbo folding dryer – the ultimate travel companion. Equipped with dual voltage for worldwide travel.

GET TO KNOW YOUR DRYER

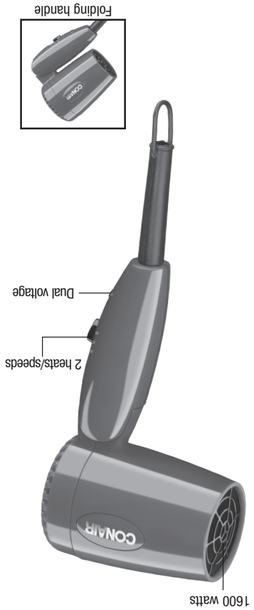

FAMILIARÍCESE CON SU SECADOR

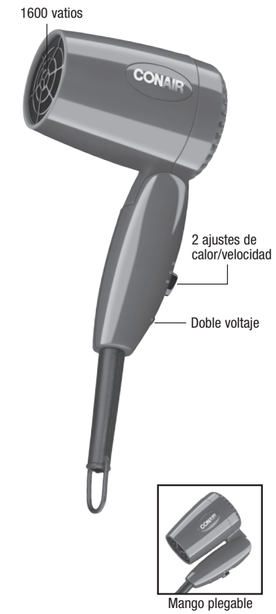

ONDULADO

Para crear ondas despeinadas de apariencia natural, estruje las raíces con los dedos mientras seca el cabello.

El secador plegable mini turbo de 1600 vatios de Conair® es ideal para llevar de viaje. Tiene doble voltaje, para uso en el mundo entero.

CARACTERÍSTICAS

1. Potencia
1600 vatios de potencia

2. 2 ajustes de calor/2 velocidades
para mayor versatilidad

3. Mango plegable
para facilitar el almacenaje

4. Doble voltaje
para uso en el mundo entero

FUNDAMENTOS DEL SECADO

1. Lave y acondicione su cabello con los productos deseados. Enjuáguelo bien. Séquelo con una toalla para eliminar el exceso de agua. Divida el cabello en secciones. Seque el cabello usando simultáneamente el secador y un cepillo. Coloque el cepillo debajo de cada sección de cabello y dirija el flujo de aire caliente hacia la parte superior del cabello. Mueva el cepillo y el secador lenta y simultáneamente hasta las puntas. Dirija el flujo de aire hacia el cabello, no hacia el cuero cabelludo.
2. Mantenga las entradas de aire del aparato sin obstrucciones y libres de cabello.
3. Para no lastimar el cabello, no concentre el flujo de aire en una sección solamente. Mueva el secador constantemente.
4. Para realizar retoques rápidos entre lavados, rocíe un poco de agua sobre el cabello antes de secarlo.

CUERPO & VOLUMEN

Para dar más volumen al cabello, incline la cabeza hacia delante durante el secado. Dirija el flujo de aire hacia las raíces para obtener más cuerpo. Cuando el cabello esté seco, péinese en la forma deseada.

ALISADO

Trabaje sección por sección. Para alisar el cabello, estire cada sección con un cepillo redondo grande de aproximadamente 5 cm de diámetro. Doble un poco las puntas hacia abajo mientras seca.

INFORMACIÓN ADICIONAL PARA LOS APARATOS DE DOBLE VOLTAJE

Ponga el selector de voltaje en la posición "125" para uso en los Estados. Póngalo en la posición "250" para uso en países con suministro eléctrico de 220 a 250 voltios. Averigüe el voltaje antes de enchufar el aparato. Puede que sea necesario utilizar un adaptador de enchufe (no incluido) para conectar el aparato a red de 250V.

OPERACIÓN 110-125 VOLTIOS

Ponga el selector de voltaje en la posición "125". El aparato funcionará con todos los ajustes de calor y de velocidad.

OPERACIÓN 220-250 VOLTIOS

Primero, ponga el ajuste de velocidad en LOW y el control de calor en HOT. Ponga el selector de voltaje en la posición "250". El aparato funcionará con calor y velocidad altos únicamente. No cambie la velocidad o la selección de voltaje durante el uso. Deje el ajuste de velocidad en "LOW", el control de calor en "HOT" y el selector de voltaje en "250". Puede que sea necesario utilizar un adaptador de enchufe en ciertos países.

IMPORTANTE

PRUEBE EL CORTACIRCUITO DE SEGURIDAD ANTES DE CADA USO.

Este aparato está dotado de un cortacircuito de seguridad llamado ALCI (Appliance Leakage Circuit Interrupter), que apaga el aparato inmediatamente si éste cayera al agua.

Haga la prueba siguiente para asegurarse que el sistema de detección de agua funcione correctamente:

1. Enchufe el aparato y apriete el botón de prueba (véase el gráfico más abajo).
2. El aparato dejará de funcionar. Se oirá un clic y el botón de reajuste saltará.

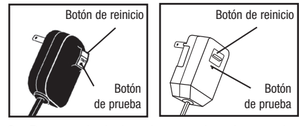

3. Para reajustarlo, desconecte el aparato. Oprima el botón de reajuste y vuelva a conectar el cable.

4. Si el cortacircuito de seguridad no funcionara correctamente, regrese el aparato a un centro de servicio autorizado.

5. Si el aparato cayera al agua, es muy importante que lo mande a un centro de servicio autorizado. No intente reajustarlo.

6. Pruebe el cortacircuito de seguridad antes de cada uso para asegurarse que esté operativo.

Si el secador se apagara y el botón de reajuste saltara durante el uso, esto podría indicar un mal funcionamiento. Si esto ocurriera, desconecte el aparato y permita que enfríe. Conecte el cable al tomacorriente.

El aparato debería funcionar normalmente. Si no fuera el caso, regréselo a un centro de servicio autorizado para que lo revisen y lo reparen.

GUÍA PARA UN SÚPER PEINADO

La mejor apariencia empieza por un recorte de cabello bien mantenido. Siempre cuide su cabello con champúes, acondicionadores y productos de peinado de calidad superior.

GUARDE ESTAS INSTRUCCIONES
INSTRUCCIONES DE OPERACIÓN

Este aparato ha sido diseñado para uso doméstico. Úselo solamente con Corriente Alterna de 110 a 125V (60 Hz) o 220 a 250V (50 Hz).

El cable de este aparato está dotado de una clavija polarizada (una pata es más ancha que otra). Como medida de seguridad, se podrá enchufar de una sola manera en el tomacorriente polarizado. Si no entrara en el tomacorriente, inviértela. Si aún no entrara completamente, comuníquese con un electricista. **No intente ir en contra de esta función de seguridad.**

aberturas de aire durante el uso.

15. No utilice este aparato con un convertidor de voltaje.

Doble voltaje:

16. Asegúrese que el selector de voltaje esté en la posición debida antes de encender el aparato. Lea la información relativa al doble voltaje que se encuentra a continuación antes de enchufar el aparato en el tomacorriente.

17. El selector de voltaje ha sido puesto en la posición "125" por el fabricante, para uso en red de 110/125 voltios. La sección "Información Adicional" de este manual le explicará como ajustarlo para uso en red de 220/250 voltios.

MEDIDAS DE SEGURIDAD IMPORTANTES

Siempre que use aparatos eléctricos, especialmente en la presencia de niños, debe tomar precauciones básicas de seguridad, entre las cuales las siguientes:

LEA TODAS LAS INSTRUCCIONES ANTES DE USARLO
MANTÉNGALO ALEJADO DEL AGUA

PELIGRO – CCualquier aparato enchufado permanece bajo tensión, aunque esté apagado. Para reducir el riesgo de muerte o herida por descarga:

1. Siempre desconecte el aparato inmediatamente después de usarlo.

2. No lo use en el baño o la ducha.

3. No coloque ni guarde el aparato donde pueda caer o ser empujado a una bañera o un lavabo.

4. No coloque el aparato ni lo deje caer al agua u otro líquido.

5. Si el aparato cayera al agua, desconéctelo inmediatamente. **No toque el agua.**

ADVERTENCIA – Para reducir el riesgo de quemaduras, electrocución, incendio o heridas:

1. Nunca deje el aparato desatendido mientras esté conectado. No jale, retuerza ni enrolle el cable alrededor del aparato.

2. Este aparato no debería ser usado por, sobre o cerca de niños o personas con alguna discapacidad.

3. Utilice este aparato únicamente con el propósito para el cual fue diseñado y solamente según las instrucciones. Sólo use accesorios recomendados por el fabricante.

4. No opere este aparato si el cordón o la clavija estuviesen dañados, después de que hubiese funcionado mal o que se hubiese caído o si estuviese dañado. Regrese el aparato a un centro de servicio autorizado para su revisión, reparación o ajuste.

5. Mantenga el cable alejado de superficies calientes. No jale, retuerza ni enrolle el cable alrededor del aparato.

6. Nunca bloquee las aberturas de aire ni coloque el aparato en una superficie blanda, como una cama o un sofá, donde se puedan obstruir. Mantenga las aberturas libres de pelusas, cabellos y elementos similares.

7. Nunca utilice este aparato mientras esté dormido/a o adormilado/a.

8. Nunca deje caer ni inserte un objeto en ninguna de las aberturas.

9. No lo utilice en exteriores, ni lo haga funcionar donde se estén usando productos en aerosol (spray) o donde se esté administrando oxígeno.

10. No utilice una extensión con este aparato.

11. No dirija el aire caliente hacia los ojos u otras áreas sensibles al calor.

12. Los accesorios pueden volverse muy calientes. Permita que enfríen antes de manipularlos.

13. No coloque el aparato en ninguna superficie mientras esté funcionando.

14. Mantenga su cabello alejado de las

ALTO

Este mensaje sobre los...

GROUND
FAULT
CIRCUIT
INTERRUPTERS

(Interruptores de circuito contra fallas a tierra)

...¡Puede salvar una vida!

¡SI DEBE USAR EL SECADOR EN EL CUARTO DE BAÑO, INSTALE UN GFCI* AHORA!
Su electricista le puede ayudar a decidir cual sistema escoger – un sistema amovible que se conecta al tomacorriente o un sistema permanente que él instalará. El Código Nacional de Electricidad ahora exige que todos los enchufes ubicados en los cuartos de baño, los garajes y las partes exteriores de las casas nuevas sean equipados con GFCI.

¿POR QUÉ NECESITA UN GFCI? La electricidad y el agua no deben juntarse. **Si su aparato cayera al agua mientras esté conectado, una descarga eléctrica podría causar su muerte…aunque el interruptor esté apagado.** Un fusible o un interruptor de circuito regular no le protegerá en esta situación. Un GFCI ofrece más protección.

¡Un GFCI puede salvar su vida! ¡Comparado con ella, el precio es bajo! ¡No espere… instale uno ahora mismo!

* Un GFCI es un dispositivo sensible que reacciona inmediatamente a una pequeña pérdida de corriente, deteniendo el flujo de electricidad.

INFORMACIÓN ADICIONAL PARA LOS SECADORES DE DOBLE VOLTAJE

Operación 110-125 voltios
Ponga el selector de voltaje en la posición "125". El aparato funcionará con todos los ajustes de calor y de velocidad.

Operación 220-250 voltios
Ponga el interruptor HI-LO en la posición LO. Ponga el selector de voltaje en la posición "250". El aparato funcionará con calor y velocidad altos únicamente. No cambie la velocidad o la selección de voltaje durante el uso. Deje el calor y la velocidad en "LO" y el selector de voltaje en "250". Puede que sea necesario utilizar un adaptador de enchufe en ciertos países.

INSTRUCCIONES DE MANTENIMIENTO

Su secador casi no necesita mantenimiento. No necesita lubricación. Para que funcione correctamente, debe mantenerlo limpio. Cuando sea necesario limpiarlo, desconéctelo, permita que enfríe y saque el polvo y las pelusas de las aberturas de aire con un cepillo pequeño o el cepillo accesorio de una aspiradora. La superficie exterior del secador sólo se debe limpiar con un paño limpio.

El secador se recalentará si las aberturas de aire estuvieran bloqueadas u obstruidas. Si esto ocurriera, un sistema de seguridad apagará el secador o cortará la temperatura automáticamente para evitar daños al aparato o heridas. Si esto sucediera, desenchufe el aparato y permita que enfríe durante 10 a 15 minutos antes de encenderlo de nuevo. Asegúrese que las ventilaciones de aire estén limpias.

PRECAUCIÓN

NUNCA jale, retuerza ni doble mucho el cable. Nunca lo enrolle con fuerza alrededor del aparato. Esto podría dañar la junta flexible que lo conecta al aparato, produciendo su ruptura o un cortocircuito. Inspeccione el cable con frecuencia para asegurarse que no esté dañado. **Deje de usar el aparato inmediatamente si el cable parece dañado o si el aparato dejara de funcionar o funcionara de manera intermitente.**

Si el cable o el aparato estuviesen dañados o si el aparato no funcionase correctamente, regréselo a un centro de servicio autorizado. No trate de repararlo.

ALMACENAJE – Importante
Después de usar el aparato, desconéctelo, permita que enfríe y guárdelo en un lugar seco y seguro, fuera del alcance de los niños. **No enrolle el cable alrededor del aparato.** Permita que el cable cuelgue o que la junta que lo conecta al secador esté suelta y recta.

GARANTÍA LIMITADA DE DOS AÑOS

Conair reparará o remplazará (a su opción) su aparato sin cargo por un período de 24 meses a partir de la fecha de compra si presentara defectos de materiales o fabricación.

Para obtener servicio técnico bajo esta garantía, regrese su aparato al Centro de Servicio indicado a continuación, junto con su recibo de compra y un cheque o giro postal de $5.00US por gastos de manejo y envío. Los residentes de California sólo necesitan dar una prueba de compra y deben llamar al 1-800-3-CONAIR para recibir instrucciones de envío. En ausencia del recibo de compra, el período de garantía será de 24 meses a partir de la fecha de fabricación.

CUALQUIERA GARANTÍA, OBLIGACIÓN O RESPONSABILIDAD IMPLÍCITAS, INCLUYENDO PERO NO LIMITADAS A LA GARANTÍA IMPLÍCITA DE COMERCIABILIDAD Y APTITUD PARA UN PROPÓSITO ESPECÍFICO, ESTARÁN LIMITADAS POR LOS 24 MESES DE LA PRESENTE GARANTÍA ESCRITA. Algunos Estados no permiten limitaciones sobre la duración de una garantía implícita, de modo que las limitaciones mencionadas pueden no regir para usted.

CONAIR NO SERÁ RESPONSABLE EN NINGÚN CASO POR ALGÚN DAÑO ESPECIAL, INCIDENTAL O CONSECUENTE DEBIDO AL INCUMPLIMIENTO DE ESTA O CUALQUIER OTRA GARANTÍA, EXPRESA O IMPLÍCITA. Algunos Estados no permiten la exclusión o limitación de daños especiales, incidentales o consecuentes, de modo que las limitaciones mencionadas pueden no regir para usted. Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos que varían de un Estado a otro.

Línea Gratis de Asistencia
Llame al: 1-800-3-CONAIR
visítenos en la web en:
http://www.conair.com
para más información sobre los productos de Conair

CENTRO DE SERVICIO:
CONAIR CORPORATION
Service Department
7475 N. Glen Harbor Blvd
Glendale, AZ 85307
©2009 CONAIR CORPORATION
09PD16469

IB-9600

vagabond™

SECADOR COMPACTO

1600 VATIOS

CONAIR®

MODELO **124AK** Instrucciones

This message about...

GROUND
FAULT
CIRCUIT
INTERRUPTERS

...can save a life!

STOP

IF YOU MUST USE YOUR HAIR DRYER IN THE BATHROOM, INSTALL A GFCI* NOW!
Your local electrician can help you decide which type is best for you—a portable unit that plugs into the electrical outlet or a permanent unit installed by your electrician. The National Electrical Code now requires GFCI's in the bathrooms, garages, and outdoor outlets of all new homes.

WHY DO YOU NEED A GFCI? Electricity and water don't mix. If your hair dryer falls into water while it's plugged in, the electric shock can kill you… **even if the switch is "off."** A regular fuse or circuit breaker won't protect you under these circumstances. A GFCI offers you far greater protection.

A GFCI can save your life! Compared to that, the price is small! Don't wait...install one now!

*GFCI is a sensitive device which reacts immediately to a small electric current leak by stopping the electricity flow.

ADDITIONAL INFORMATION FOR DUAL VOLTAGE DRYERS

For 125 Volt Operation
Flick the dual voltage switch to the 125 position. In this position, the dryer operates in all available heat and speed settings.

For 250 Volt Operation
First put the HI-LO switch into LO. Flick the dual voltage switch to the 250 position. At 250 while set at LO, the dryer operates only at high speed with high heat. Do not attempt to operate the HI-LO switch or change to 125 when operating on 220-250V. The switches must be set and remain in the LO and 250 positions. A plug adapter may be necessary in certain countries.

USER MAINTENANCE

Your dryer is virtually maintenance-free. No lubrication is needed. For proper operating performance, the dryer must be kept clean. When cleaning is needed, unplug the cord, and clean dust and lint from air intake openings with a small brush or the brush attachment of a vacuum cleaner. The outer surface of the dryer should be wiped clean with a cloth only.

Blocked or clogged air intake vents will cause the dryer to overheat. If overheating occurs, an automatic safety device will shut the dryer or the heat off to prevent damage or personal injury. If the unit or the heat cycles off, unplug the cord and allow the dryer to cool for 10 to 15 minutes before restarting. Make sure the air vents are clean.

CAUTION

NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the dryer. Damage will occur at the high flex point of entry into the dryer, causing it to rupture and short. Inspect the cord frequently for damage. **Stop use immediately if damage is visible or unit stops or operates intermittently.** If the cord or dryer is damaged or does not operate properly, return it for repair to an authorized Conair service representative only. No repairs should be attempted by the consumer.

STORAGE – Important
When not in use, your dryer should be disconnected, allowed to cool and stored in a safe, dry location, out of reach of children. **Do not wrap line cord around dryer.** Allow the cord to hang or lie loose and straight at the point of entry into the dryer.

LIMITED TWO YEAR WARRANTY

Conair will repair or replace, at our option, your appliance free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center nearest you, together with your sales slip and $5.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a receipt, the warranty period shall be 24 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24 MONTH DURATION OF THIS WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Haircare Hotline
Call: 1-800-3-CONAIR
Or visit us on the web at:
http://www.conair.com
For info on any Conair product

SERVICE CENTER
CONAIR CORPORATION
Service Department
7475 N. Glen Harbor Blvd
Glendale, AZ 85307
©2009 CONAIR CORPORATION
09PD16469

IB-9600

vagabond™

COMPACT STYLER

1600 WATTS

CONAIR®

MODEL **124AK** instruction & styling guide