



**AMELIA BED SET**  
Model #325-33 Twin  
Model #325-46 Full  
Model #325-50 Queen


CUSTOMER SERVICE  
PHONE NUMBER  
(502) 562-0000  
DATE: 10-26-01

Examine all packaging material for small parts that may have come loose during shipment. Periodical checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference.


**TOOLS REQUIRED FOR ASSEMBLY:** Allen Wrench (Supplied) Open Ended Wrench (Not Supplied).

**HARDWARE LIST**  
A (4) Long Allen Bolts  
B (4) Short Allen Bolts  
C (4) Hex Nuts  
D (8) Rubber Washers  
E (8) Metal Washers  
F (1) Allen Wrench

**PARTS LIST**  
G (1) Headboard Grill  
H (1) Footboard Grill  
J (2) Leg Extensions  
K (2) Castings  
L (4) Foot Glides

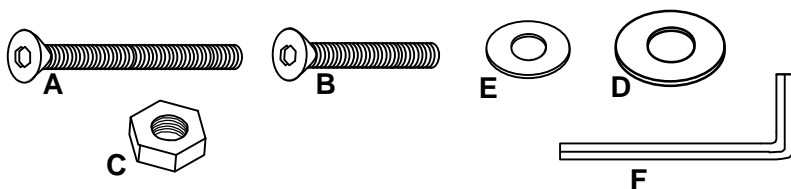


**FIGURE 1**

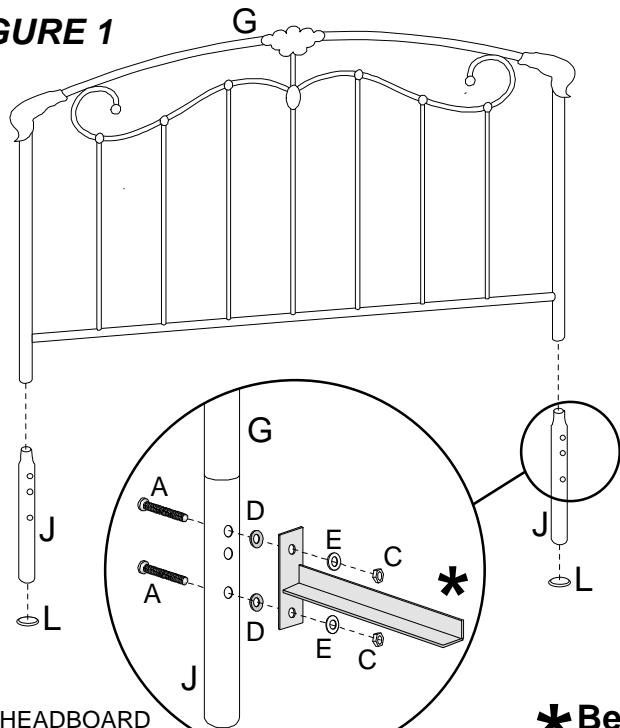

HEADBOARD  
BED FRAME  
ATTACHMENT

**FIGURE 3**

**FIGURE 2**

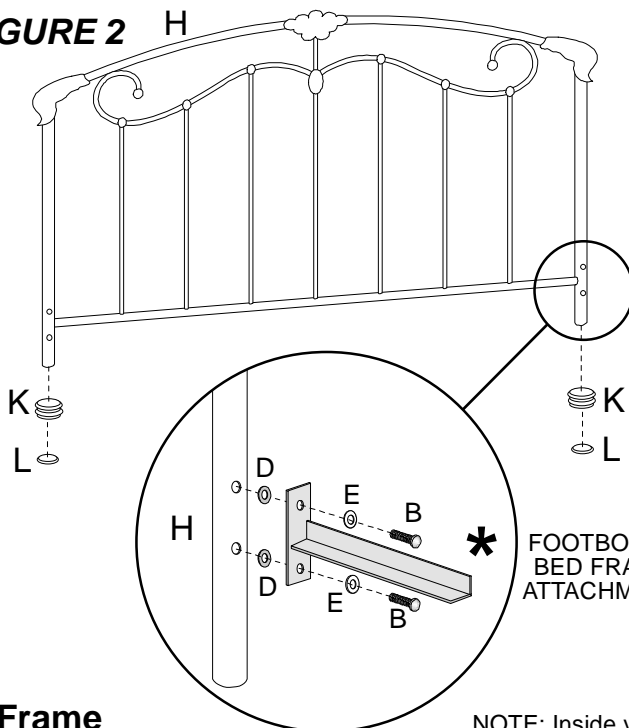

FOOTBOARD  
BED FRAME  
ATTACHMENT

**FIGURE 4**

**\* Bed Frame  
Not Included**  
Only Bed Frame  
Bracket Shown  
In Figures 3 & 4

NOTE: Inside view  
of Footboard.

**STEP 1 [ SEE FIGURE 1 ]**

Insert each Leg Extension (J) into bottom of Headboard (G) Posts. Attach Castings (K) to bottom of post on Footboard (H). Attach Foot Glides (L) to bottom of each Leg Extension (J), and bottom off each Casting (K).

**STEP 2 [ SEE FIGURE 3 ]**

Attach Bed Frame (Not Included) to Headboard (G) using 2 Long Allen Bolts (A), 2 Rubber Washers (D), 2 Metal Washers (E) and 2 Hex Nuts (C). Tighten All Bolts and Nuts.

**STEP 3 [ SEE FIGURES 2 & 4 ]**

Attach Bed Frame (Not Included) to Footboard (H) using 2 Short Allen Bolts (B), 2 Metal Washers (E) and 2 Rubber Washers (D). Tighten All Bolts.

**CARE & MAINTENANCE:** The touch of a soft cloth is all the maintenance the finish of your new BED SET will ever need. Never use harsh or abrasive cleaners for polishing. Periodic checks are recommended to make sure that all bolts, screws and nuts are securely tightened.