



Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required. The product of Hillsdale Furniture, LLC is designed for residential use only. Customer Service Phone Number: 502-562-0000

## HARDWARE LIST

- A (4) Allen Bolts 1/4" x 1/2"
- B (6) Allen Bolts 1/4" x 2"
- C (4) Allen Bolts 1/4" x 3/4"
- D (4) Hex Nuts 1/4"
- E (10) Flat Washers 1/4"
- F (1) Allen Wrench
- G (1) Hex Wrench

## PARTS LIST

- H (1) Headboard Panel
- J (2) Leg Extensions
- K (1) Leg Brace

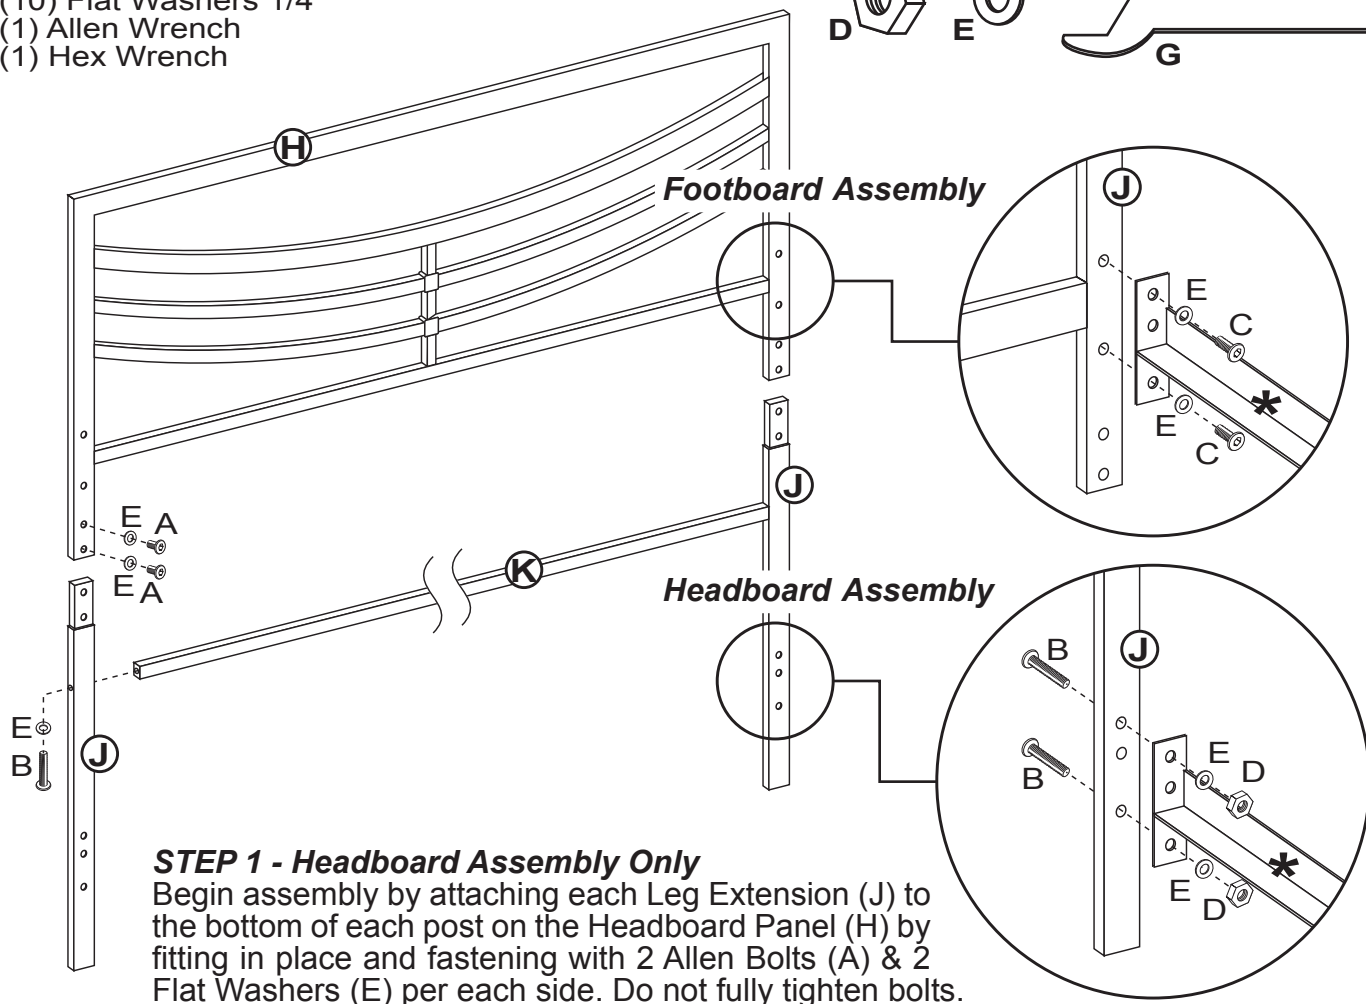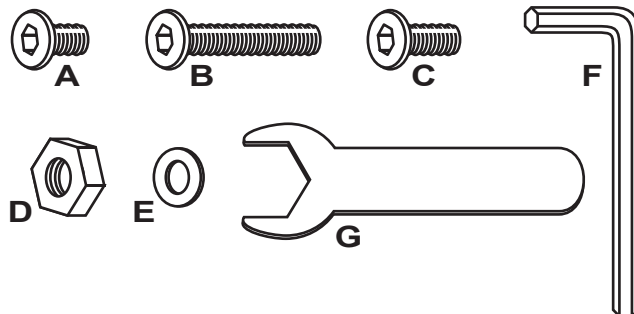

### STEP 1 - Headboard Assembly Only

Begin assembly by attaching each Leg Extension (J) to the bottom of each post on the Headboard Panel (H) by fitting in place and fastening with 2 Allen Bolts (A) & 2 Flat Washers (E) per each side. Do not fully tighten bolts.

### STEP 2 - Headboard Assembly Only

Insert the Leg Brace (K) between each Leg Extension (J) by aligning holes and securing from the outside with 1 Allen Bolt (B) & 1 Flat Washer (E) per each side. Tighten all bolts from Steps 1 & 2 using the Allen Wrench (F) that has been provided.

### STEP 3 - Headboard Assembly Only

Finally attach the Bed Frame (\*Not Included) to each Leg Extension (J) using 2 Allen Bolts (B) from the backside, 2 Flat Washers (E) & 2 Hex Nuts (D) from the front per each post. Tighten all bolts. The assembly of the headboard is now complete.

### STEP 4 - Footboard Assembly Only

Do not assemble the Leg Extensions (J) or Leg Brace (K), but only assemble the Bed Frame (\*Not Included) to each side using 2 Allen Bolts (C) and 2 Flat Washers (E) to secure each side. Tighten all bolts. The assembly of the footboard is now complete.