


KINGSTON HEADBOARD

Model #1503-490 Full/Queen - Metal Headboard

Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required. Customer Service Phone Number: 502-562-0000

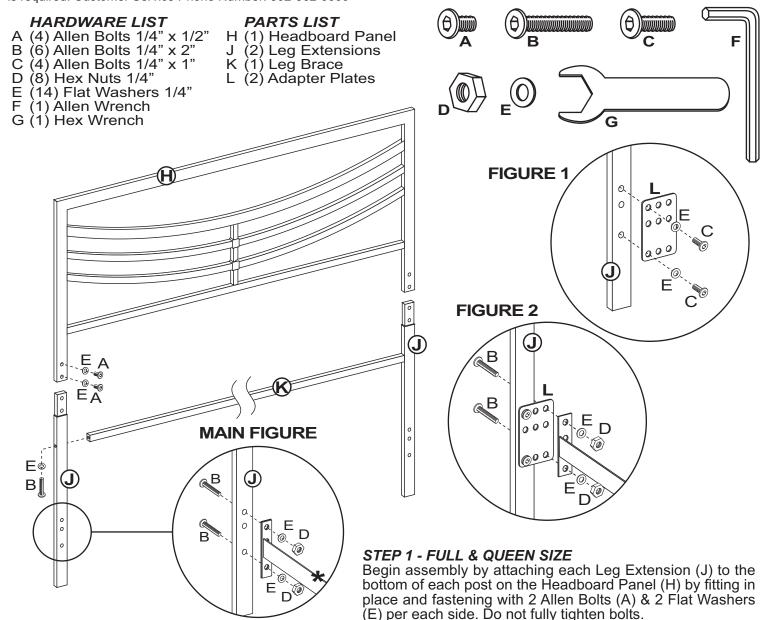

STEP 2 - FULL & QUEEN SIZE

Insert the Leg Brace (K) between each Leg Extension (J) by aligning holes and securing from the outside with 1 Allen Bolt (B) & 1 Flat Washer (E) per each side. Tighten all bolts from Steps 1 & 2 using the Allen Wrench (F) that has been provided.

STEP 3 - QUEEN SIZE ONLY

Attach the Bed Frame (*Not Included) to each Leg Extension (J) using 2 Allen Bolts (B) from the backside, 2 Flat Washers (E) & 2 Hex Nuts (D) from the front per each post. Tighten all bolts. The Queen Size assembly is now complete.

STEP 4 - FULL SIZE ONLY

Attach each Adapter Plate (L) to each Leg Extension (J) using 2 Allen Bolts (C) & 2 Flat Washers (E) from the front to secure in place. See Figure 1. Once in place, secure the Bed Frame to each Adapter Plate (L) using 2 Allen Bolts (B) from the backside, 2 Flat Washers (E) & 2 Hex Nuts (D) from the front per each plate. See Figure 2. Tighten all bolts. The Full Size assembly is now complete.

CARE & MAINTENANCE: The touch of a soft cloth is all the maintenance the finish will ever need. Please do not use harsh or abrasive cleaners for polishing, as they may cause damage to the finish. Periodic checks are recommended to make sure that all bolts, screws and nuts are securely tightened.