

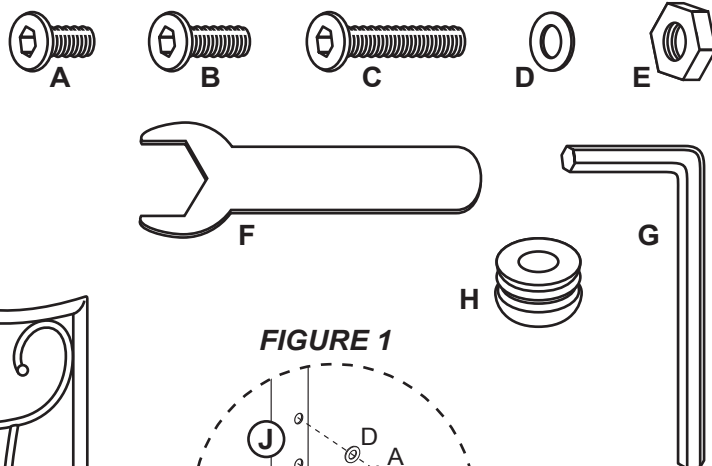
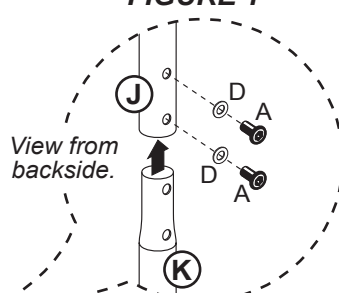
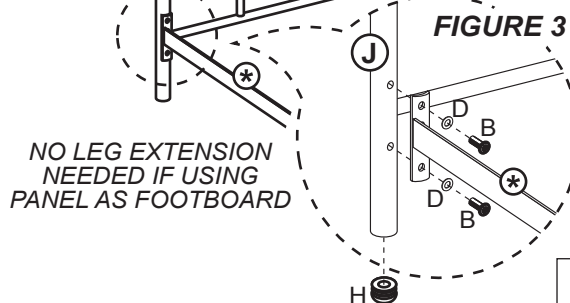
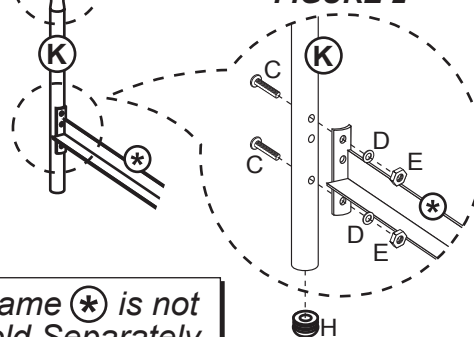
Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required. The product of Hillsdale Furniture, LLC is designed for residential use only. Customer Service Phone Number: 502-562-0000

HARDWARE LIST

- A (4) Allen Bolts 1/4" x 1/2"
B (4) Allen Bolts 1/4" x 3/4"
C (4) Allen Bolts 1/4" x 2"
D (8) Flat Washers 1/4"
E (4) Hex Nuts 1/4"
F (1) Hex Wrench 1/4"
G (1) Allen Wrench 1/4"
H (2) Plastic Plugs

PARTS LIST

- J (1) Duo Panel
K (2) Leg Extensions


FIGURE 1

FIGURE 2


The Bed Frame () is not included. Sold Separately.*

STEP 1 - Figure 1 - If using Panel as Headboard

Begin assembly by inserting each Plastic Plug (H) into the bottom of each Leg Extension (K) by screwing in place. Attach each Leg Extension (K) into the bottom of each post on the Duo Panel (J) by fitting in place and aligning the holes on the backside. Once in place, secure each extension using 2 Allen Bolts (A) & 2 Flat Washers (D). Tighten all bolts using the Allen Wrench (G) that has been provided.

STEP 2 - Figure 2 - If using Panel as Headboard

Assemble the bed frame (*Not Included) to each Leg Extension (K) from the back using 2 Allen Bolts (C), and from the inside with 2 Flat Washers (D) & 2 Hex Nuts (E). Tighten all bolts and nuts using the hardware (F & G) provided. The assembly of your Headboard Duo Panel is complete. It is recommended that you keep any remaining parts and instruction sheet for future reference.

STEP 3 - Figure 3 - If using Panel as Footboard

Do not assemble Leg Extensions (K) to posts on Duo Panel (J). Begin assembly by inserting each Plastic Plug (H) into the bottom of each post on the Duo Panel (J) by screwing in place. Assemble the bed frame (Not Included) to each post using 2 Allen Bolts (B) & 2 Flat Washers (D). Tighten all bolts using the Allen Wrench (G) that has been provided. The assembly of your Footboard Duo Panel is complete. It is recommended that you keep any remaining parts and instruction sheet for future reference.