

# USE AND CARE GUIDE

## Mission Creek 10x12 Hardtop Gazebo with netting

Product Code: 06447232-7

UPC Code: 749241314179

Date of purchase: \_\_\_\_/\_\_\_\_/\_\_\_\_

# Thank you for your purchase

## Thank you for your purchase!

We are pleased that you have chosen Kmart for your outdoor furniture purchase. We hope that you enjoy the unmatched quality, comfort, and style of your new patio set. Every piece is meticulously considered all the way down to the smallest details, exclusively for you, by our world class design team. We know you have a choice when it comes to your patio furniture needs, so from our team to yours, thank you for letting us be a part of your outdoors.

# Table of contents

<b>Table of Contents</b>	2
<b>Safety Information</b>	3
Set Up your Shelter Properly	3
Examine your Shelter	3
 <b>Warranty</b>	3
Excluded	3
Service Center	3
<b>Care and Maintenance</b>	4
 <b>Pre-Assembly</b>	5
Hardware Included	5
Package Contents	6
 <b>Assembly Instructions</b>	9
 <b>Customer Service</b>	22

## Safety Information

---

### SET UP YOUR SHELTER PROPERLY

- ☐ Please read and understand this entire manual before attempt to assemble, operate, or install the product.
- ☐ If any part is missing or damaged. Do not attempt to assemble the product.
- ☐ Two to four people are needed for assembly.
- ☐ In order to avoid damage to the gazebo and its components please use appropriate tools.
- ☐ Do not use the structure as support.
- ☐ Check all bolts on a regular basis to maintain the solidity of the structure.
- ☐ Keep instruction for future use.
- ☐ Approximate time: 2 – 3 hours

### EXAMINE YOUR SHELTER

- ☐ Examine occasionally to ensure there are no loose parts. If loose parts are found, they must be retightened fully immediately.

## Warranty

---

### 5 YEARS WARRANTY FOR FRAME AND 1 YEAR WARRANTY FOR NETTING 3 YEARS WARRANTY FOR POLY CARBONATE ROOF PANEL

Limited warranty is applicable on parts only. Warranty extends solely to the original purchaser who must offer original sales receipt for record.

#### WHAT IS COVERED

Limited warranty is applicable on parts only. We warranty to the original purchase for 5 years limited from the date of purchase that the frame and frame will be free from manufacturing defects.

#### WHAT IS NOT COVERED

Product used for commercial, contract, or other non-residential purposes, or damage due to acts of nature, vandalism, misuse, or improper assembly is not covered.

Corrosion or rusting of hardware is not covered. Warranty is to the original purchaser and is non-transferable. Any replacement of warranted items will be in the original style and color, or a similar style and color if the original is unavailable or has been discontinued.

#### SERVICE CENTER

The purchaser must contact our customer service center directly if this product is found to be defect in material or workmanship. The manufacturer, as its option, will repair or replace the defectives parts.

Please contact us via 1-800-961-9838, 9AM-5PM, Pacific Time Zone, Monday-Friday, or [customerservice@bondvast.com](mailto:customerservice@bondvast.com)

## Care and Maintenance

---

- For cleaning, use a mild detergent solution and rinse with water. Do not use acetone abrasive or others special detergents to clean and air dry only.
- Due to the nature of steel, surface oxidation (rusting) will occur if this protective coating is scratched. This is a natural process. To minimize this condition, it is recommended that care be taken when assembling and handling the product in order to prevent the paint from being scratched.

## Warning

---

### **WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.**

The tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

## Pre-Assembly

### PLANNING ASSEMBLY

To prevent damage, place all parts on a soft surface during assembly.


Tools required for assembly (not included): Allen wrench (included), a screwdriver, stepladder (min. 5ft.) and other safety items such as gloves, safety eyewear, and hardhat. To avoid injury from exposed sharp edges, it may be necessary to use the above safety equipment.

Do not leave it unattended if not fully assembled even if bolted to the ground.


### HARDWARE INCLUDED




**NOTED:** Hardware not shown to actual size.

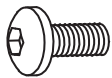

\_\_AA

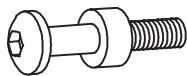

\_\_BB

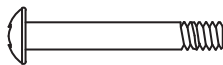


\_\_CC



\_\_DD



\_\_EE

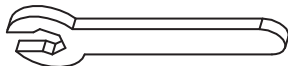


\_\_FF

Part	Description	Size	QTY.
AA	BOLT	(Φ 6 x 15mm)	106
BB	BOLT	(Φ 6 x 35mm)	32
CC	BOLT	(Φ 6 x 100mm)	16
DD	BOLT NUT		16
EE	ALLEN WRENCH		1
FF	SPANNER		1












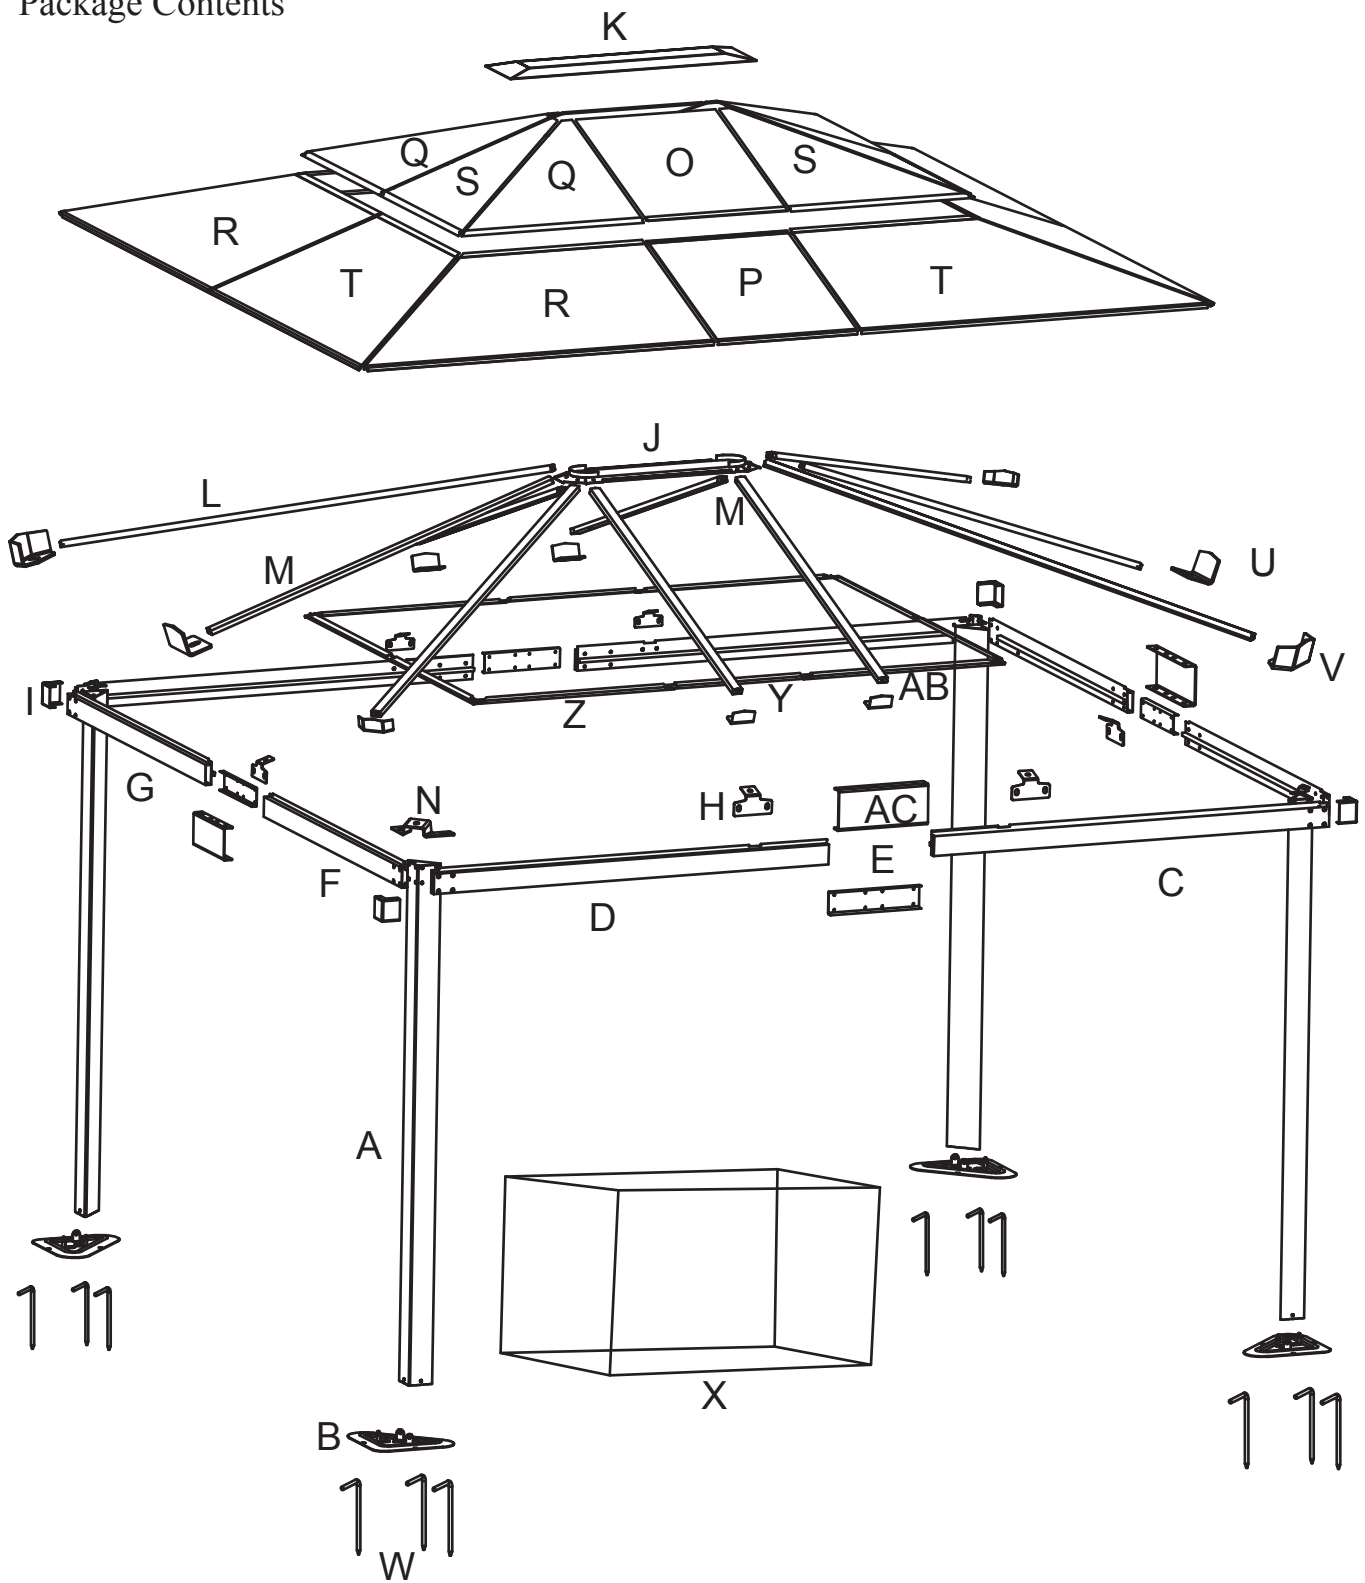


## Pre-Assembly (continued)

### Package Contents

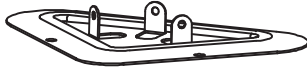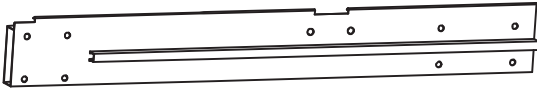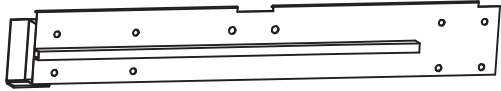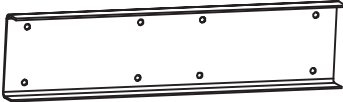


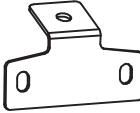
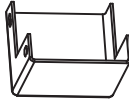

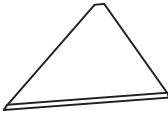
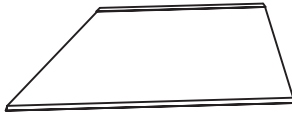
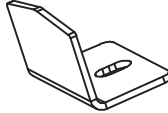


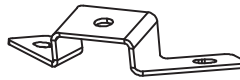




## Pre-Assembly (continued)

### Package Contents

Part	Description	Qty	Illustration
A	Post	4	
B	Base flange	4	
C	Long crossbar 1	2	
D	Long crossbar 2	2	
E	Inner connector	4	
F	Short crossbar 1	2	
G	Short crossbar 2	2	
H	Center connector	6	
I	Corner eave connector	4	
J	Roof connector	1	
K	Roof top cover	1	
L	Long roof tube	4	
M	Short roof tube	6	
N	Corner connector	4	
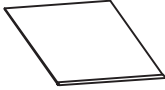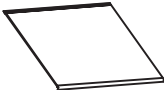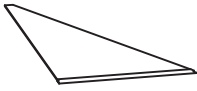
## Pre-Assembly (continued)

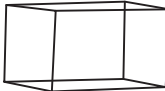
### Package Contents

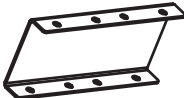Part	Description	Qty	Illustration
O	Roof panel 1	2	
P	Roof panel 2	2	
Q	Roof panel 3	4	
R	Roof panel 4	4	
S	Roof panel 5	4	
T	Roof panel 6	4	
U	Roof center connector	6	
V	Roof corner connector	4	
W	Stake	12	
X	Mosquito net	1	
Y	Support tube 1	2	
Z	Support tube 2	4	
AB	Support tube 3	4	
AC	Outer connector	4	




## Assembly Instructions


1. Attach base flange (B) on the bottom of post (A), then secure with bolts (AA) as figure 1 shown. Repeat for the remaining post (A) and base flange (B).

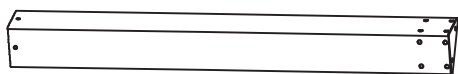


A x 4

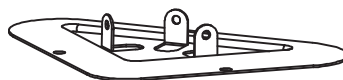

B x 4

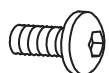


AA x 8

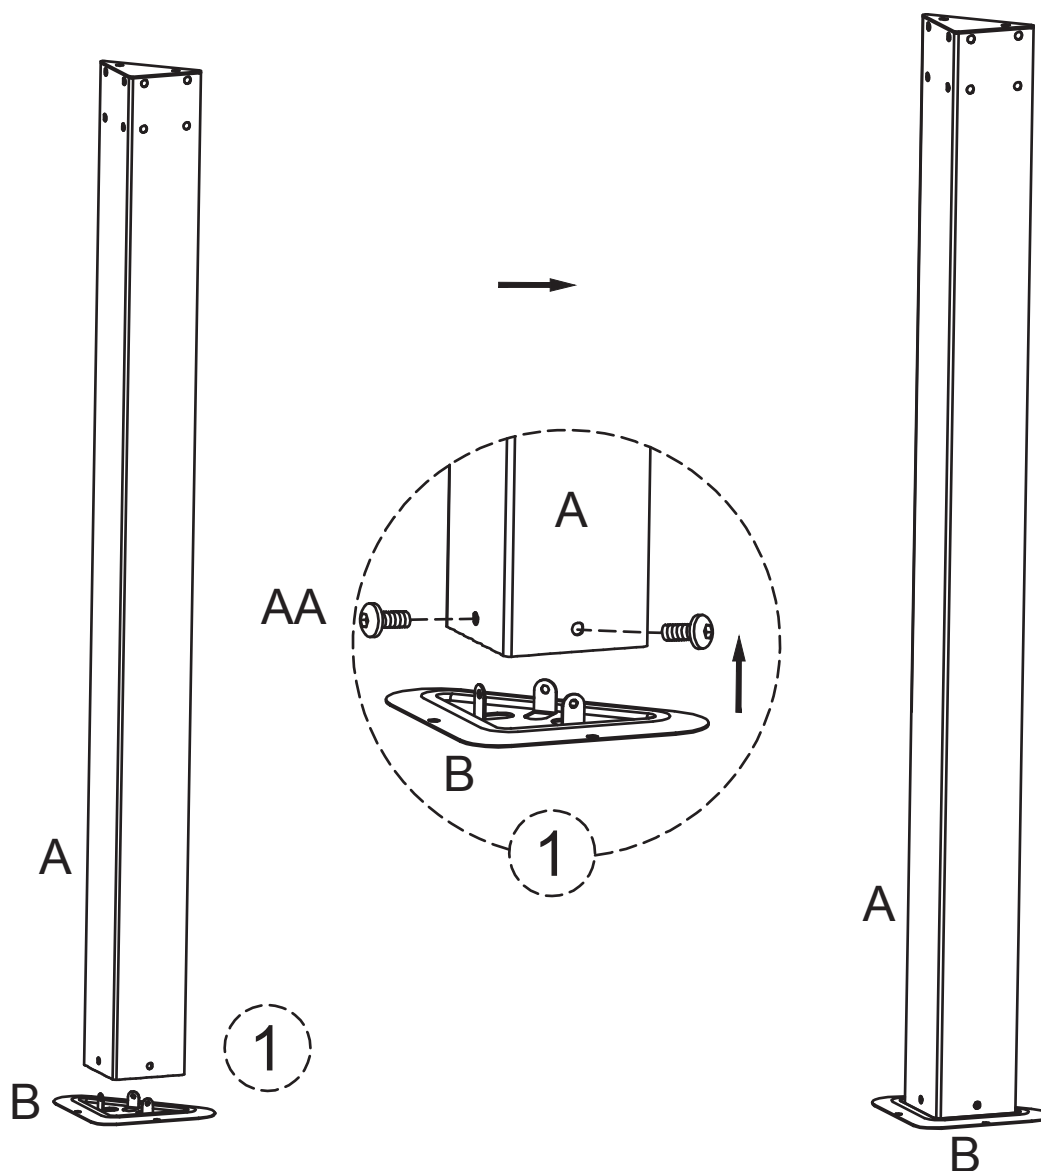

## Assembly Instructions

2. Insert inner connector (E) in between long crossbar 1, 2 (C, D) secure with bolts (AA) see figure 1. Secure outer connector (AC) with long crossbar (C, D) using bolts (CC) and bolt nut (DD) as figure 2 shown. Secure center connector (H) onto the long crossbar (C, D) by using bolts (AA) as figure 3 shown. Repeat for remaining long crossbar (C, D).

Notes: Please check the upper fig, and make sure all the parts in right position. Don't tighten all bolts before assembly completed.

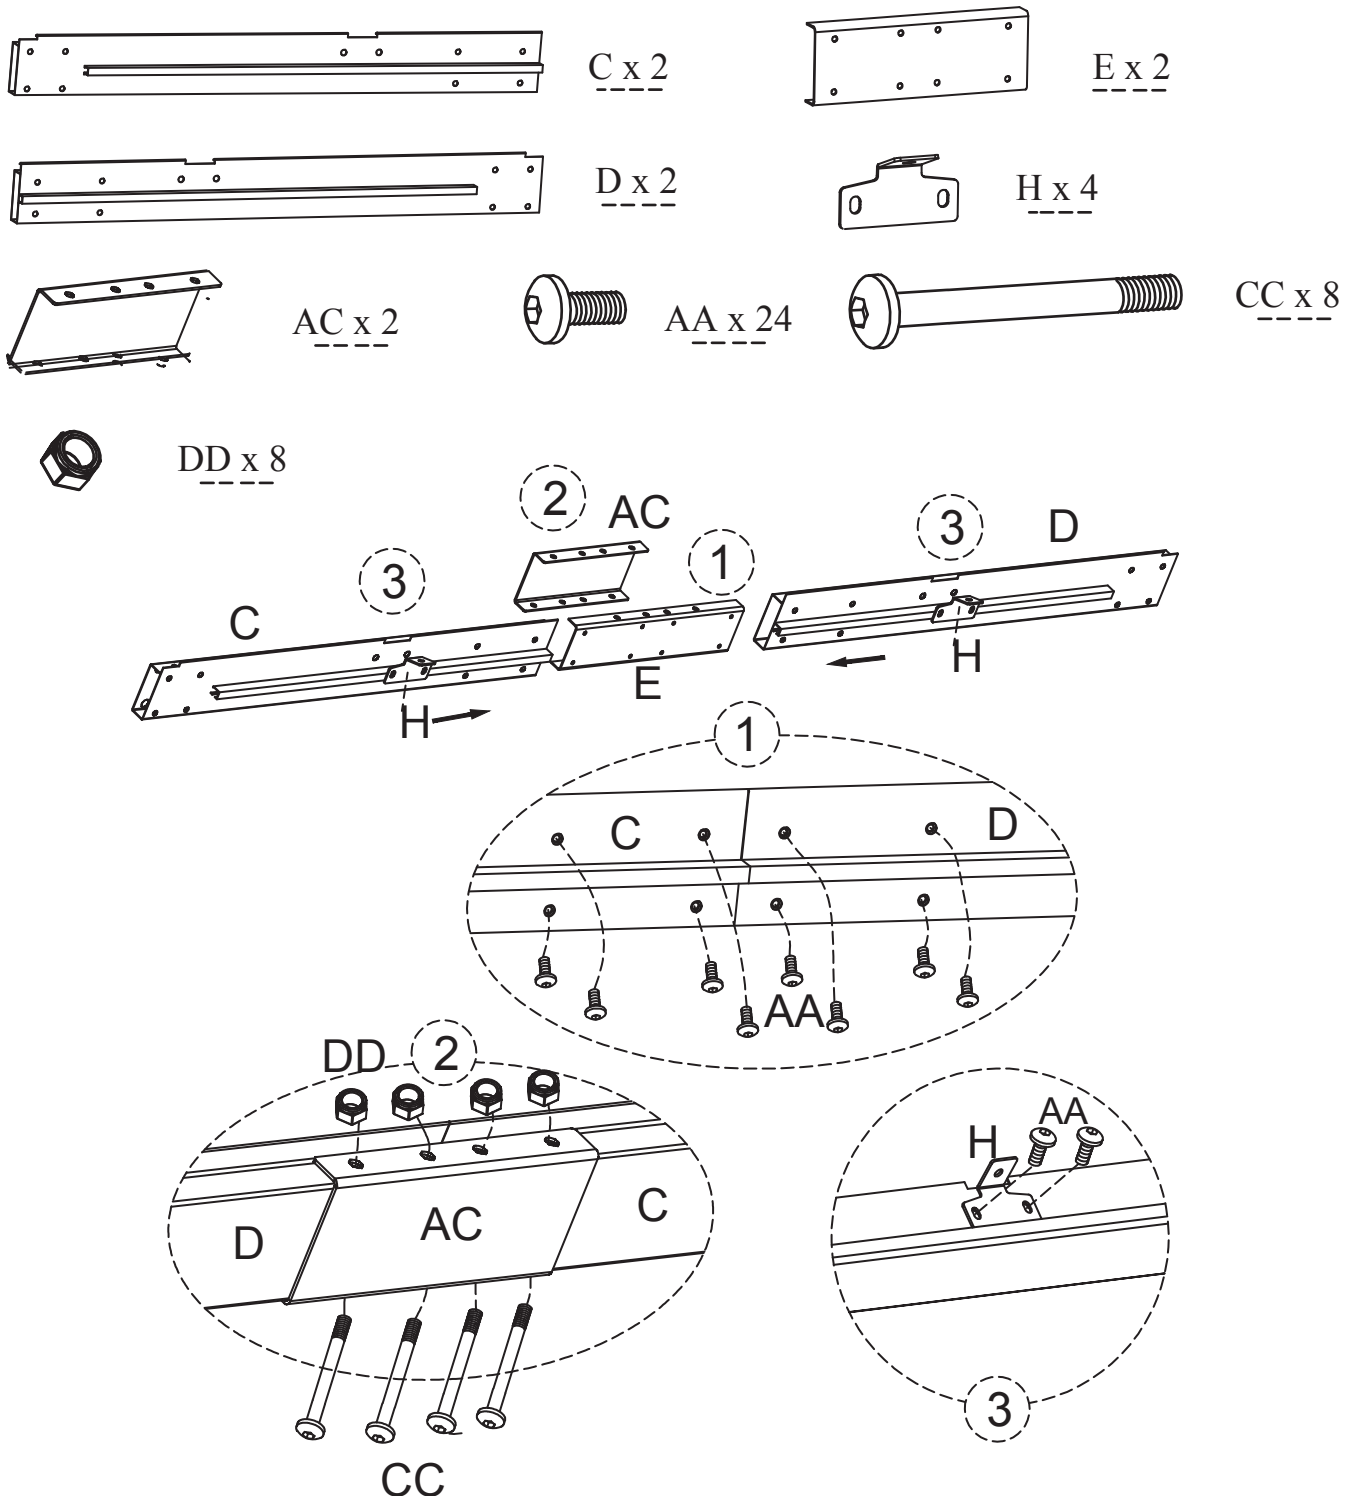

## Assembly Instructions

3. Insert inner connector (E) in between short crossbar 1, 2 (F, G) secure with bolts (AA). See figure 1.


Secure center connector (H) onto the inner connector (E) by using bolts (AA) as figure 1 shown.

Secure outer connector (AC) with short crossbar (G, F) by using bolts (CC) and bolt nut (DD) as figure 2 shown.

Repeat for remaining short crossbar (G, F).

Notes: Please check the upper fig. And make sure all the parts in right position.

Don't tighten all bolts before assembly completed.

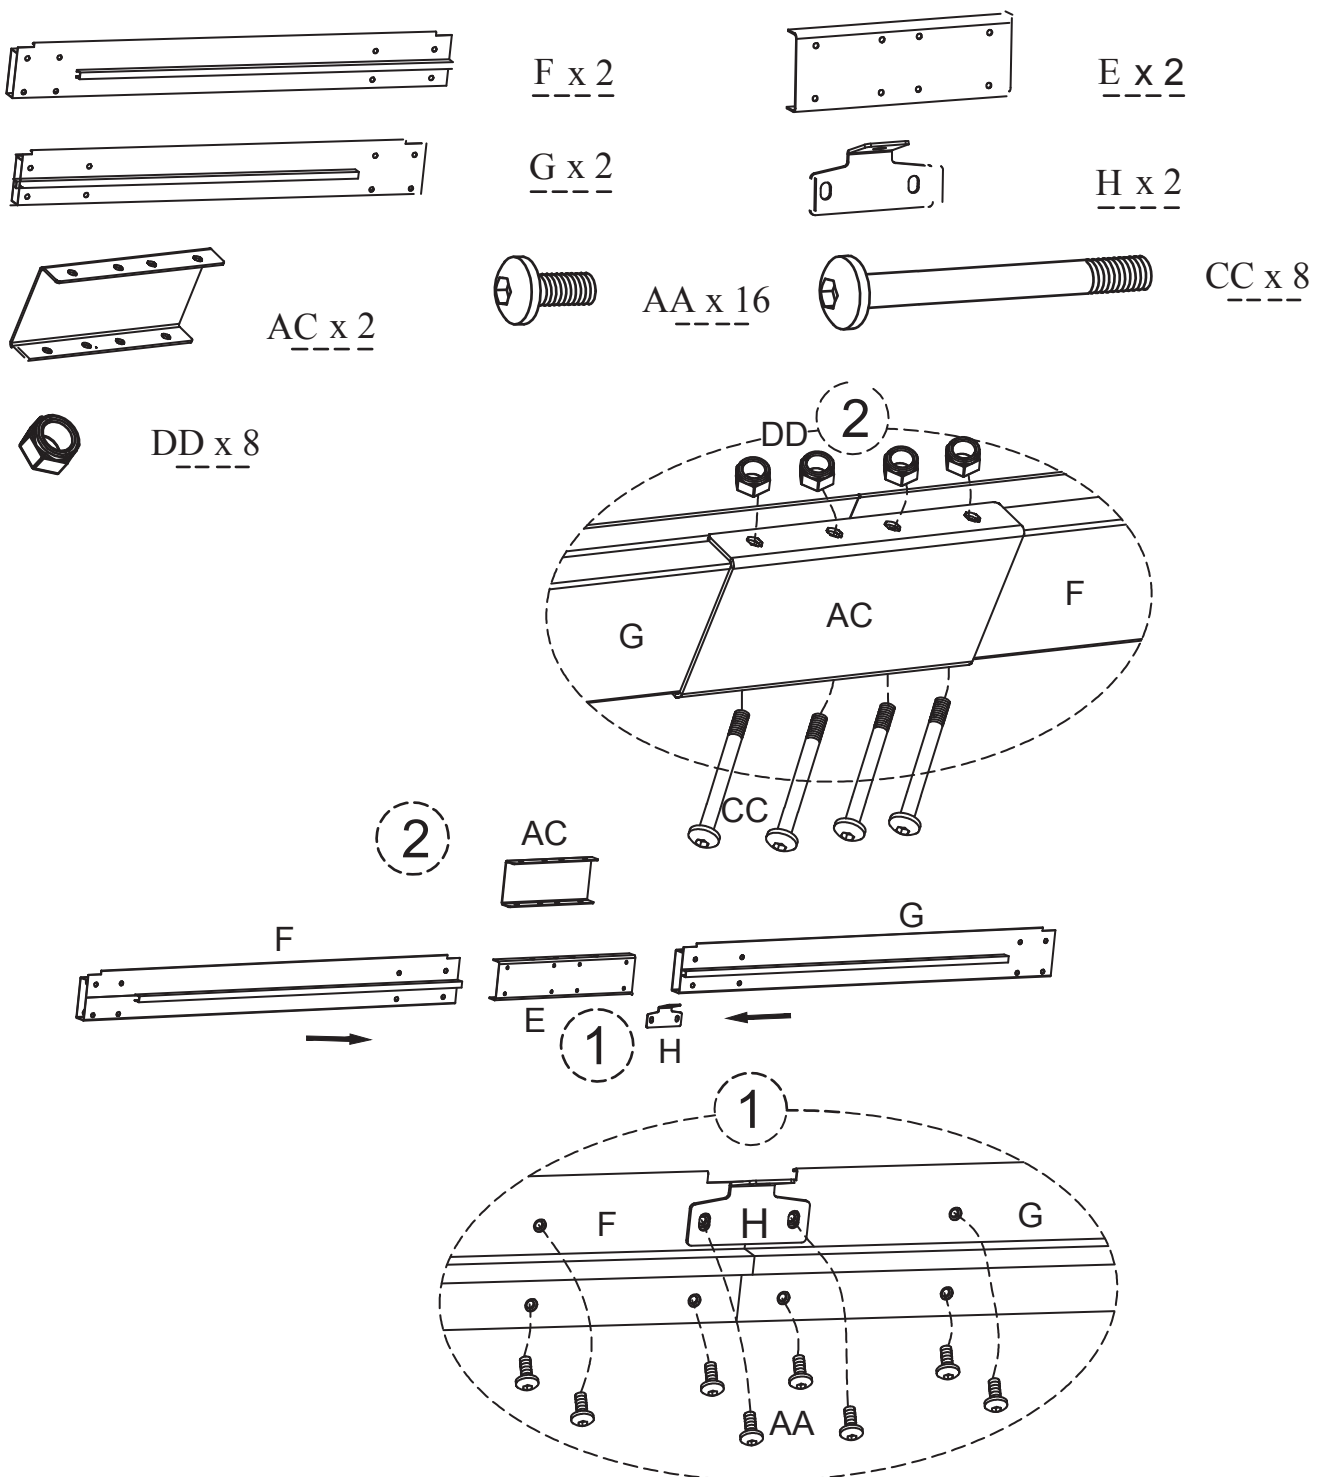


## Assembly Instructions


4. Secure the assembled short crossbar set (F, G) with both post (A) by using bolts (BB) as figure 1 shown.

Repeat for remaining assembled short crossbar set (F, G) and post (A).

Don't tighten all bolts before assembly completed.

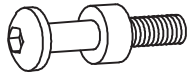

BB x 16  
----

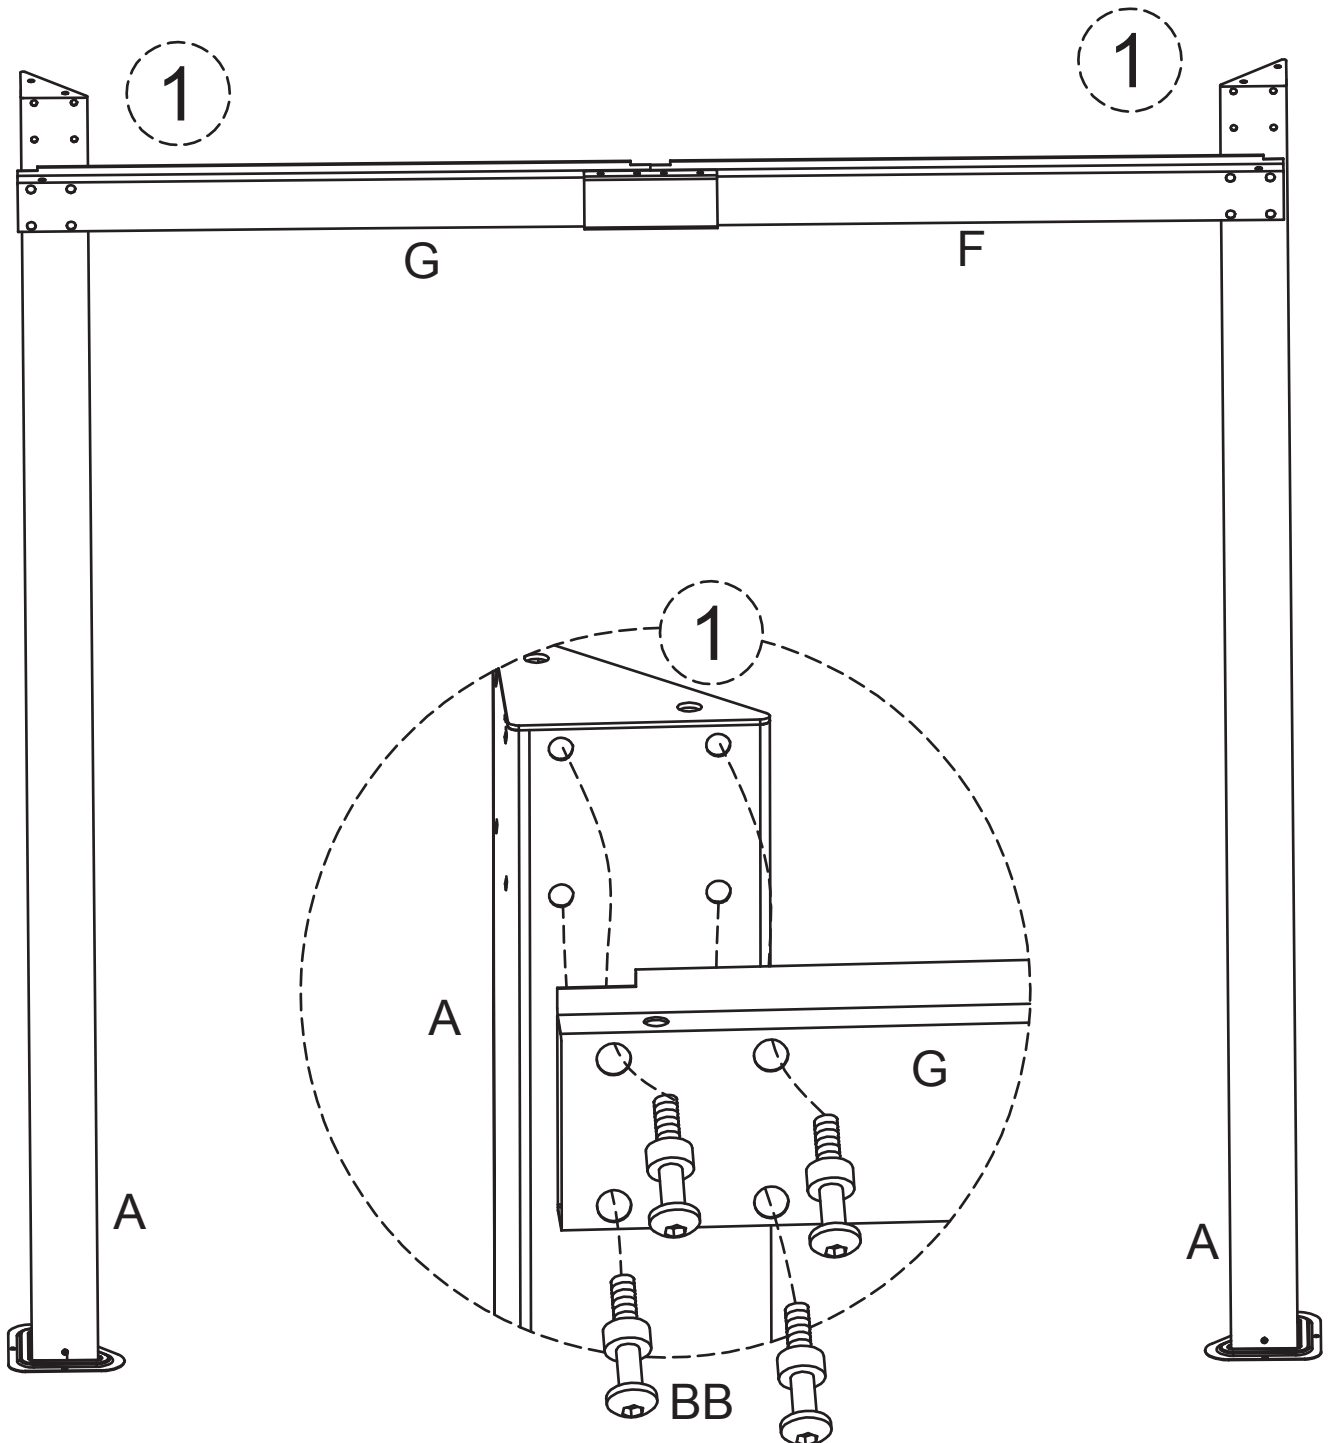


## Assembly Instructions



5. Secure the assembled long crossbar set (C, D) with both post (A) by using bolts (BB) as figure 1 shown.

Repeat for remaining assembled long crossbar set (C, D).

Don't tighten all bolts before assembly completed.

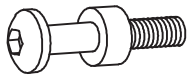


BB x 16

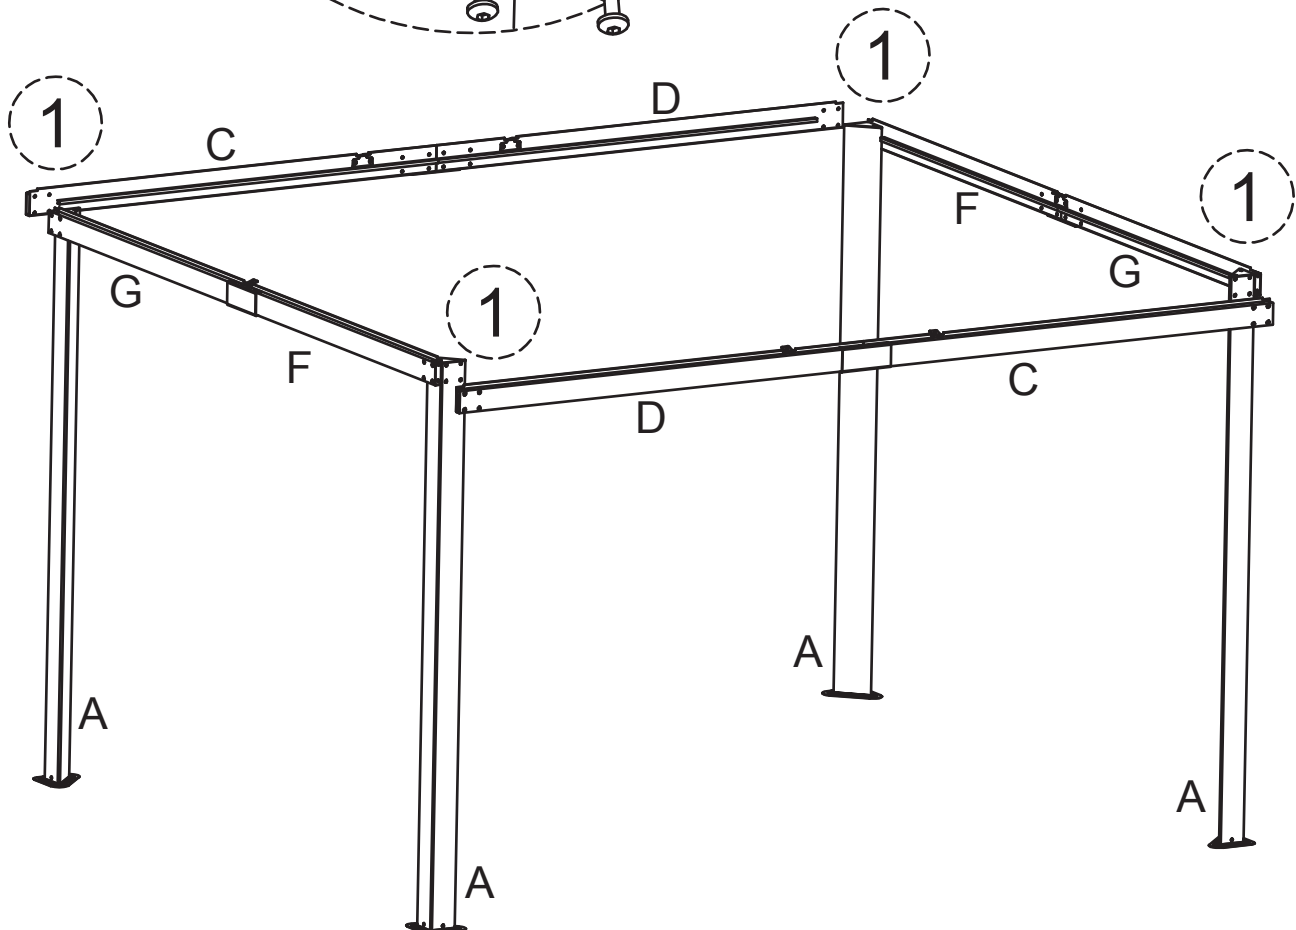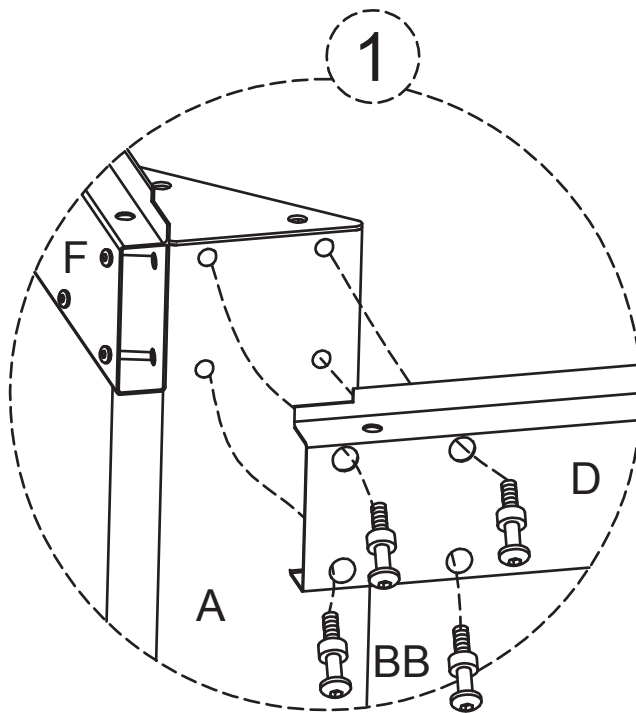


## Assembly Instructions


6. Secure long crossbar 2 (D) and short crossbar 1 (F) with corner eave connector (I) by using bolts (AA)  
Repeat for the remaining corner eave connector (I).

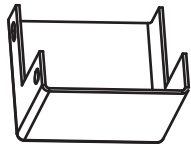

I X 4

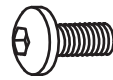

AA x 8

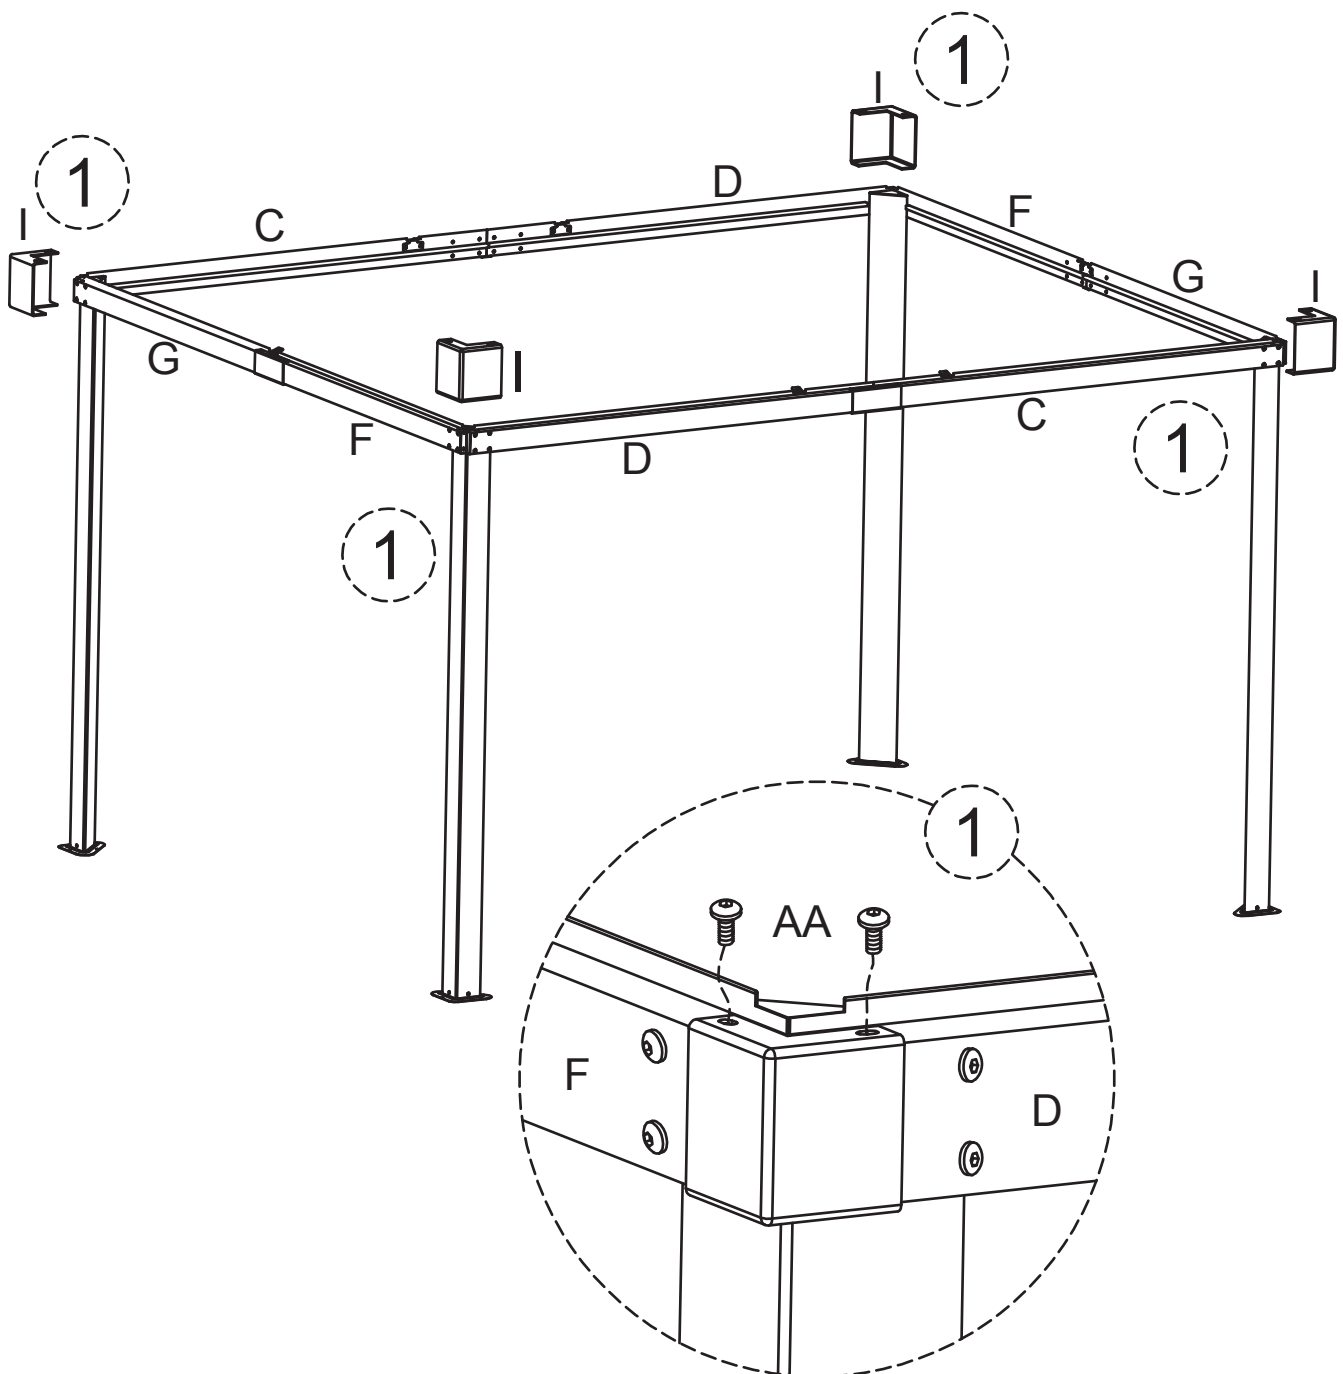


## Assembly Instructions




7. Use bolts (AA) secure roof connector (J) underneath with short roof tube (M) as figure 1 show, then insert bolts (AA) through center connector (H) secure with other side of short roof tube (M) as figure 2 shown. Repeat for remaining short roof tube (M). Don't tighten all bolts before assembly completed.



M X 6

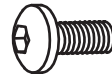


AA x 12

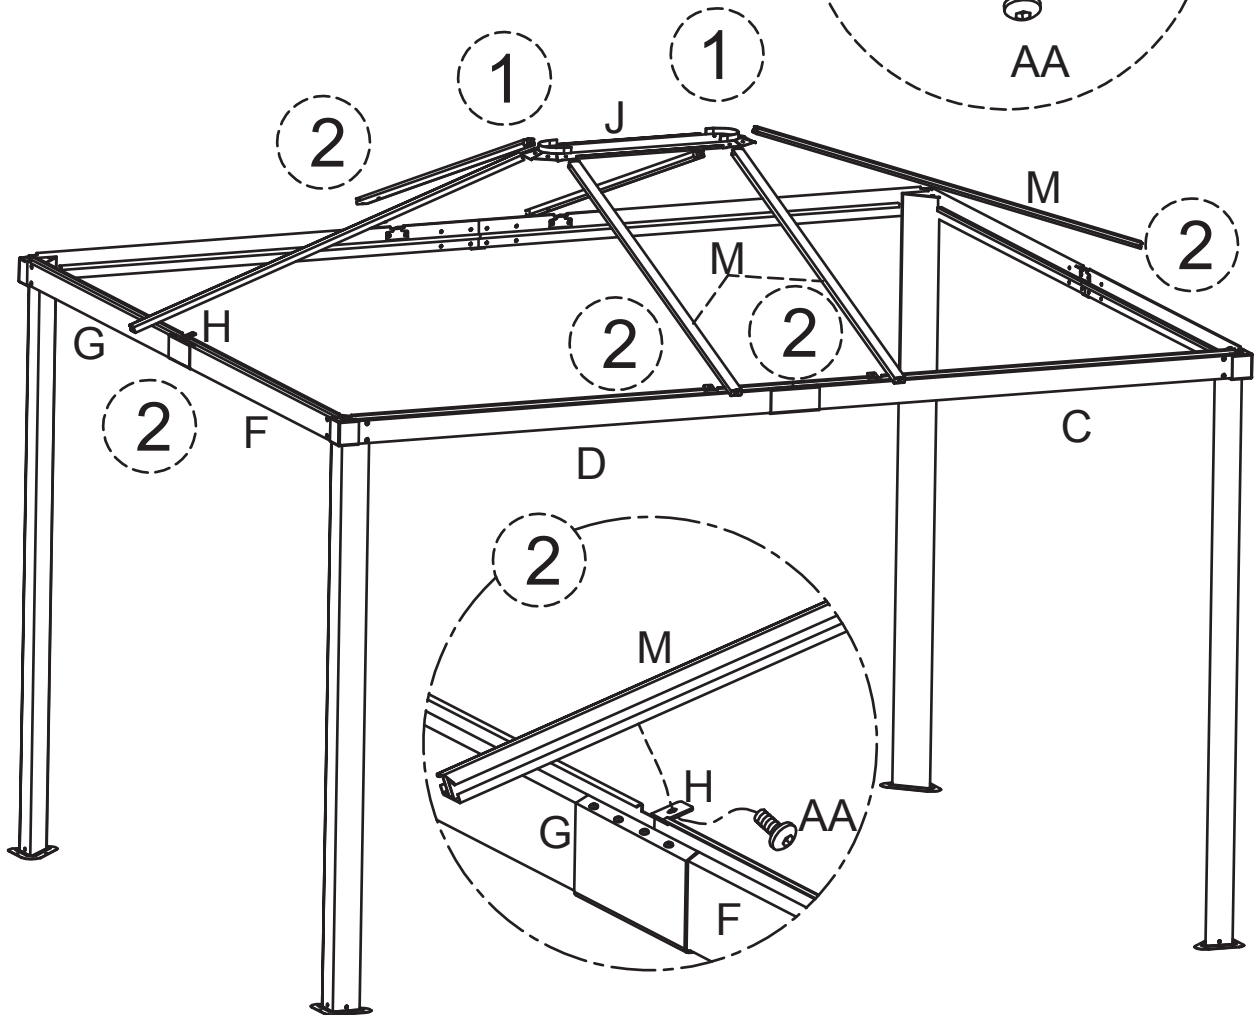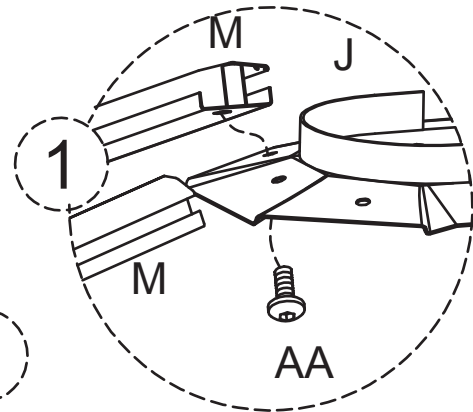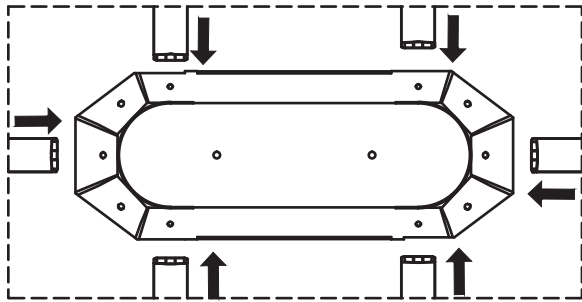


## Assembly Instructions

8. Secure corner connector (N) onto long roof tube (L) by using bolts (AA) as figure 1 shown. Repeat for remaining long roof tube (L) and corner connector (N).


Notes: Please check the fig, and make sure all the parts in right position.

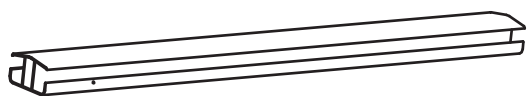




L X 4

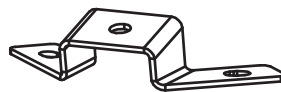

N X 4

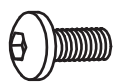




AA x 4

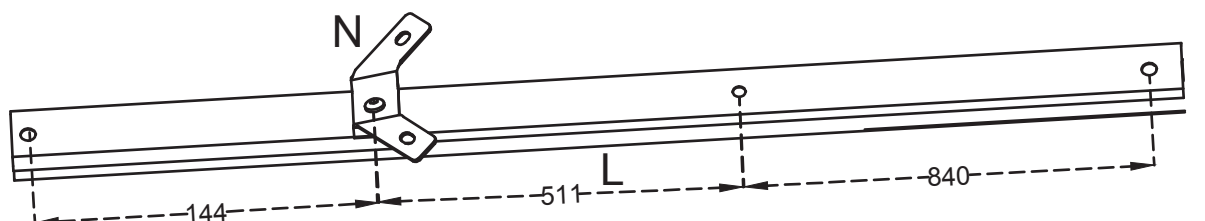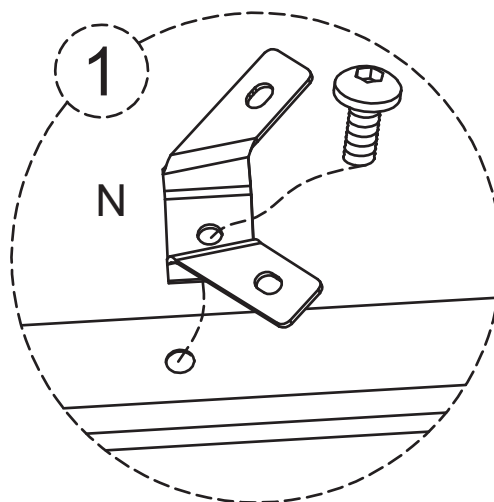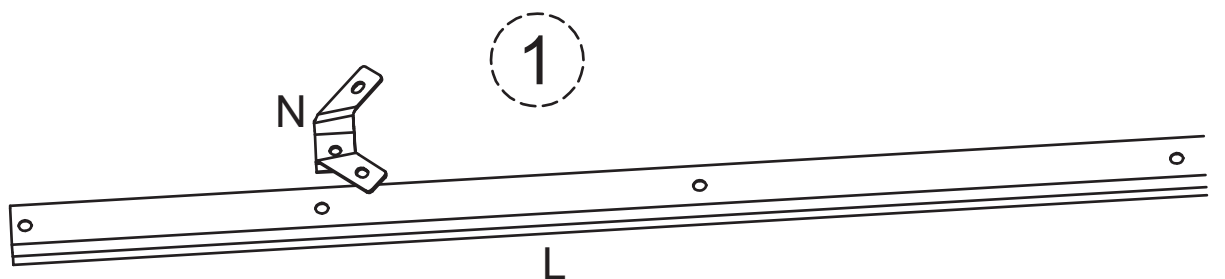



## Assembly Instructions

9. Use bolts (AA) secure roof connector (J) with long roof tube (L) as figure 1 shown, then insert bolts (AA) through corner connector (N) of long roof tube (L) secure with post (A) as figure 2 shown. Repeat for remaining long roof tube (L). Don't tighten all bolts before assembly completed.

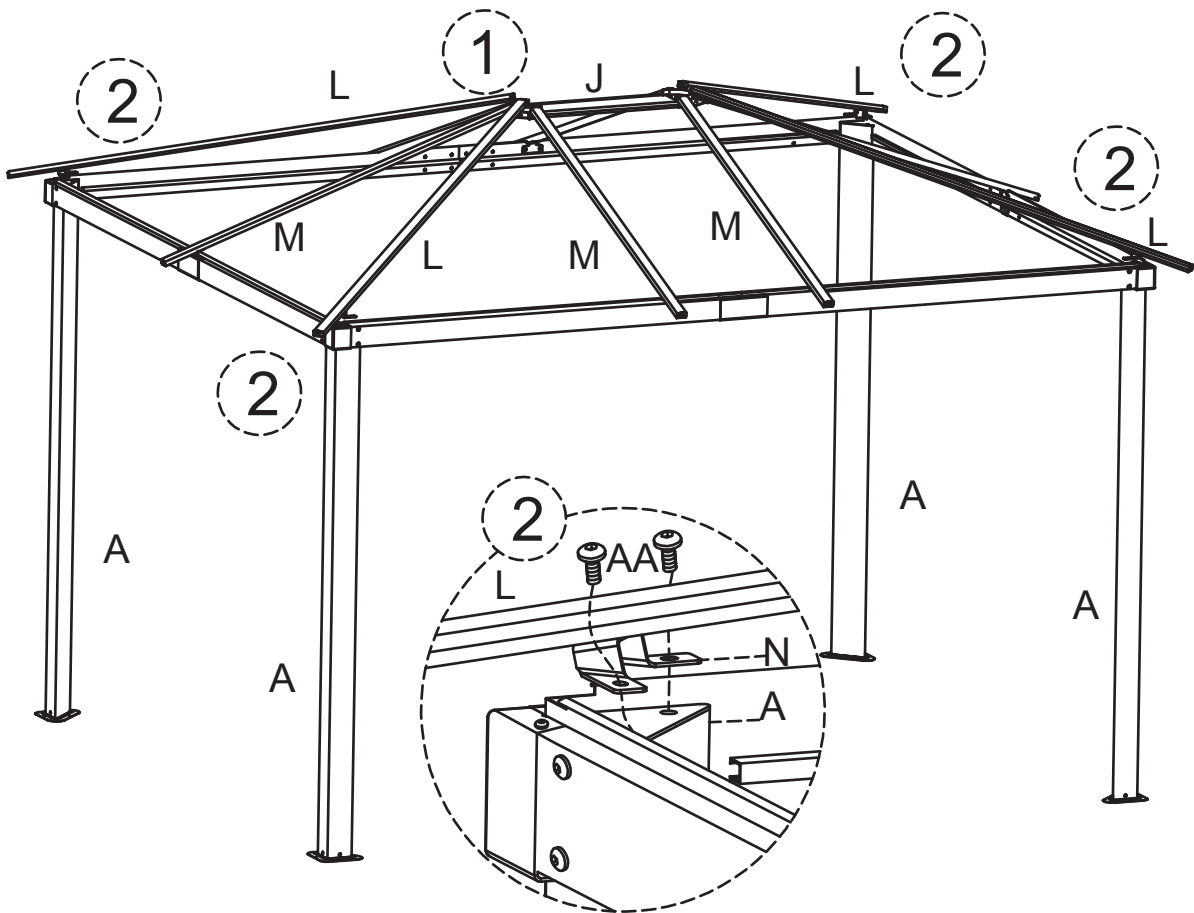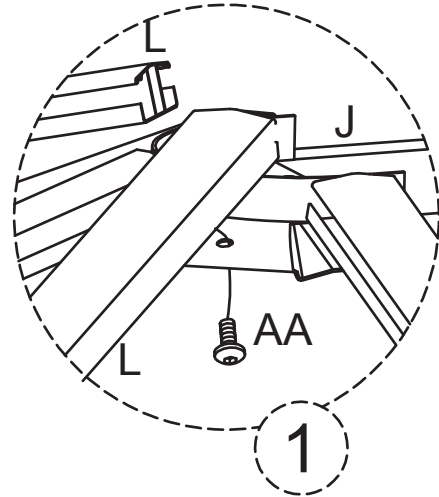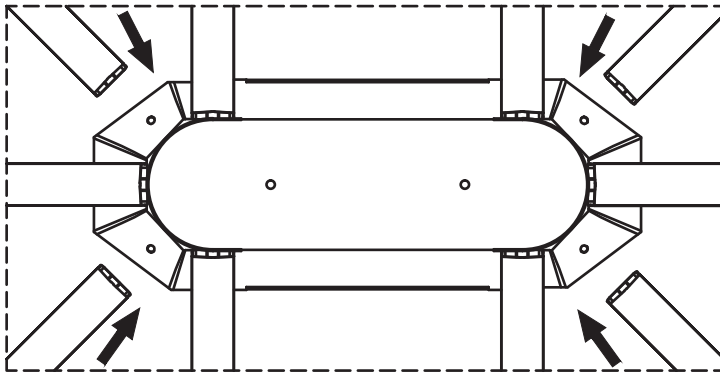


## Assembly Instructions



10. Insert bolts (AA) through roof connector (J) underneath secure with roof top cover (K) as figure 1 shown. Don't tighten all bolts before assembly completed.



K x 1

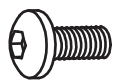

AA x 2

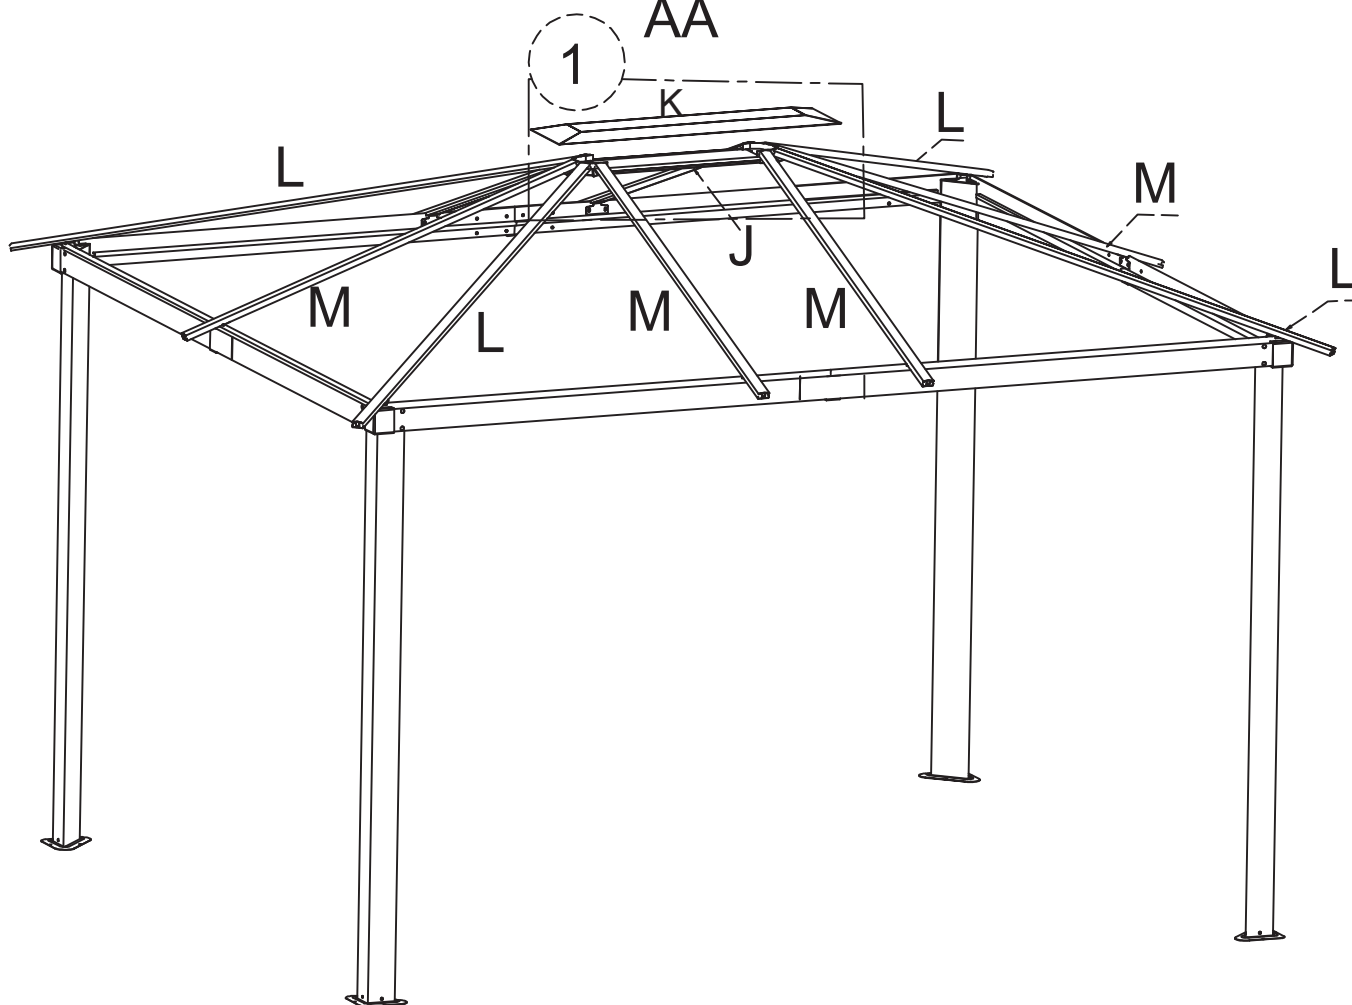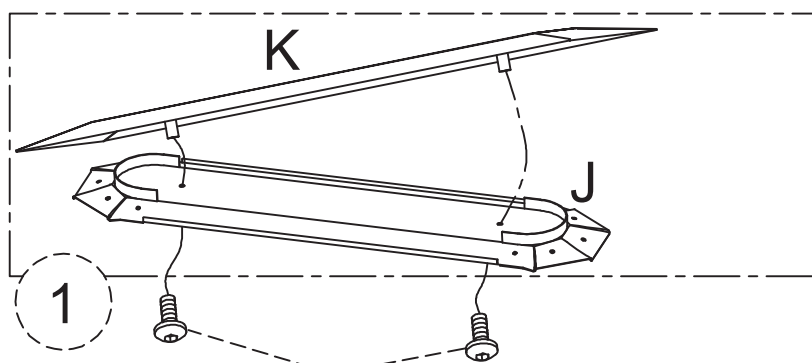

## Assembly Instructions

11. Insert bolts (AA) through support tube 2 (Z) and support tube 3 (AB), secure with short roof tube (M) as figure 1 shown.

Insert bolts (AA) through support tube 3 (AB) and support tube 2 (Z), secure with long roof tube (L) as figure 2 shown.

Insert bolts (AA) through support tube 3 (AB) and support tube 1 (Y), secure with short roof tube (M) as figure 3 shown.

Repeat for remaining support tube (Y, Z, AB).


Don't tighten all bolts before assembly completed.




Y X 2






Z X 4



AB X 4

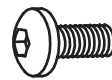


AA x 10

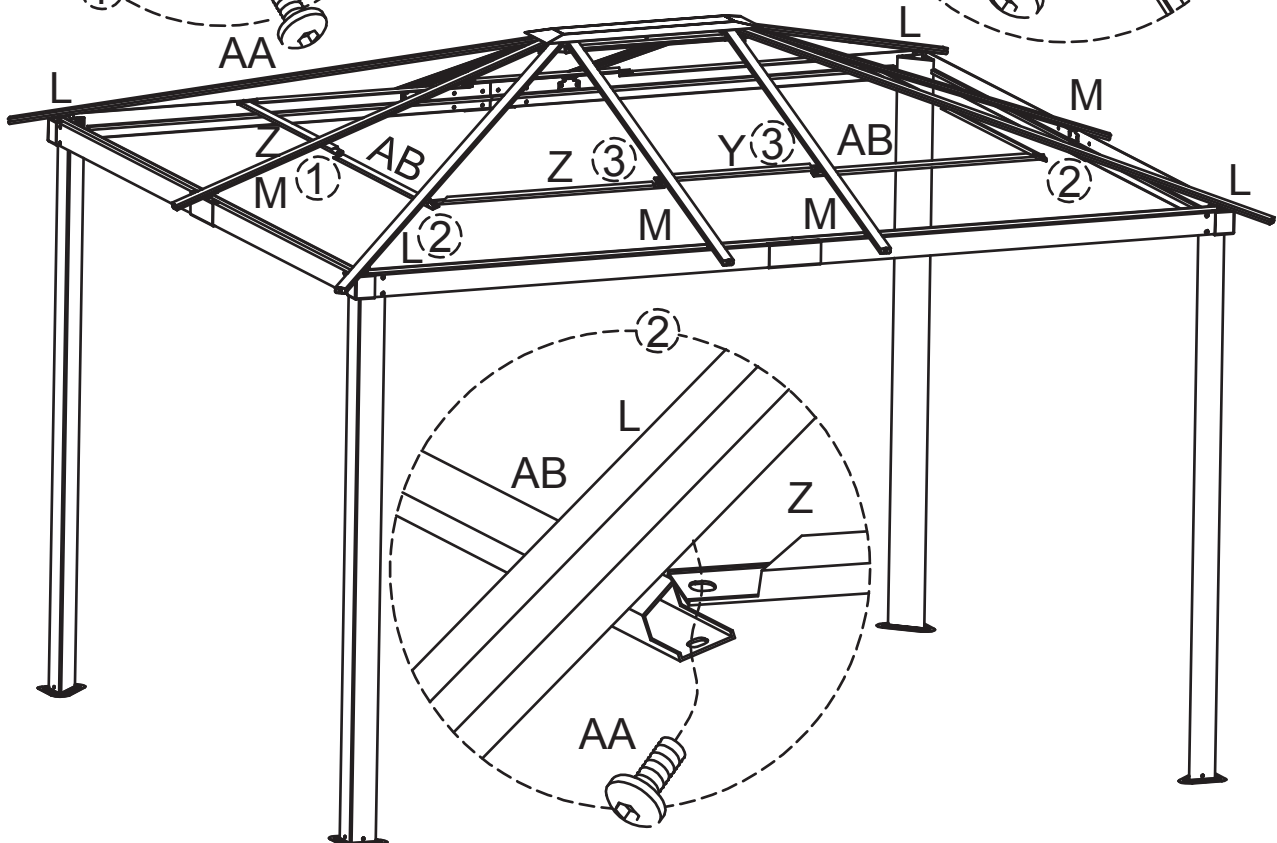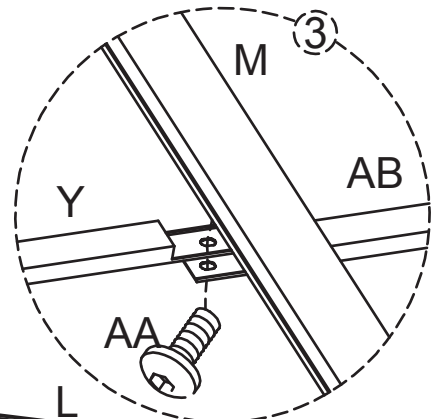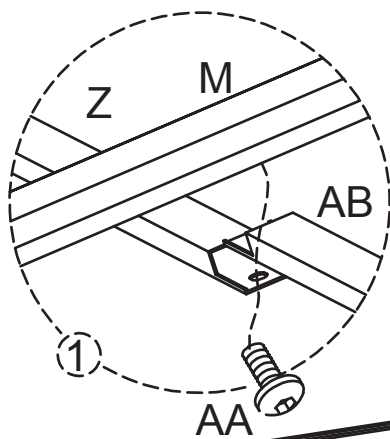

## Assembly Instructions

12. Peel off the protection sheet from the panel, then insert roof panel 5 (S) into short roof tube (M) and long roof tube (L), then insert roof panel 6 (T) into short roof tube (M) and long roof tube (L). Repeat the step for remaining roof panels (O, P, Q, R, S, T). Insert bolts (AA) through roof center connector (U) secure with short roof tube (M). Insert bolts (AA) through roof corner connector (V) secure with long roof tube (L). Please do not let the panels slide off.

Please make sure the lower roof panel against to the upper roof panel (fig. X & X).

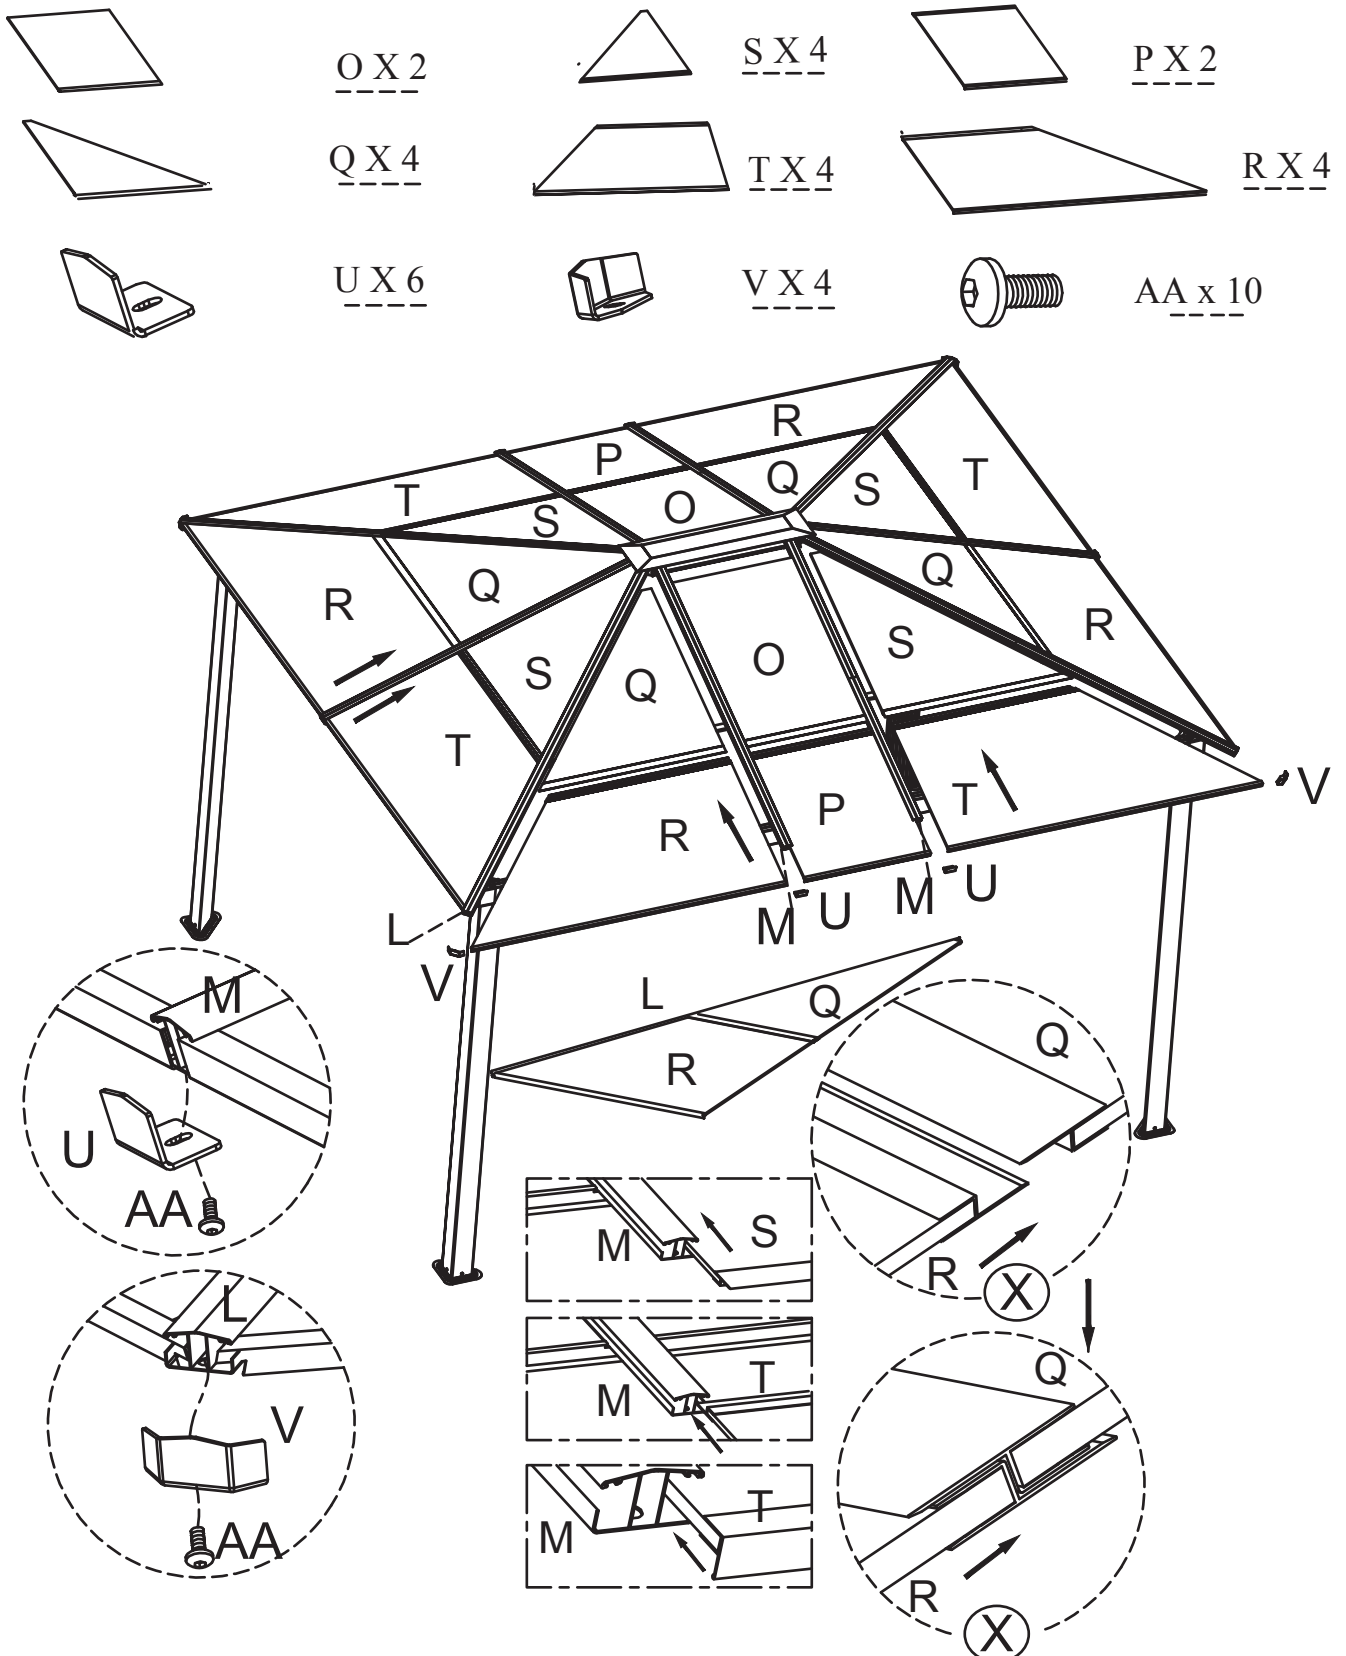



## Assembly Instructions

13. Hang the mosquito net (X) by hooks properly, then secure stakes (W) through base flange (B) into the ground.

Remove all gazebo assembly stickers.



W X 12  
-----

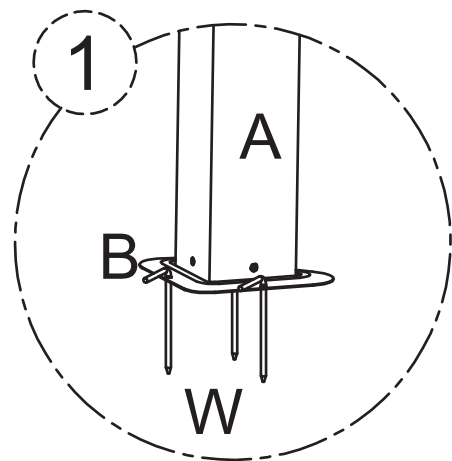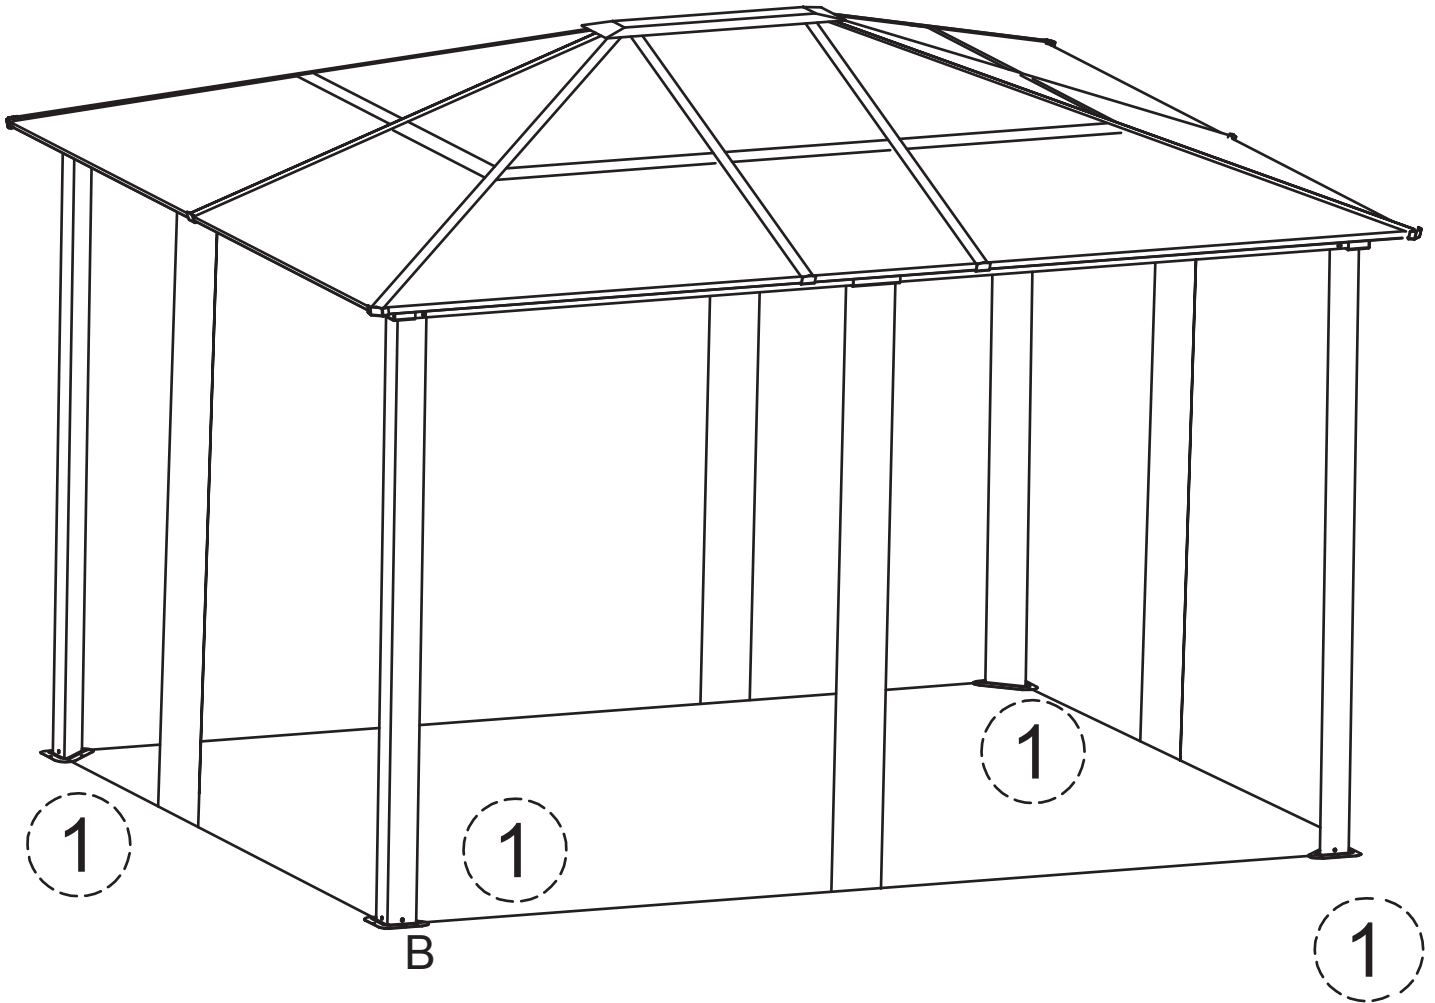



## BOND VAST INDUSTRIAL LIMITED

---



No. 174 Ding Tan Pi Tan Vill Lutsao Hsiang, Chla Yi Hsien, Tai Wan, ROC

FAX: 886-5-3651 522

CUSTOMER SERVICE HOT LINE: 1-800-961-9838

SERVICE HOURS: MONDAY - FRIDAY 9:00AM - 5:00PM (PACIFIC TIME)

E-MAIL: [CUSTOMERSERVICE@BONDVAST.COM](mailto:CUSTOMERSERVICE@BONDVAST.COM)



Please refer to part numbers when reordering

For questions or comments about product:

Email: [customerservice@bondvast.com](mailto:customerservice@bondvast.com) or Call toll-free: 1-800-961-9838

Made in / Hecho en CHINA for Kmart Corporation, Hoffman Estates, IL 60179

See our extensive assortment of outdoor living products  
on-line at [www.sears.com](http://www.sears.com) and [www.kmart.com](http://www.kmart.com)