DOREL ASIA



Toddler to Twin Convertible Bed

MODEL NO:

DA7229W (WHITE) DA7229E (ESPRESSO)

UPC CODE:

0-65857-16948-5 WHITE 0-65857-16947-8 ESPRESSO

NOTE:

THIS INSTRUCTION BOOKLET CONTAINS <u>IMPORTANT</u> SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

LOT NUMBER:

(TAKEN FROM CARTON)

DATE OF PURCHASE:

__/ _____/ ______/

NOT RETURN PRODUCT TO THE STORE.

If a part is missing or damaged, Contact our customer service department. We will replace the part FREE of charge.



Tel #: 1-800-295-1980 E-Mail: das@dorel.com Fax #: 514-353-7819

CUSTOMER SERVICE

If you are missing parts or have any questions about this product, contact our customer service representative first!



CALL 1-800-295-1980

You can also order parts by writing to the address listed below. Please include the product model number, color and a detailed description of the part.

Customer Service Department No. 413
12345 Albert-Hudon Boulevard, Suite 100
Montreal, Quebec
Canada, H1G 3L1

E-MAIL: das@dorel.com



WARNING ENTRAPMENT/STRANGULATION HAZARD:

- * Infants have died in toddler beds from entrapment and strangulation.
- * Failure to follow these warnings and assembly instructions could result in serious injury or death from entrapment or strangulation.
- * NEVER use bed with children under 15 months.
- * The TODDLER BED is not intended for children under 15 months of age or over 50 pounds (22.7kg).
- * If guardrails are used as the mattress containment means, guardrail(s) provided must be used to avoid the formation of a gap between the mattress and the bed that could cause an entrapment.
- * DO NOT place TODDLER BED near windows where cords from blinds or drapes may strangle a child.
- * DO NOT place items with a string, cord, or ribbon around a child's neck, such as hood strings or pacifier cords.
- * DO NOT suspend strings over a TODDLER BED for any reason.
- * When assembled as a toddler bed, any mattress used must be at least 27-1/4 inches by 51-5/8 inches (69cm by 131cm) with a minimum thickness of 4 inches (10cm) and not exceeding 6 inches (15cm).
- * When assembled as a twin size bed, use only a coil spring twin size mattress.

NOTES

- * Ensure all parts and components are present before beginning assembly.
- * Phillips head screwdriver is not included.
- * Assembly will require 2 people.
- * Estimated assembly time: 45 minutes.
- * DO NOT use power tools.
- * Caution: Adult assembly required.
- * DO NOT lift bed from side rails when moving. Raise from headboard and footboard when moving bed.
- * STORE ALL UNUSED PARTS IN A DRY PLACE FOR FUTURE USE.

CARE AND CLEANING

Dust regularly with a soft, lint-free cloth to prevent soil build-up. A damp cloth may be used occasionally to clean surface. Dry immediately. Do not use any abrasives that may damage finish. Excessive exposure to sunlight and extreme changes in temperature and moisture can damage wood furniture.

MAINTENANCE

Check bolts periodically and tighten if necessary.

LIMITED WARRANTY


Dorel Asia warrants its product to be free from defects in material and workmanship and agrees to remedy any such defect. This warranty covers 1 year from the date of original purchase. This warranty is valid only upon presentation of proof of purchase. This is solely limited to the repair or replacement of defective furniture components and no assembly labor is included. This warranty does not apply to any product which has been improperly assembled, subjected to misuse or abuse or which has been altered or repaired in any way. This warranty gives you specific legal rights and you may also have other rights which vary from State to State.

WARNING: Should this product become damaged, and/or components are broken or missing, DO NOT USE.

HARDWARE LIST

1	2		
Ф 1/4" x 90mm	Ф 1/4" x 45mm		
BOLTS			
22 PCS	BOLTS 14 PCS		
3	4		
Ф 1/4" x 32mm	Ф 11.8mm x 15mm		
BOLTS 8 PCS	BARREL NUT 12 PCS		
5	6		
	B		
Ф 8mm x 30mm	Ф 9mm x 17mm		
WOOD DOWEL 18 PCS	HEX CAP 8 PCS		
7	8		
Ф 1/4" x 135mm	Ф 10mm x 50mm		
BOLTS 4 PCS	WOOD DOWEL 8 PCS		
9 (Χ)	10		
FLAT HEAD SCREW 6 PCS	HEX KEY 1 PC		

PARTS LIST

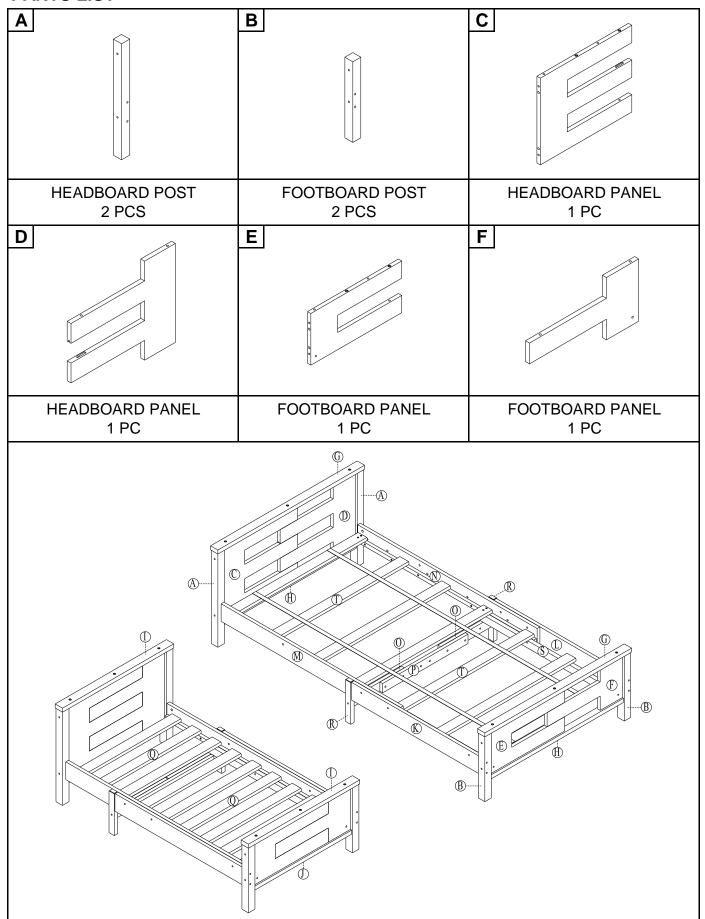

PARTS LIST


G	H	
TWIN BED TOP RAIL 2 PCS	TWIN BED BOTTOM RAIL 2 PCS	TODDLER BED TOP RAIL 2 PCS
J	K	
TODDLER BED BOTTOM RAIL 2 PCS	SHORT SIDE RAIL 1 PC	SHORT SIDE RAIL 1 PC
M		0
LONG SIDE RAIL 1 PC	LONG SIDE RAIL 1 PC	SHORT CROSSPIECE 2 PCS
P	Q	R
LONG CROSSPIECE 1 PC	TODDLER BED SLAT 9 PCS	SUPPORT POST 2 PCS
S	T	
SUPPORT BAR 2 PCS	TWIN BED SLATS 1 PC	

STEP 1

Slide headboard panel (C) into headboard panel (D). Make sure the raised edges go into the grooves on headboard panels (C & D).

Secure the headboard panels (C & D) using bolts (7) and hex key (10) as shown.


Attach the toddler bed top rail (I) and toddler bed bottom rail (J) to the headboard panels (C & D) using bolts (2) and hex key (10).

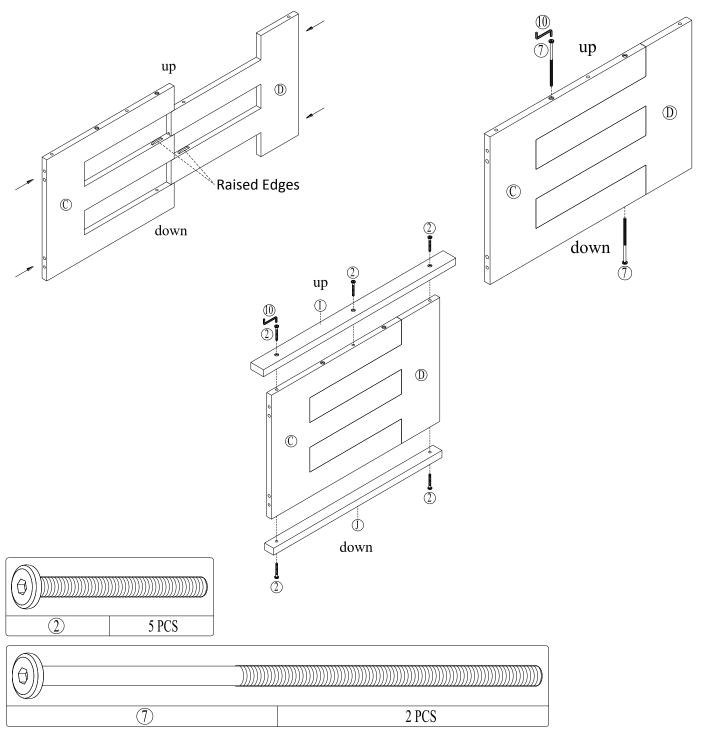

STEP 2

Slide footboard panel (E) into footboard panel (F). Attach the footboard panels (E & F) using bolts (7) and hex key (10).


Attach the toddler bed top rail (I) and toddler bed bottom rail (J) to the footboard panels (E & F) using bolts (2) and hex key (10).

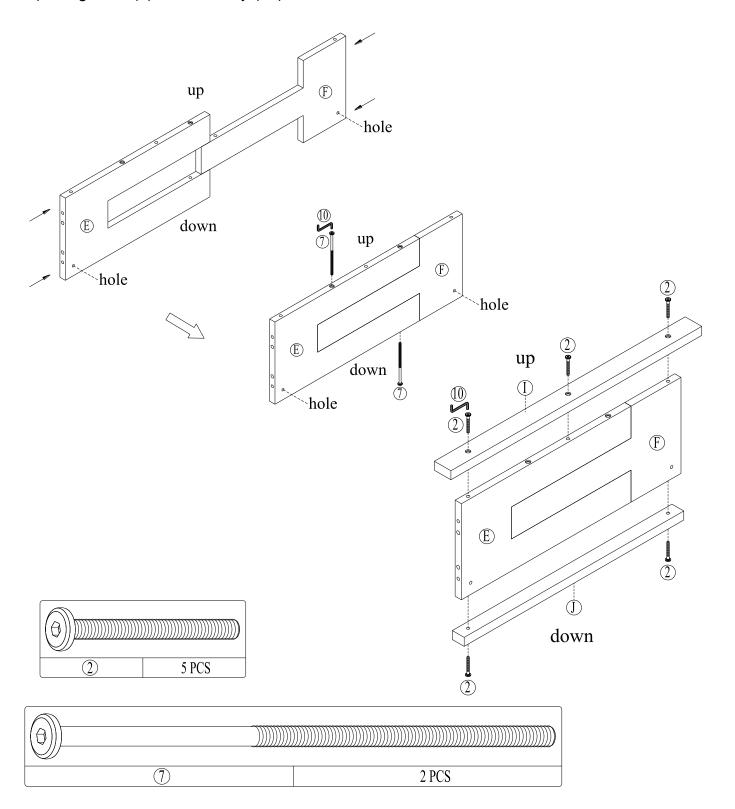

STEP 3

Insert wood dowels (8) into the holes of the headboard panels (C & D) and footboard panels (E & F).

Attach headboard posts (A) to the headboard panels (C & D) and footboard posts (B) to footboard panels (E & F) using bolts (1) and hex key (10) as shown.

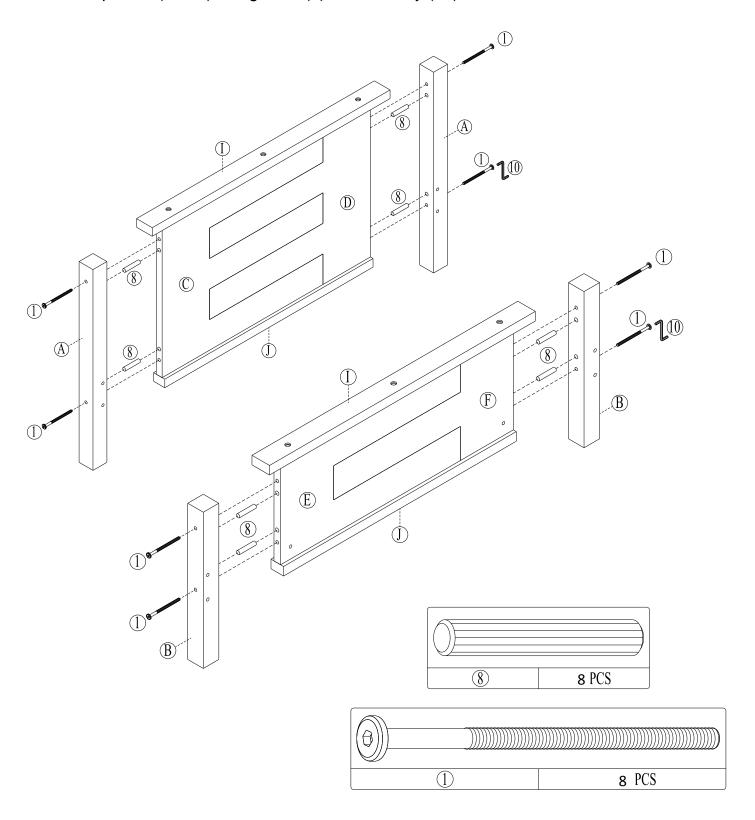


STEP 4

Insert barrel nuts (4) into both ends of the short side rails (K & L).

Attach short side rails (K & L) to support posts (R) and footboard posts (B) using bolts (1) and hex key (10) as shown.

Use a Philips head screwdriver (not included) to rotate the barrel nuts to align with bolts (1).


NOTE: Support posts (R) must be attached so that they are flush with short rails (K & L) from the inside.

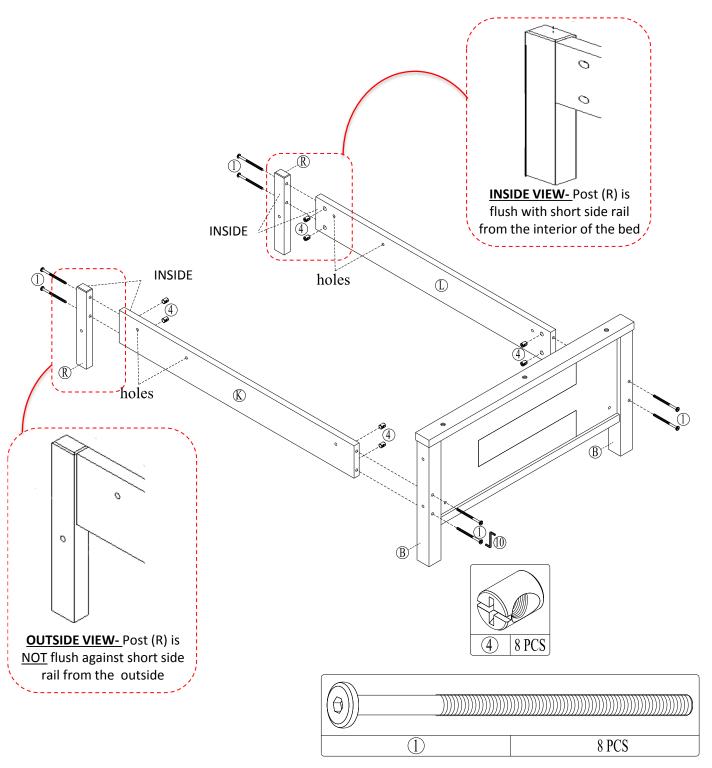

STEP 5

Attach the short crosspieces (O) to long crosspiece (P) using hex caps (6), bolts (3) and hex key (10) as shown below.


Attach the short crosspieces (O) to the support posts (R) using bolts (2) and hex key (10).

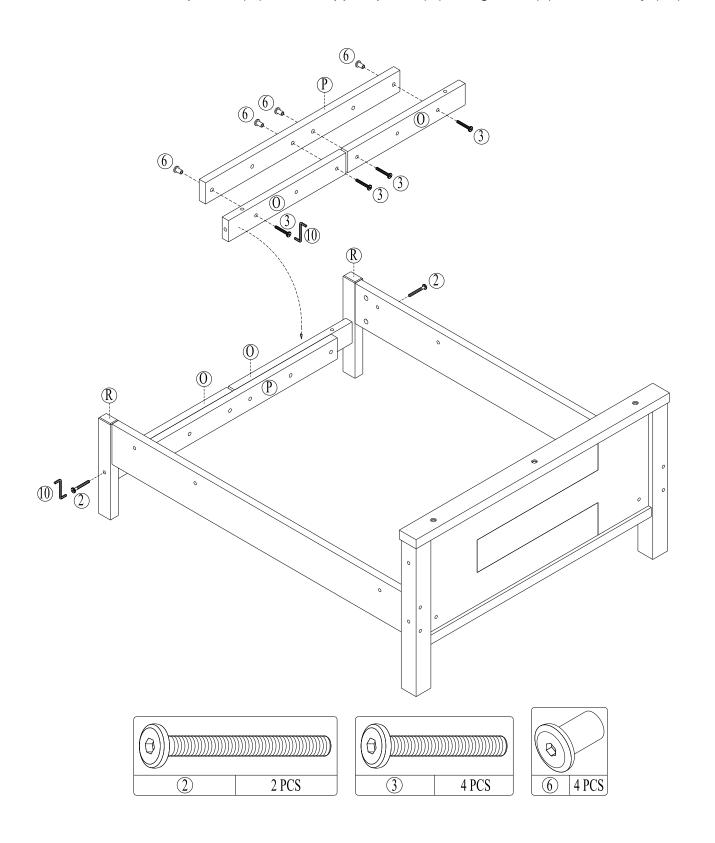



STEP 6

Attach the support bars (S) to the footboard panels (E & F) using bolts (2), and to short crosspieces (O) using bolts (1) as shown.

Use hex key (10) to tighten all bolts.

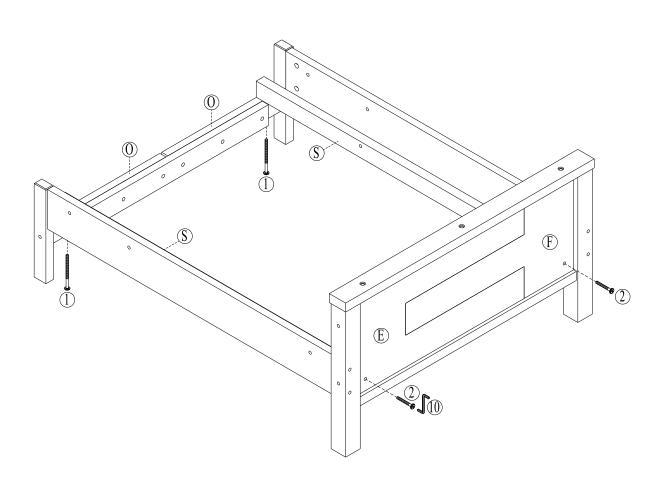






STEP 7

Insert barrel nuts (4) into ends of the long side rails (M & N).

Attach the long side rails (M & N) to headboard posts (A) with bolts (1) and hex key (10).


Use a Philips head screwdriver (not included) to rotate barrel nuts (4) to align with bolts (1).


NOTE: Do not fully tighten the bolts(1). This will facilitate assembly in the following steps.

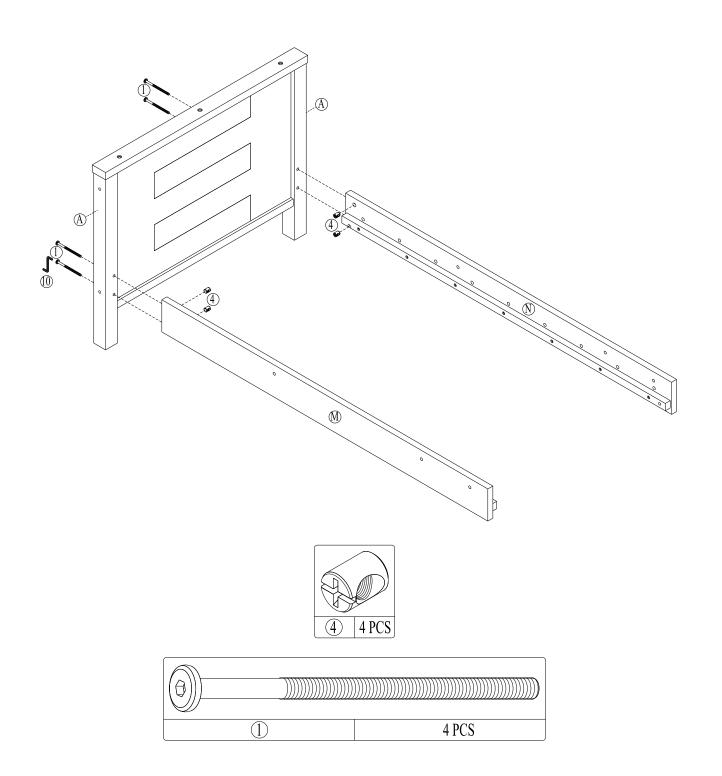

STEP 8

Insert wood dowels (5) into ends of the toddler bed slats (Q) as shown. Insert the toddler bed slats (Q) between long side rails (M & N). Ensure the wood dowels (5) go into the holes on long side rail (M & N).

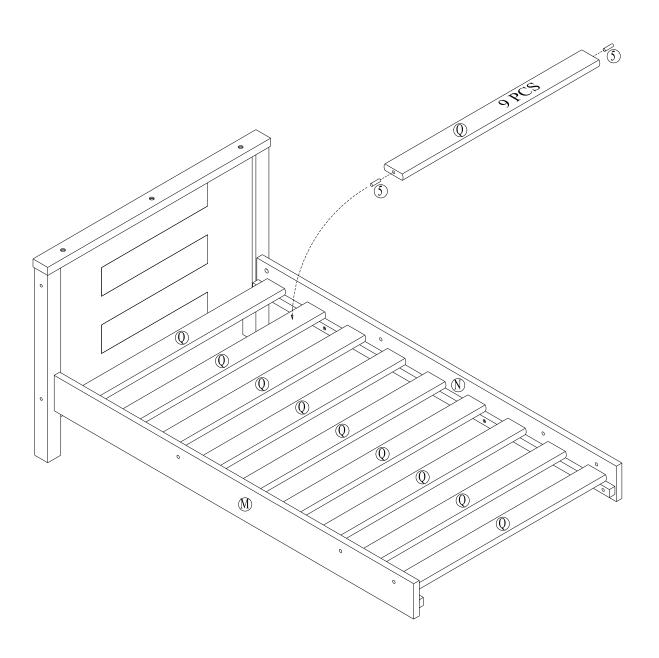




STEP 9


Place the headboard assembly (with the long side rails and slats) over the footboard assembly (with the short side rails and crosspieces).

Attach the long side rails (M & N) to the short side rails (K & L) using bolts (3) and hex caps (6) as shown below with hex key (10).

That's it! You've finished assembling your toddler bed.

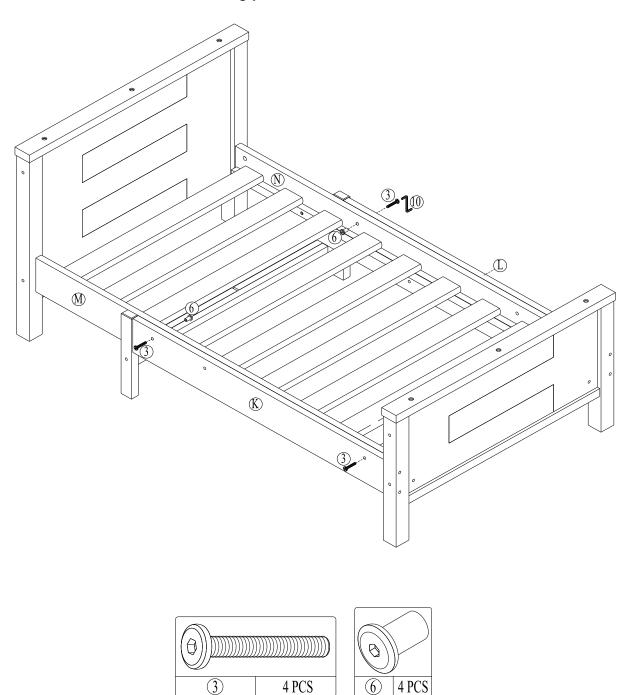


TWIN BED CONVERSION

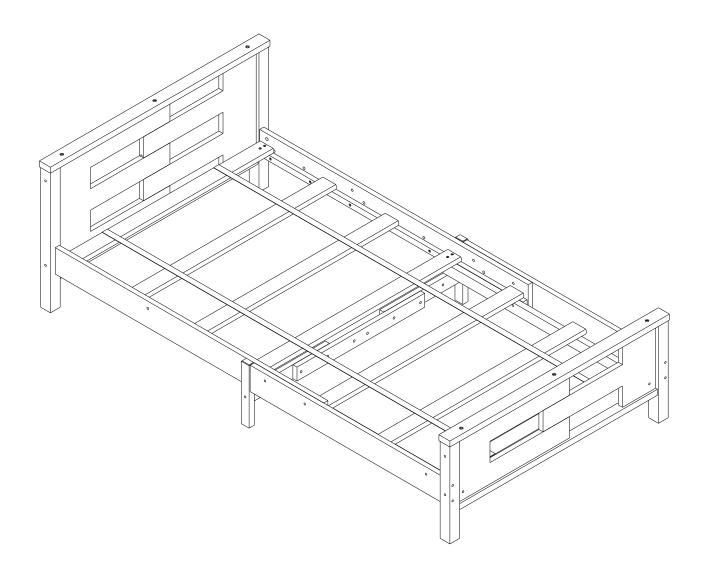

The patent pending design of the Baby Relax convertible bed allows you to transform your toddler bed into a twin size bed! Carefully follow the following steps to convert your bed.

STEP 10

Loosen the bolts (2) to remove the top and bottom rails (I & J) from the headboard and footboard with hex key (10).

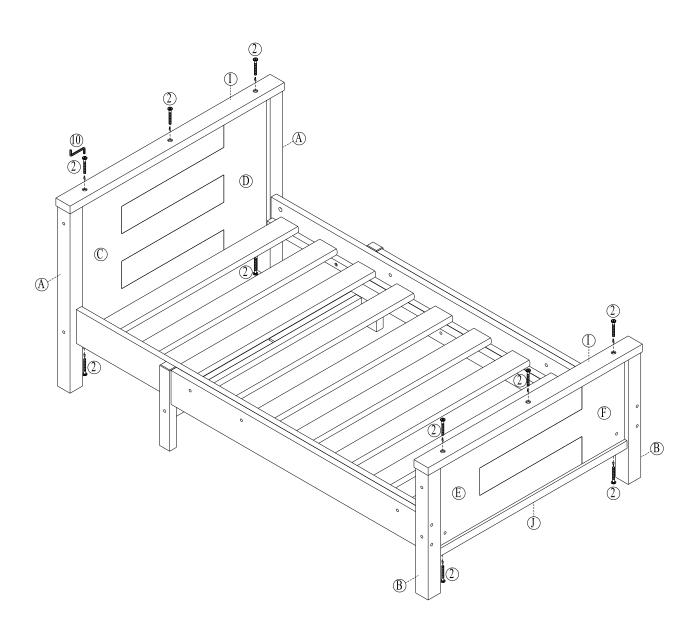


STEP 11

Remove bolts (7) from the headboard panels (C & D) and footboard panels (E & F) using hex key (10). Detach long crosspiece (P) from short crosspieces (O) by removing bolts (3) and hex caps (6) using hex key (10).

Once long crosspiece (P) is detached, slightly extend the headboard and footboard and remove toddler bed slats (Q) and wood dowels (5).

Once slats (Q) are removed, extend the headboard and footboard panels, while ensuring they don't slide

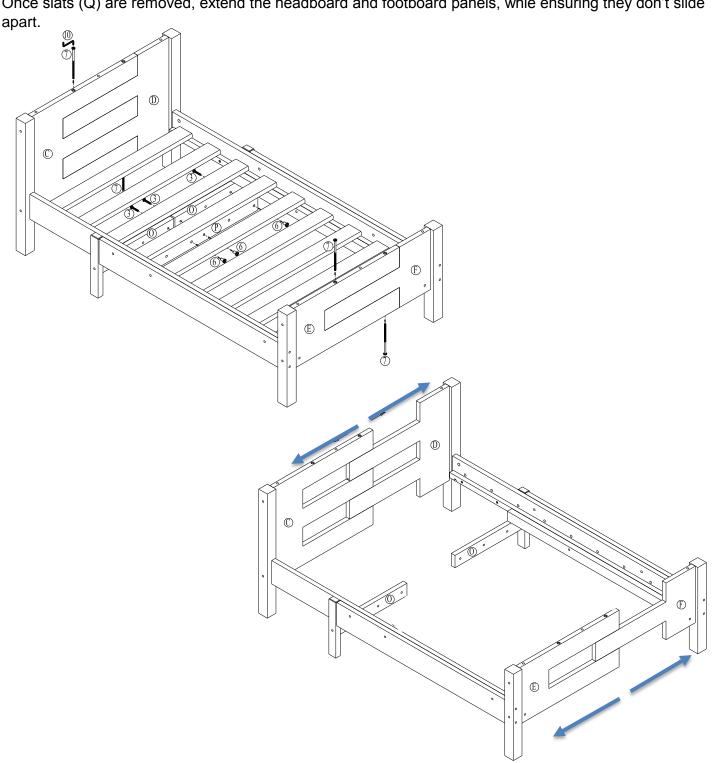


STEP 12

Slide the 2 halves of the bed so that the holes in long crosspiece (P) align with the holes in the 2 short crosspieces (O), as shown below. Attach long crosspiece (P) to short crosspieces (O), using bolts (3) and hex caps (6). Use hex key (10) to tighten bolts.

Attach twin bed top rails (G) and twin bed bottom rails (H) to the headboard and footboard assemblies, using bolts (7) and bolts (2) as shown. Use hex key (10) to tighten bolts.

NOTE: The bolts on posts (A & B) may need to be loosened to facilitate attachment of bottom rails (H).


It may be easier to place the bed on its side to attach some of the bolts.

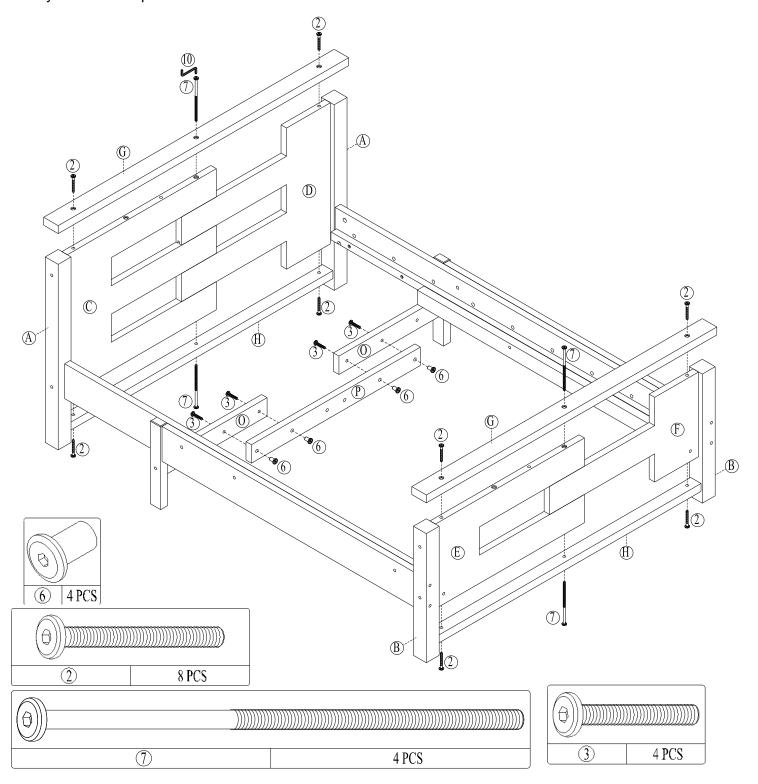

STEP 13

Remove bolts (3) and hex caps (6) from the short and long side rails (K & M) and (L & N) with hex key (10) as shown below.


Extend the short and long side rails (K & M) and (L & N) to the length of a twin size bed.

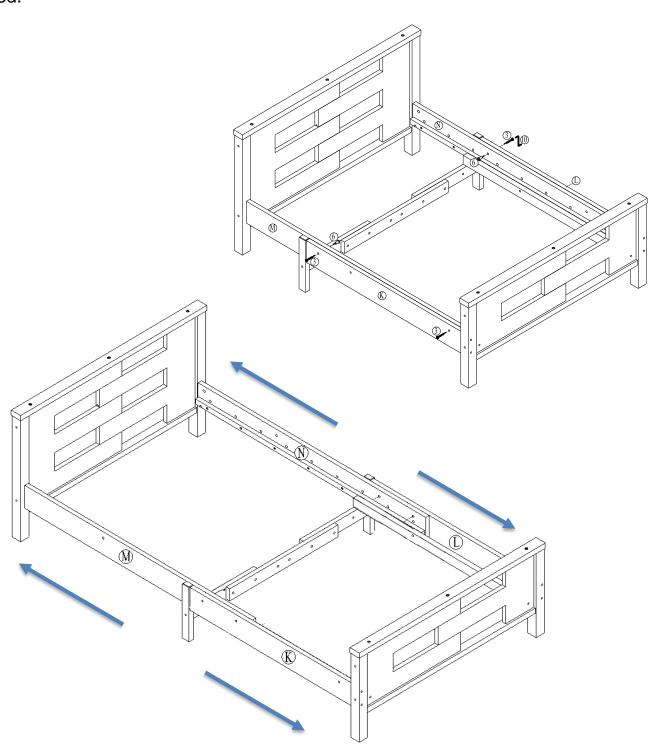

STEP 14

Align the holes in short side rail (K) with long side rail (M) and short side rail (L) with long side rail (N), and use bolts (3) and hex caps (6) to attach them together. Use hex key (10) to tighten the bolts.

Secure support bars (S) to the long side rails (M & N), using bolts (2). Use hex key (10) to tighten the bolts.

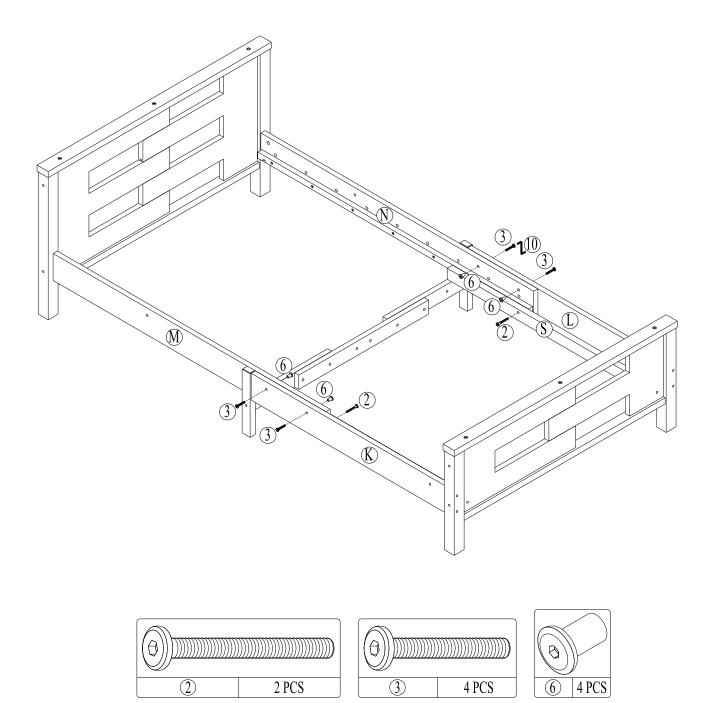



STEP 15

Attach the twin bed slats to the assembled frame with flat screws (9) as shown below using a Philips head screwdriver (not included).


NOTE: Make sure that the slats at both ends are attached as close to the headboard/ footboard as possible.

That's it! You've finished assembling your twin bed.

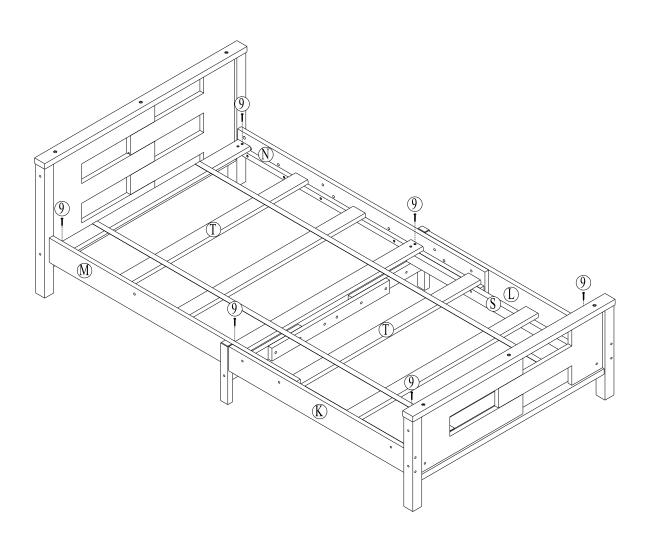



! CAUTION This unit is intended for use only with the products and/or maximum weights indicated. Use with other products and/or products heavier than the maximum weights indicated may result in instability or cause possible injury.

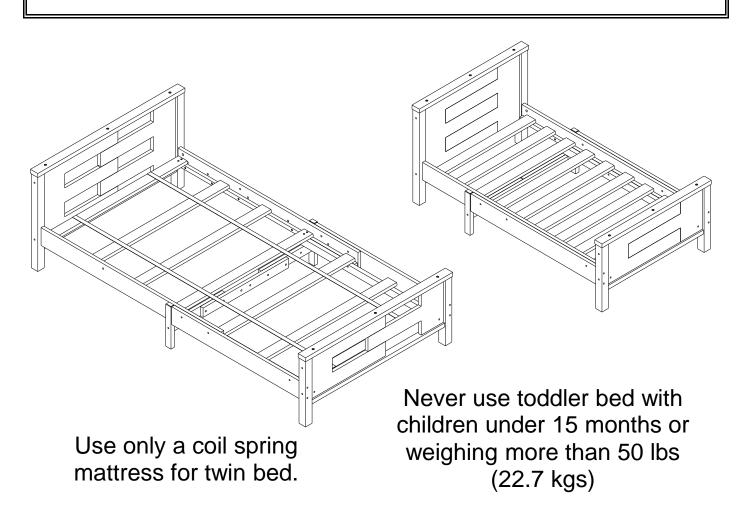

DO NOT RETURN PRODUCT TO THE STORE.

If a part is missing or damaged, contact our customer service department. We will replace the part **FREE** of charge.



Tel #: 1-800-295-1980 E-Mail: das@dorel.com Fax #: 514-353-7819

Customer Service

PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE

PLEASE CONTACT CUSTOMER SERVICE REPRESENTATIVES AT THE FOLLOWING NUMBERS SHOULD THERE BE ANY MISSING OR DEFECTIVE PART(S).

	Service Phone Number 1-800-295-1980 Service Fax Number 514-353-7819	Email: das@dorel.com
Request Date:		
Name:		
Shipping Address:		
Street & Number:		
Street & Number.		
City & State:		
Zip Code:		
Day Time Phone Number:		
(including area code)		
,		
Date & Place of Purchase:		
	Part/a) description and quantity: /Places he gure to list model to	aumhar ar CKN numhar)
	Part(s) description and quantity: (Please be sure to list model r	