

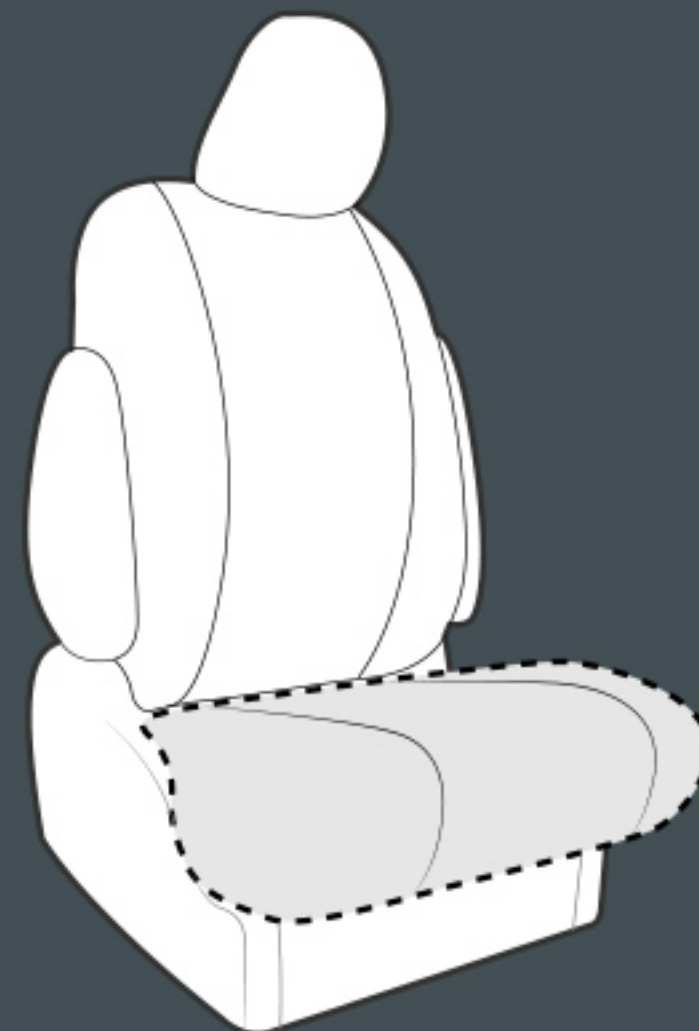
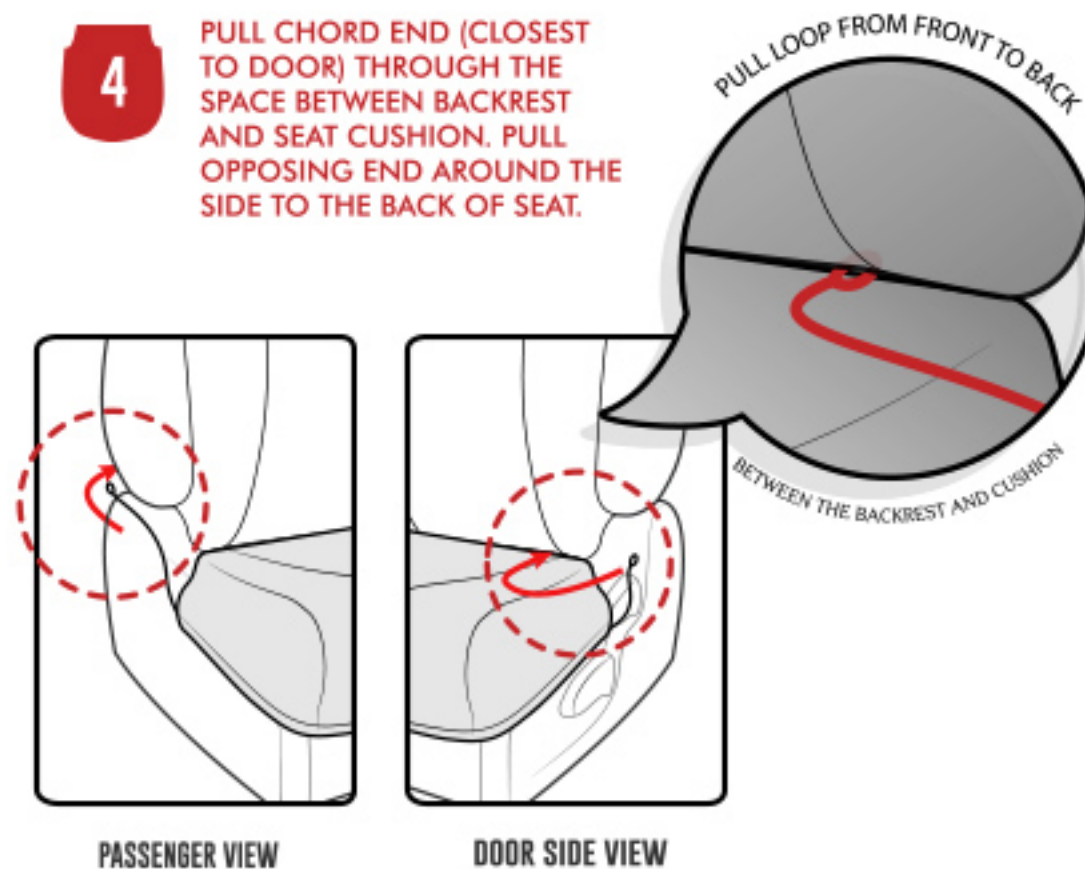
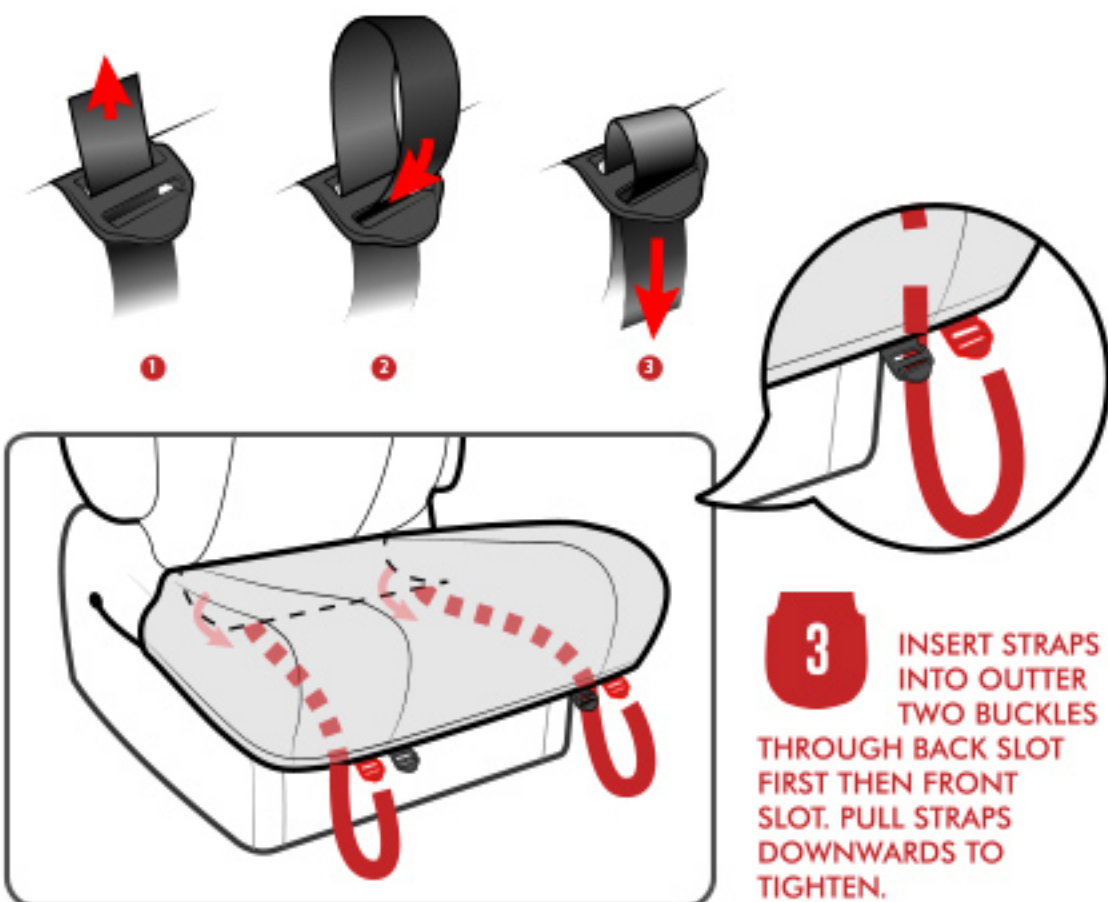
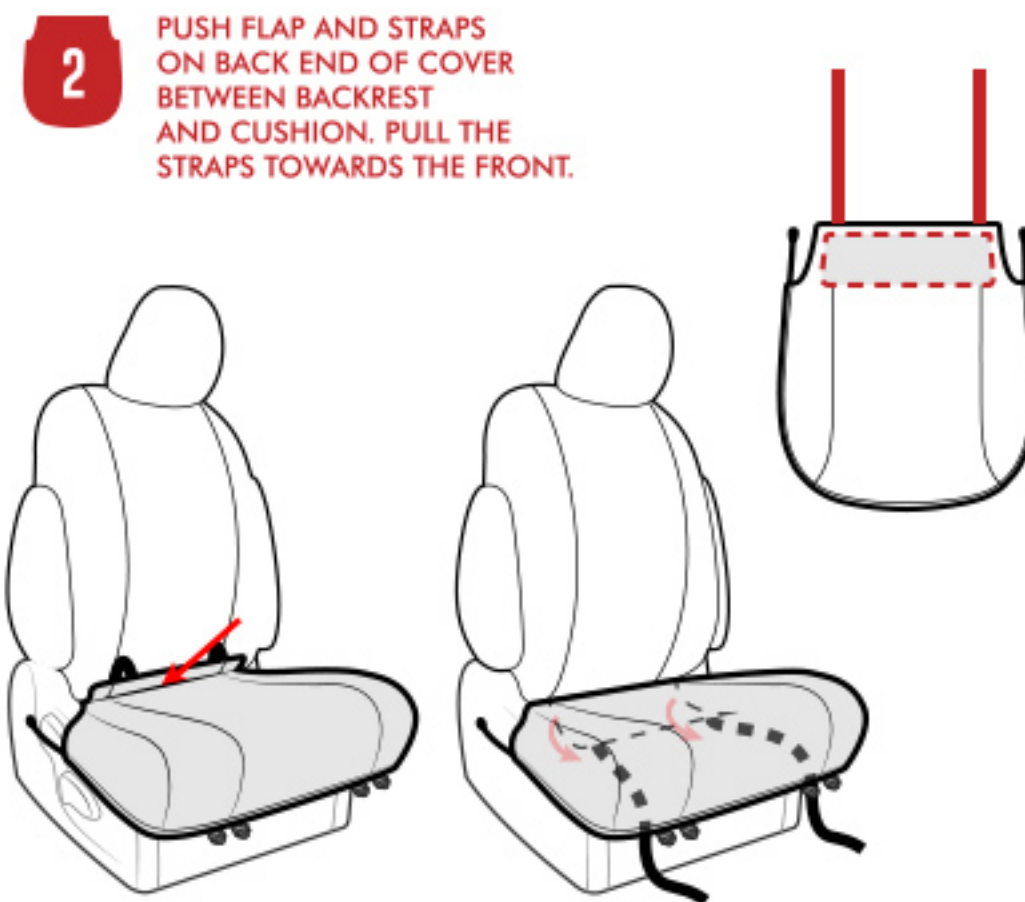
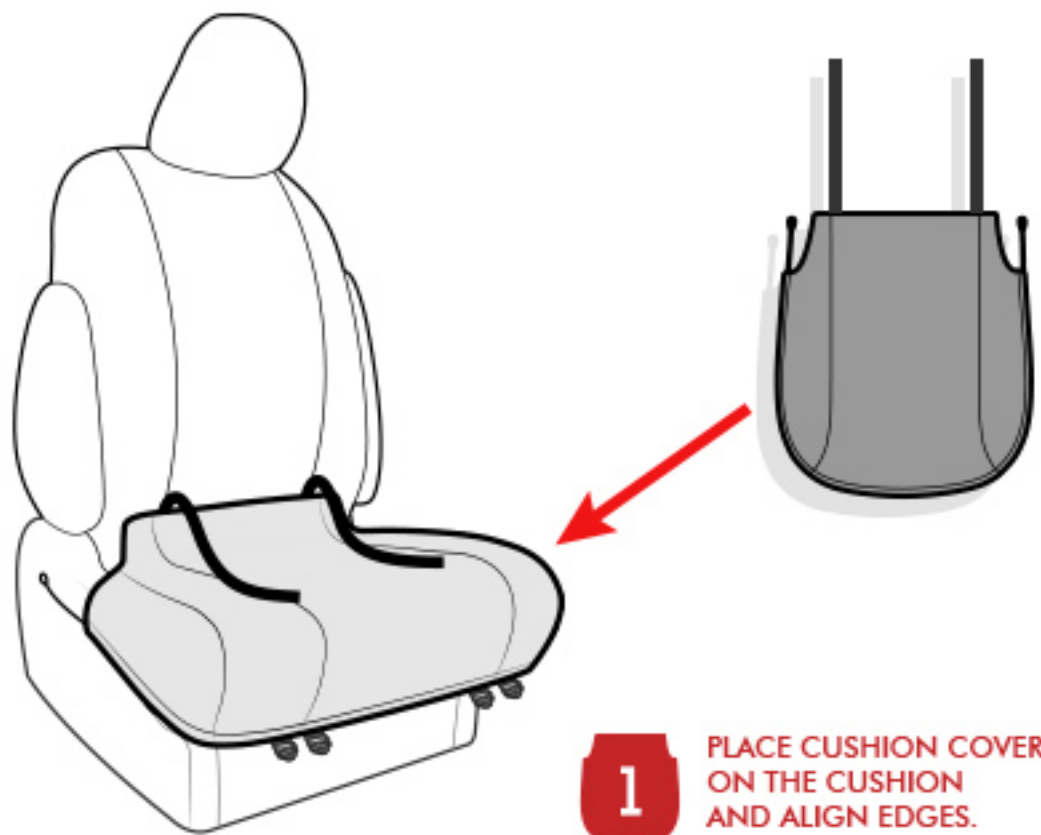


SEAT COVER INSTALL MANUAL

BUCKET SEATS

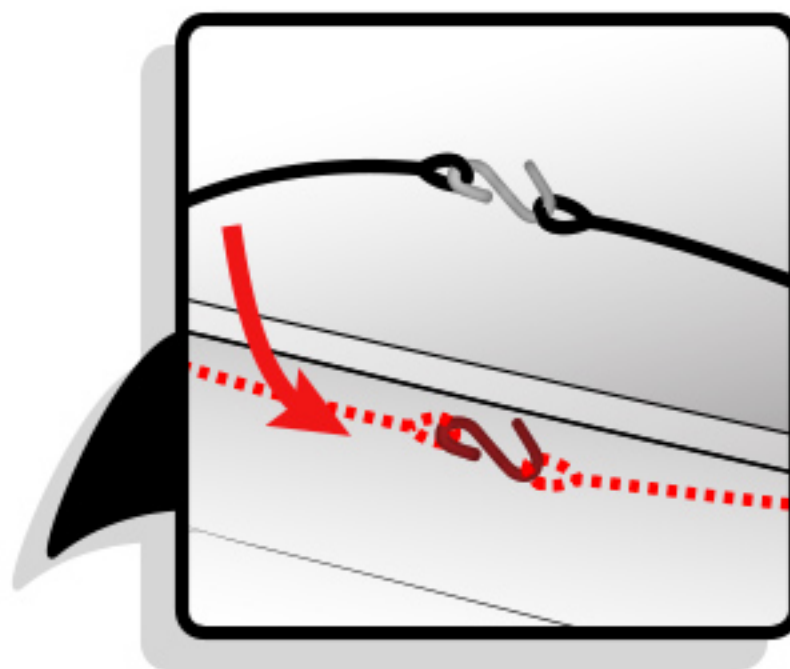


**CUSHION
COVER**

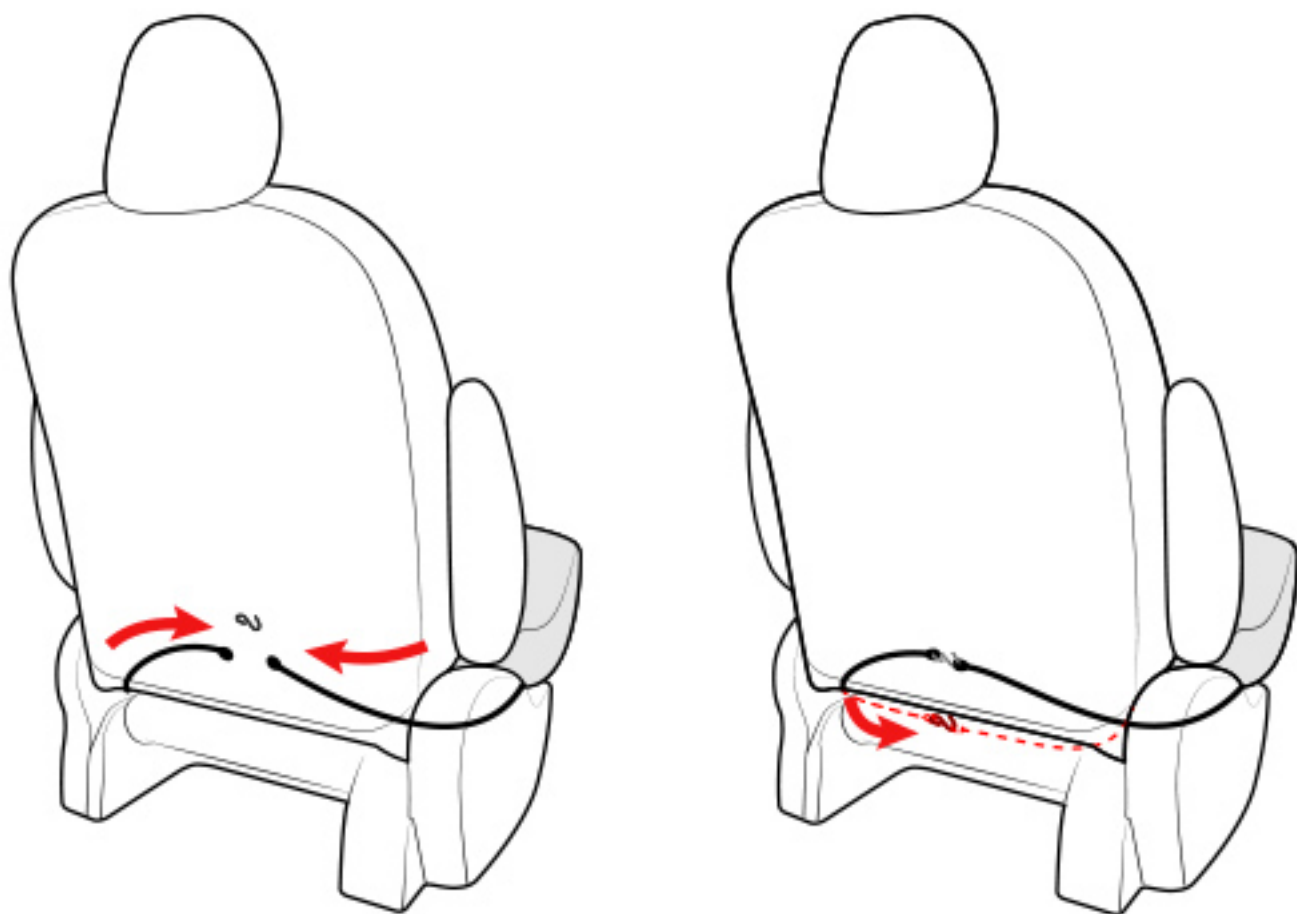

5


CONNECT BOTH ENDS OF THE CHORD WITH AN "S" HOOK, AND THEN TUCK THE CHORDS UNDER THE BOTTOM RIDGE OF THE BACKREST.

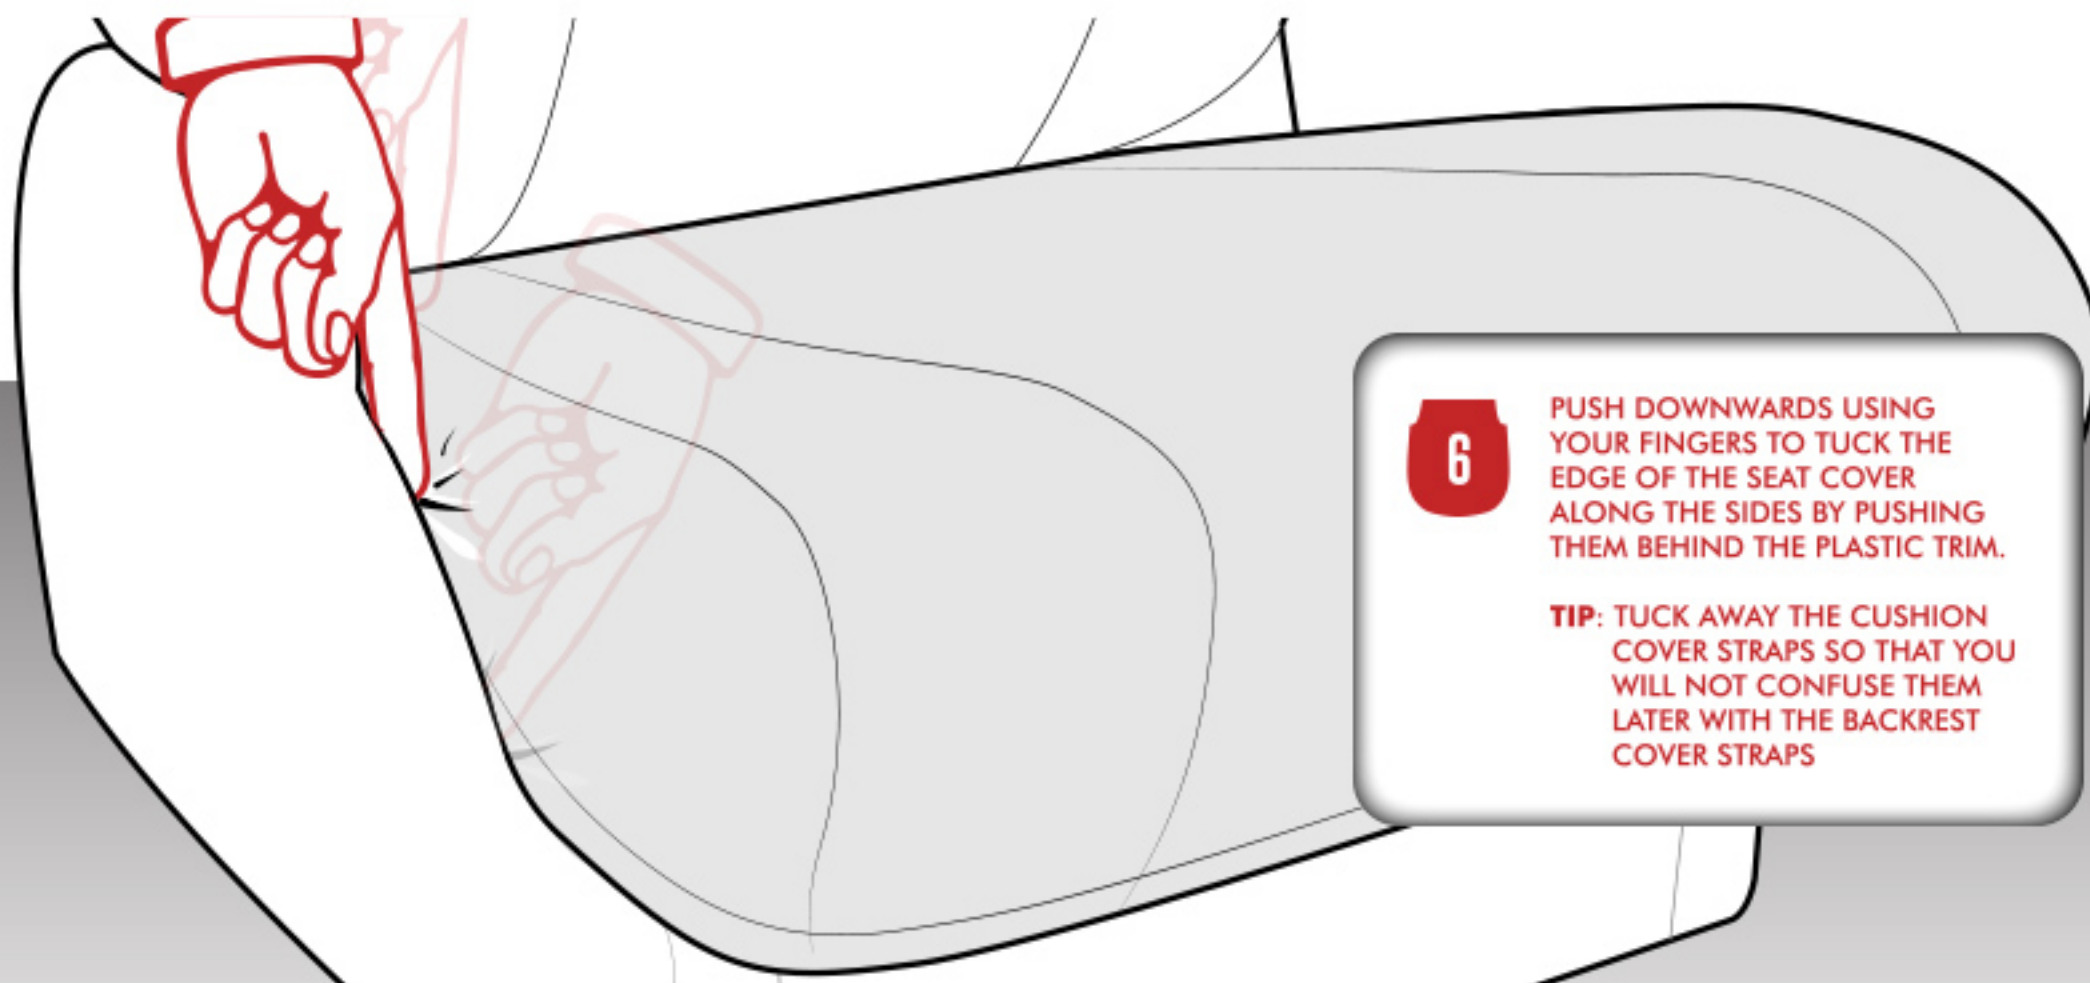

6

PUSH DOWNWARDS USING YOUR FINGERS TO TUCK THE EDGE OF THE SEAT COVER ALONG THE SIDES BY PUSHING THEM BEHIND THE PLASTIC TRIM.

TIP: TUCK AWAY THE CUSHION COVER STRAPS SO THAT YOU WILL NOT CONFUSE THEM LATER WITH THE BACKREST COVER STRAPS

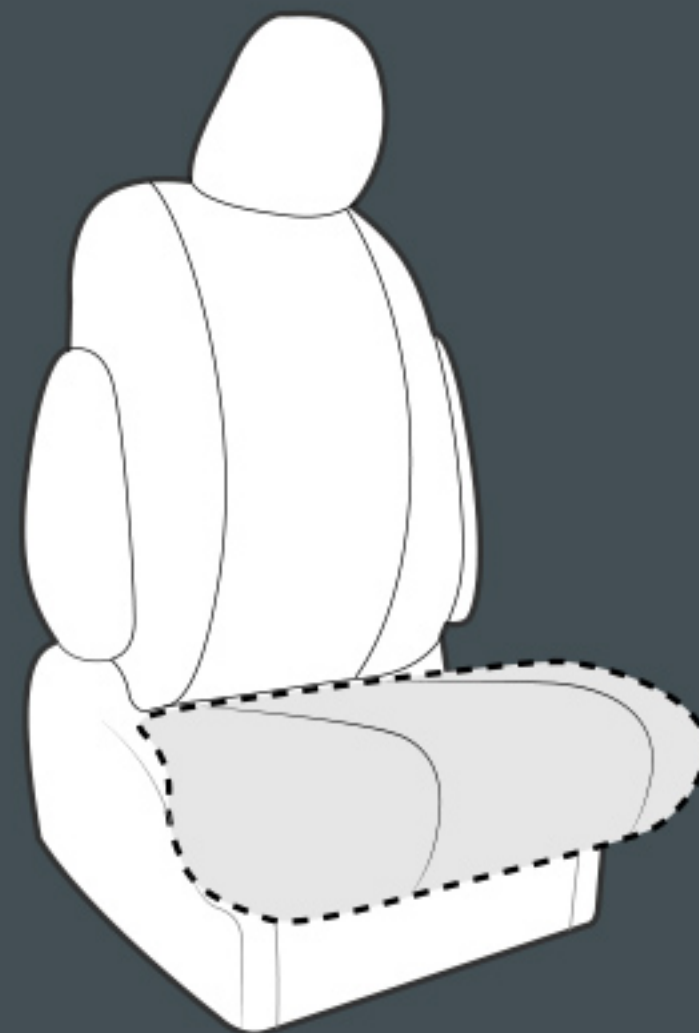


CUSHION
COVER

WITH BIB

The bib is fabric blocking anything from passing through between the backrest and the cushion to the back.


STEPS 2 & 3

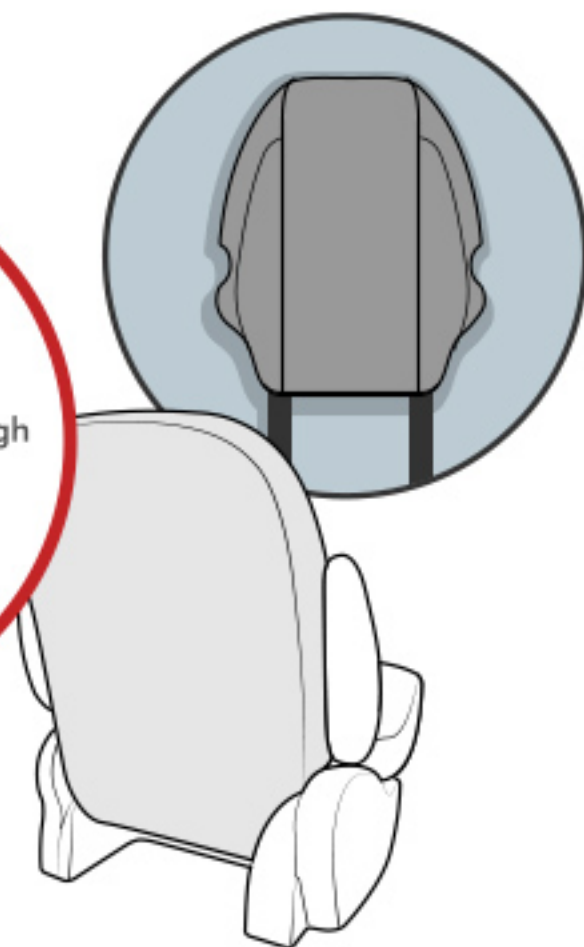

NO BIB


If your hand can pass through the space between the backrest and the cushion, there is no bib.

STEP 4

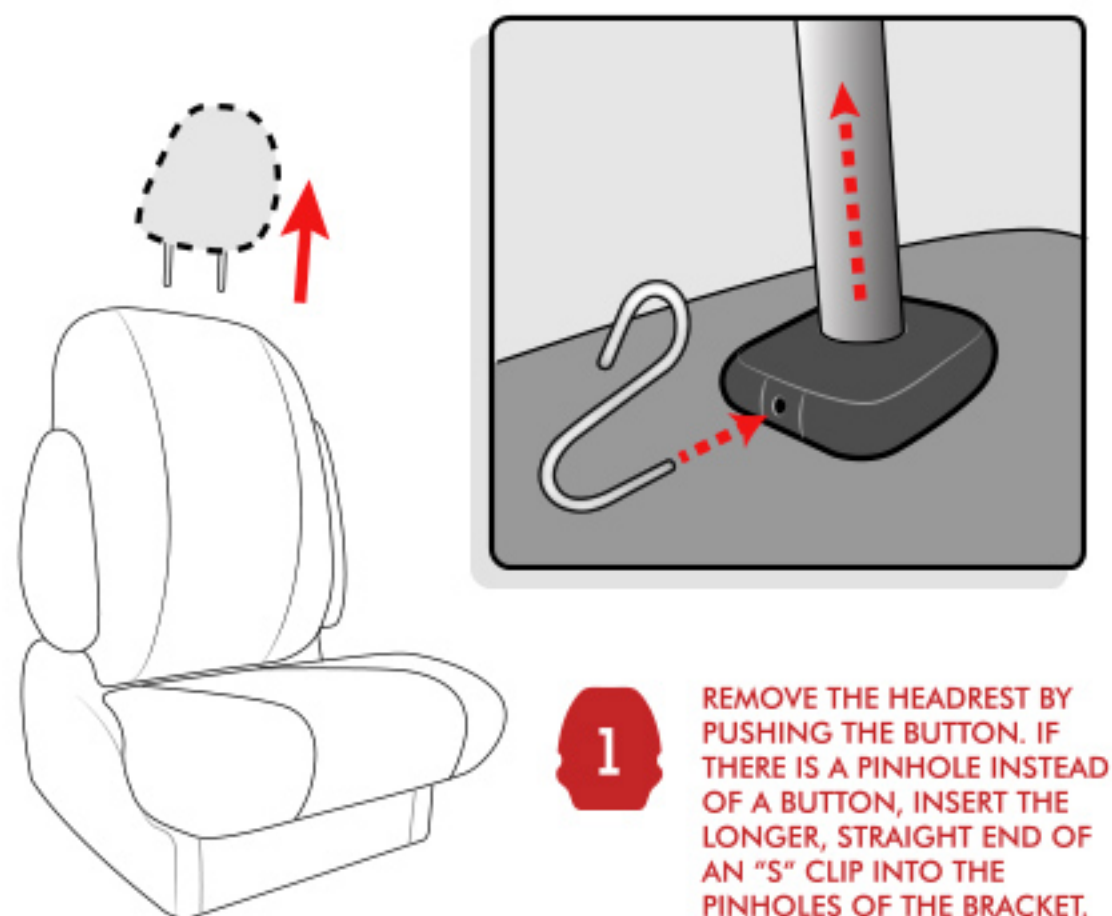

1




REMOVE THE HEADREST BY PUSHING THE BUTTON. IF THERE IS A PINHOLE INSTEAD OF A BUTTON, INSERT THE LONGER, STRAIGHT END OF AN "S" CLIP INTO THE PINHOLES OF THE BRACKET.

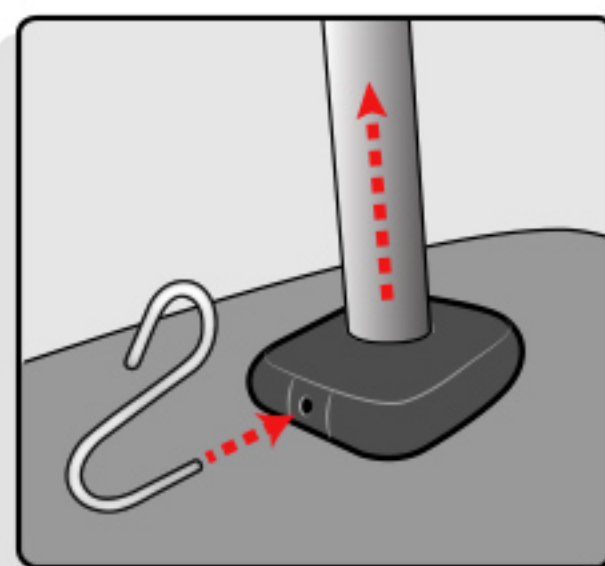

(WITH BIB)

2

PULL BACKREST COVER OVER BACKREST OF SEAT AND PUSH STRAPS BETWEEN BACKREST AND CUSHION. THEN PULL STRAPS TOWARDS FRONT FROM UNDERNEATH SEAT.

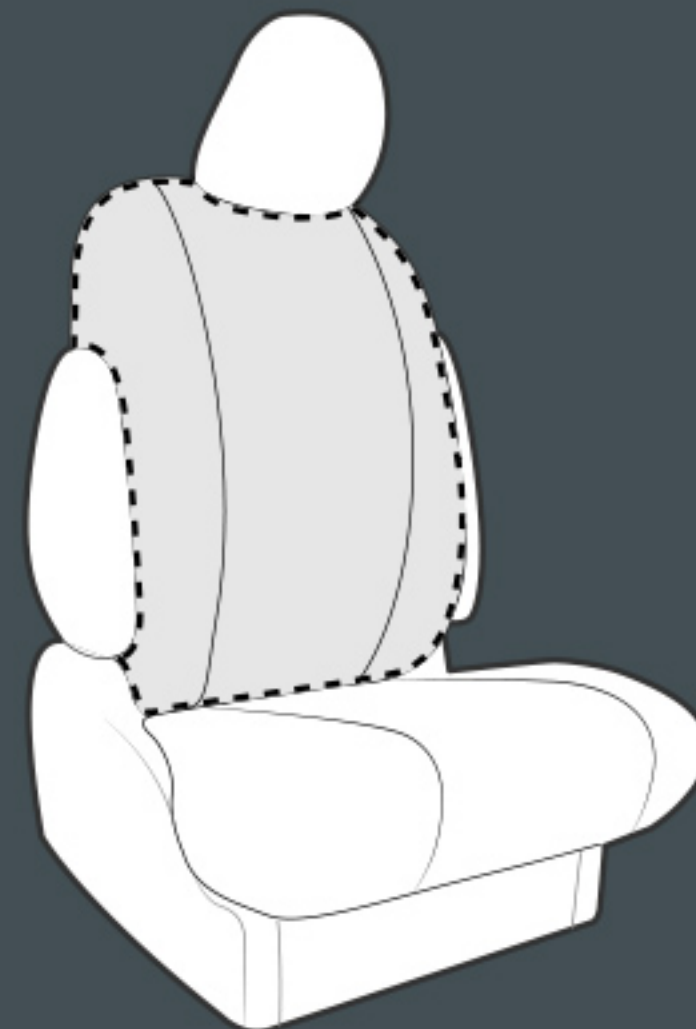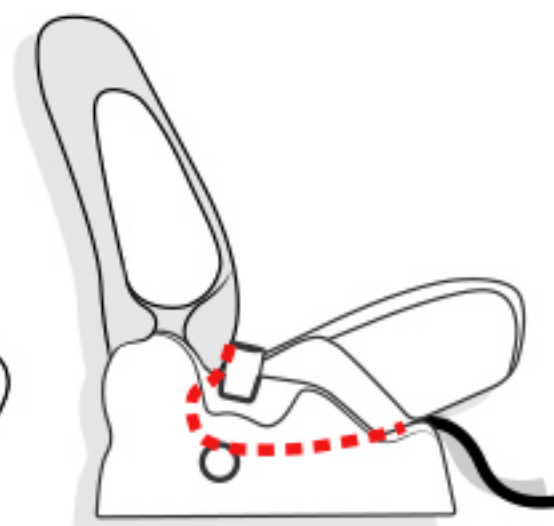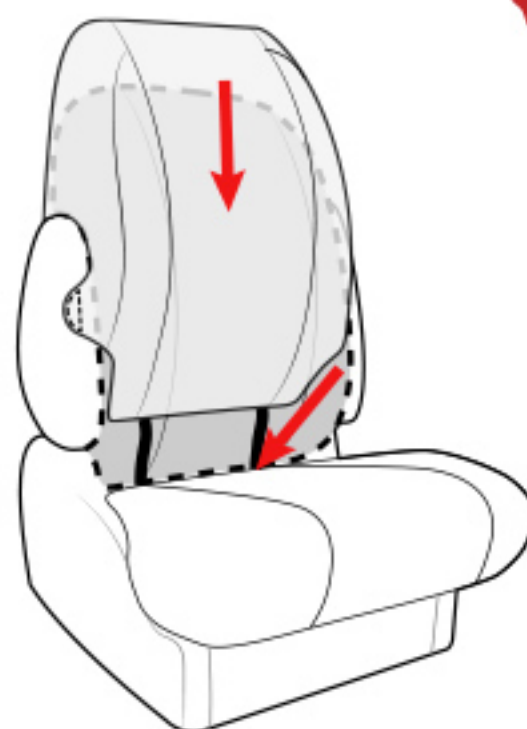


BACKREST COVER

(WITH BIB)

3

INSERT BACKREST STRAPS INTO THE INNER BUCKLES AND PULL THEM DOWN TO TIGHTEN. PUSH DOWNWARDS ON THE FRONT OF THE COVER WHILE TIGHTENING.





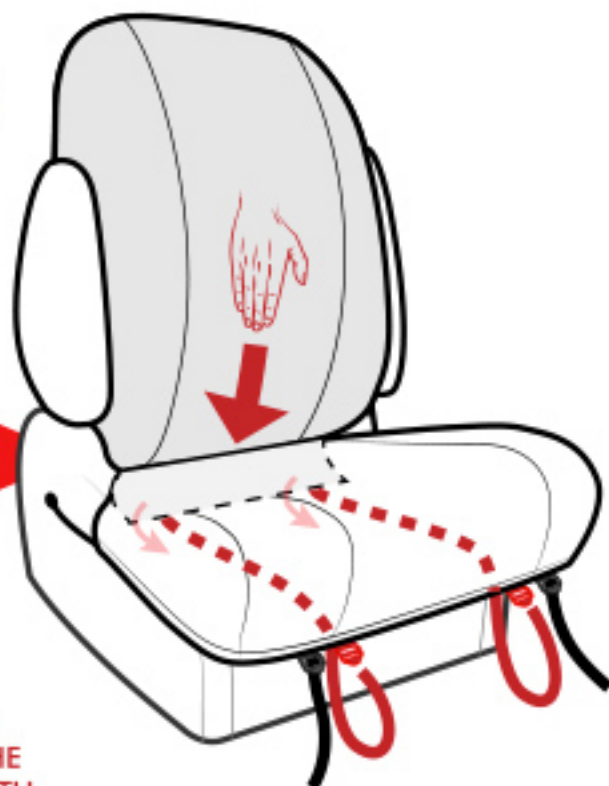


AT THE REAR OF THE COVER, HOLD THE BACK FLAP DOWN BY HOOKING ELASTICS TO THE LISTING UNDER CUSHION WITH "S" HOOKS.

(NO BIB)

4

SMOOTH OUT WRINKLES WHILE PULLING BOTTOM VELCRO TAB BEFORE STICKING THE VELCRO TABS TOGETHER.

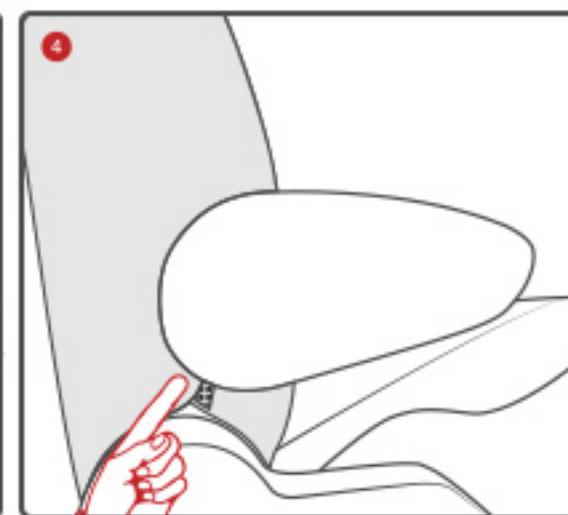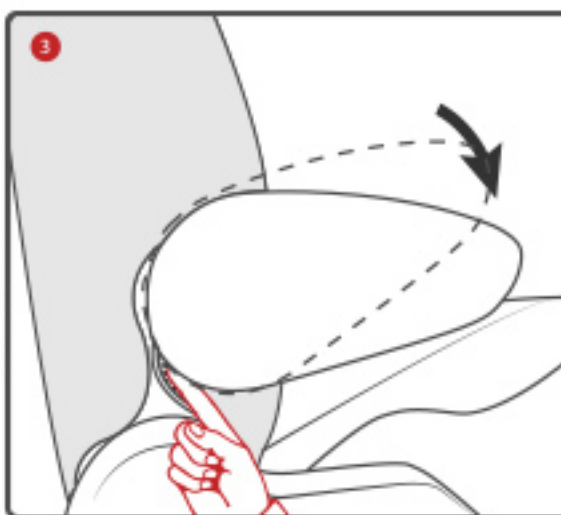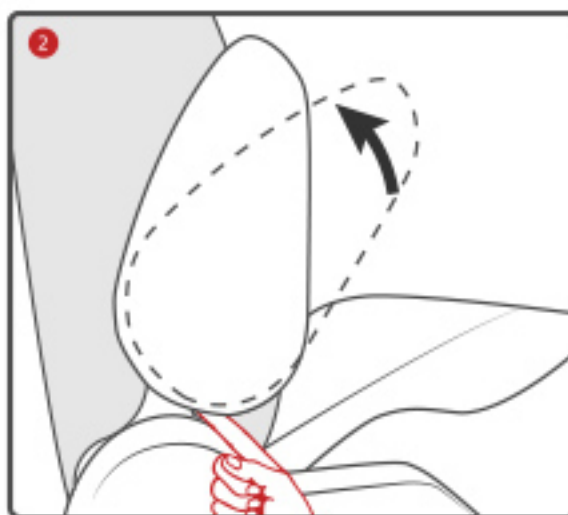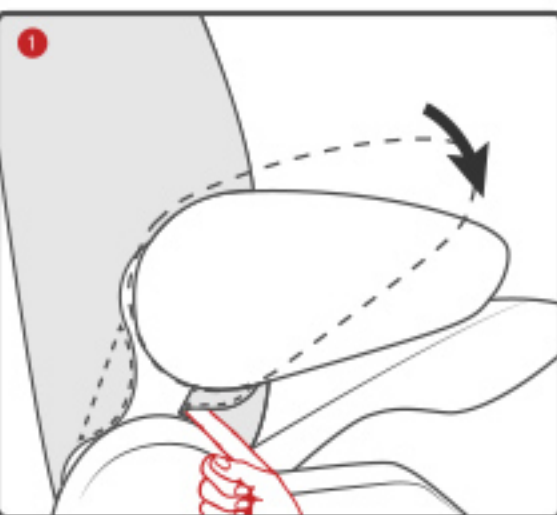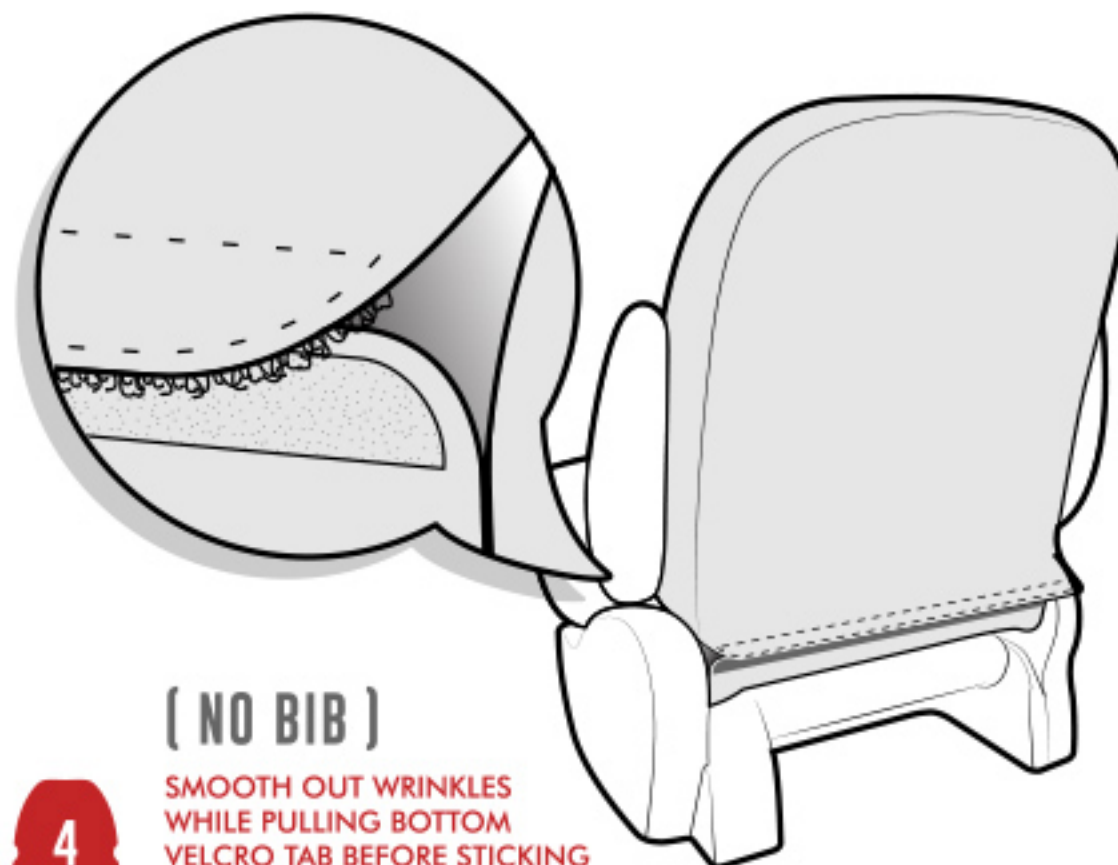


OR





5

USE YOUR FINGER / RULER, OR ANY SUITABLE ITEM, AND PUMP THE ARMREST UP AND DOWN WHILE PUSHING THE VELCRO TABS INTO THE ARM REST CREASES AS SHOWN (LEFT).

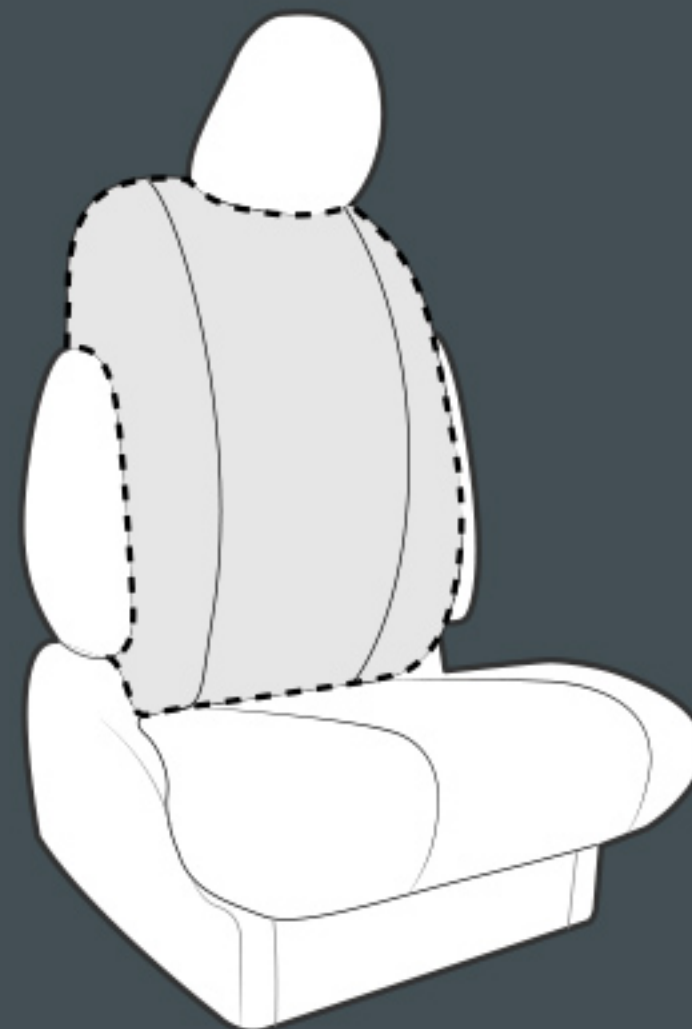

BACKREST COVER

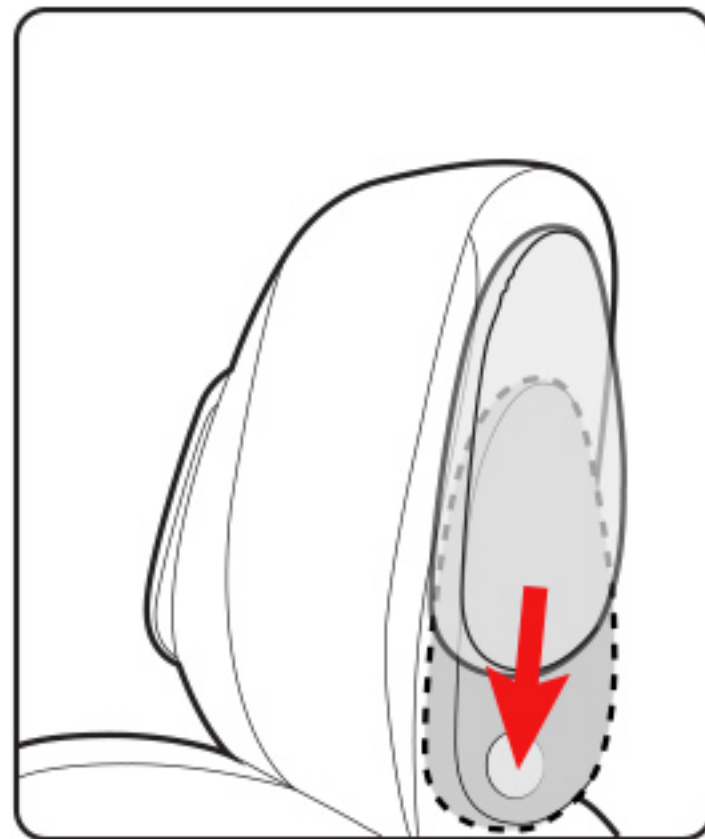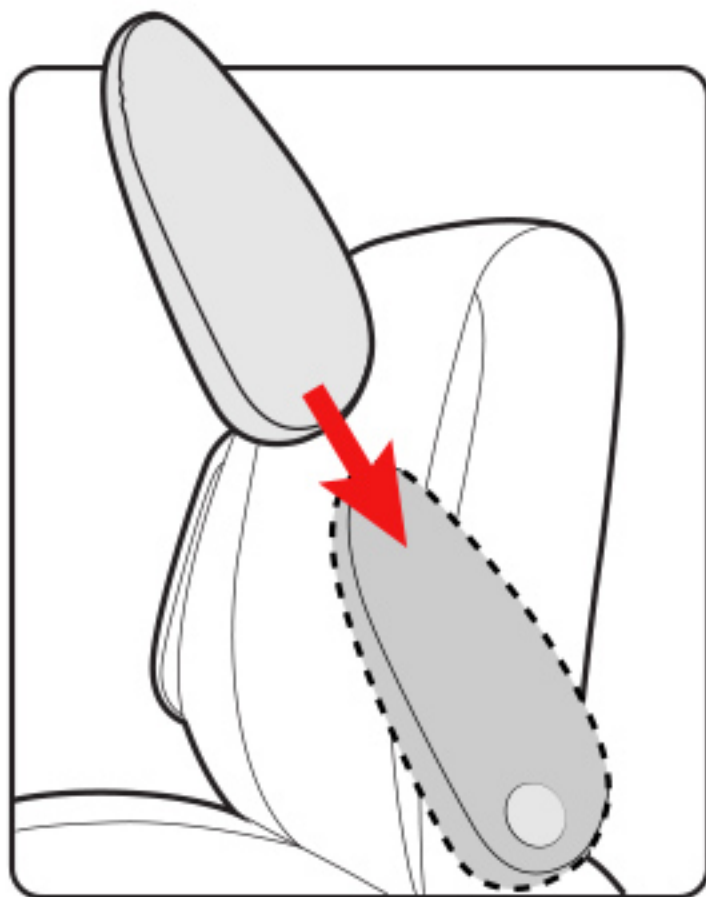


(ARMREST)

WITH THE ARMREST AT A SLIGHT ANGLE, ALIGN THE COVER AND PLACE IT OVER THE TIP OF THE ARMREST. TILT THE ARMREST UPRIGHT AND PULL THE COVER DOWNARDS THEN TOWARDS THE INSIDE OF THE ARMREST ELBOW JOINT.

(HEADREST)

ON THE TOP OF THE BACKREST COVER, MARK WITH A PEN AN "X" OVER EACH HEADREST POST. REMOVE THE COVER BEFORE CUTTING WITH EITHER SCISSORS OR A BOX CUTTER KNIFE.




NOTE: THE CUT MATERIAL WILL NOT RUN. WE WILL REPLACE ANY MIS-CUTS.

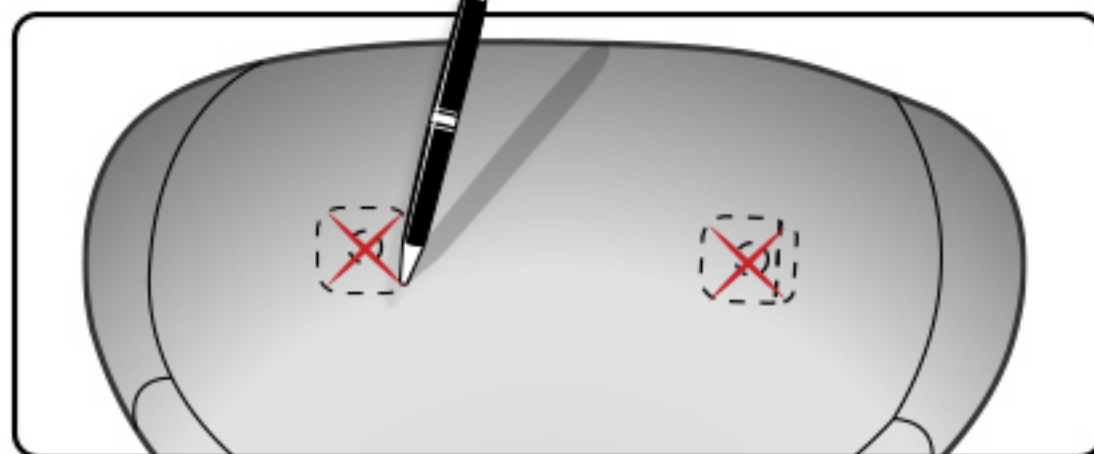

+



OR

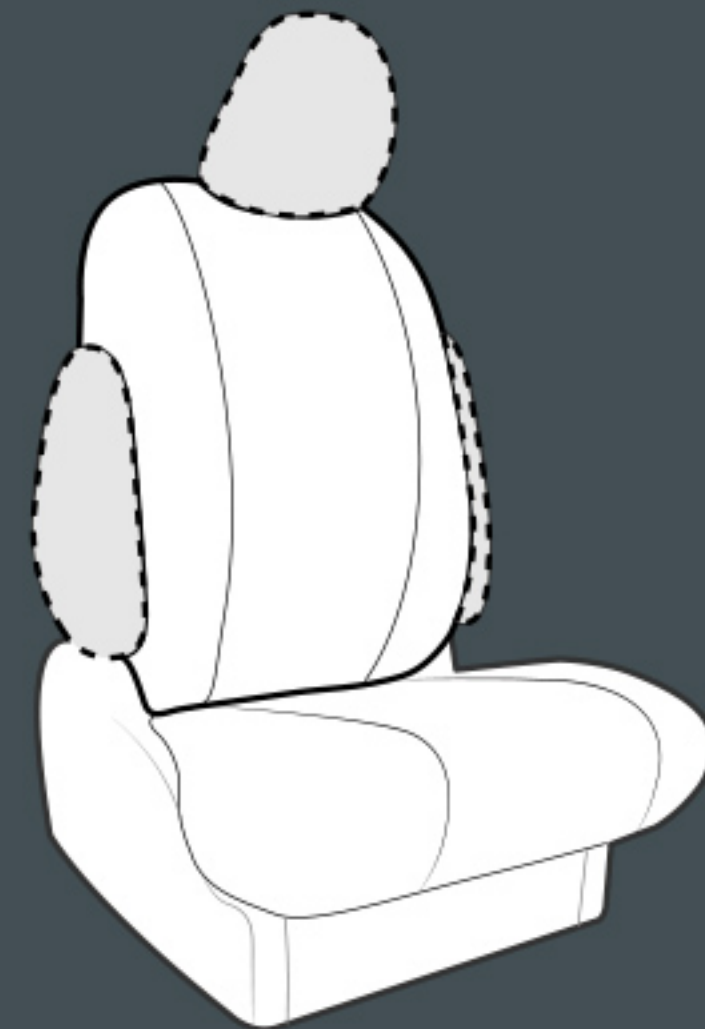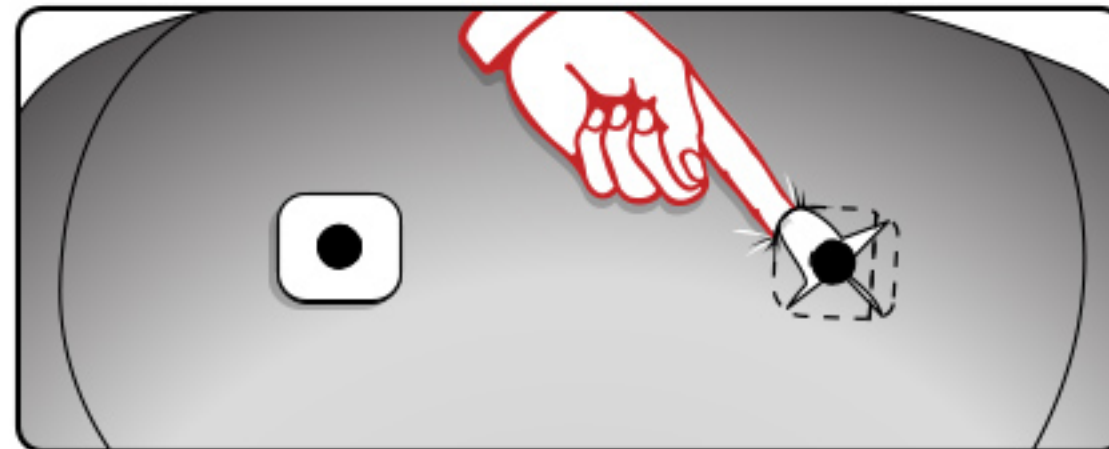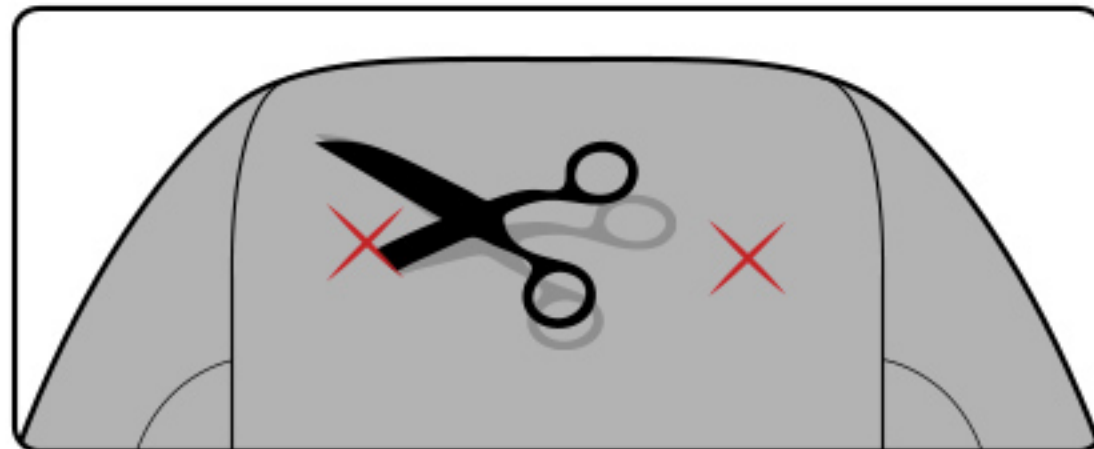

**ARMREST &
HEADREST
COVERS**


REAR SEAT COVER INSTALL

BENCH SEATS


FOR TRUCKS




- 1 REMOVE THE HEADRESTS BY INSERTING THE LONGER, STRAIGHT END OF AN "S" CLIP INTO THE PINHOLES OF THE BRACKET.

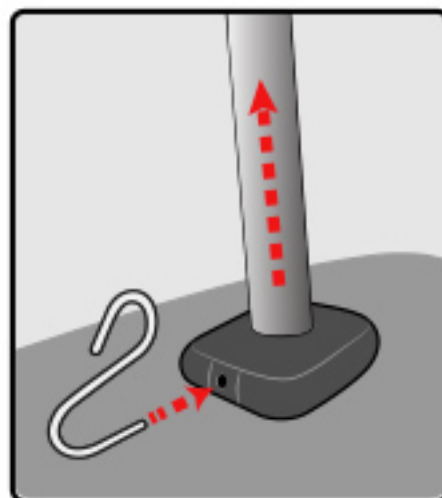


- 2 AFTER YOU'VE REMOVED THE HEADRESTS, PLACE THE BACKREST COVER OVER THE SEAT AND INSERT THE STRAPS INTO THEIR CORRESPONDING BUCKLES.

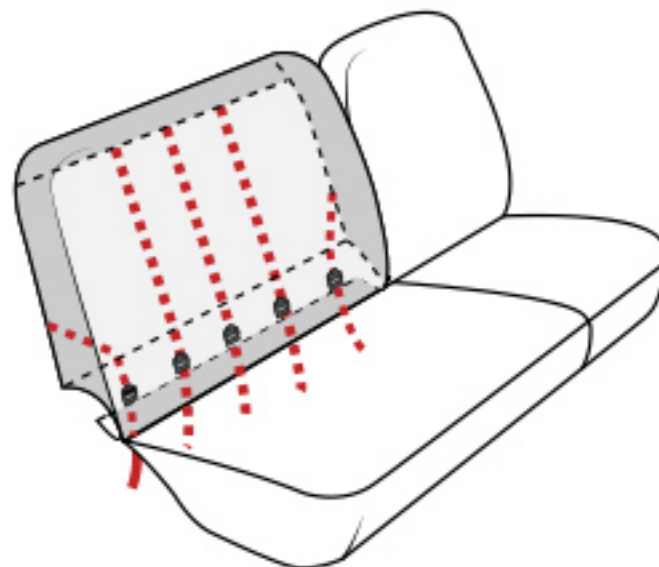

- 3 DURING CUSHION COVER INSTALLATION, FLIP THE SEAT(S) UP WHILE TUCKING THE VELCRO FLAP.

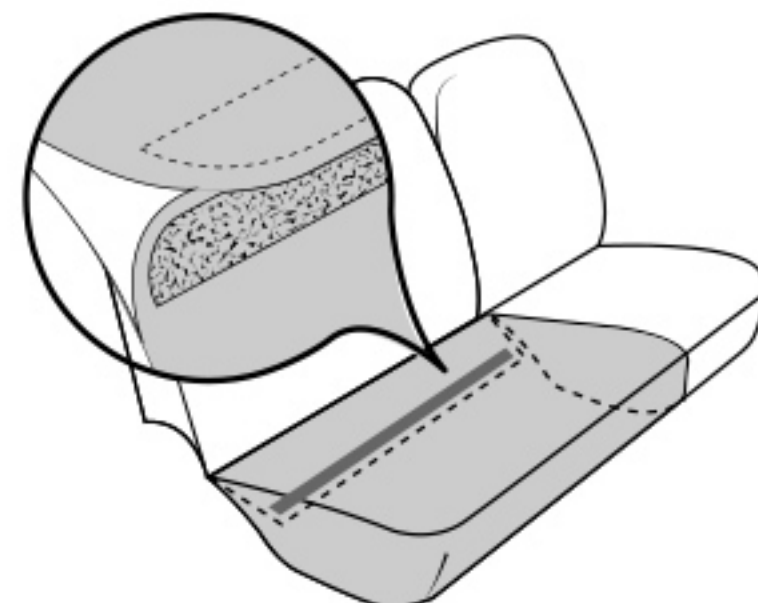

FOR CARS

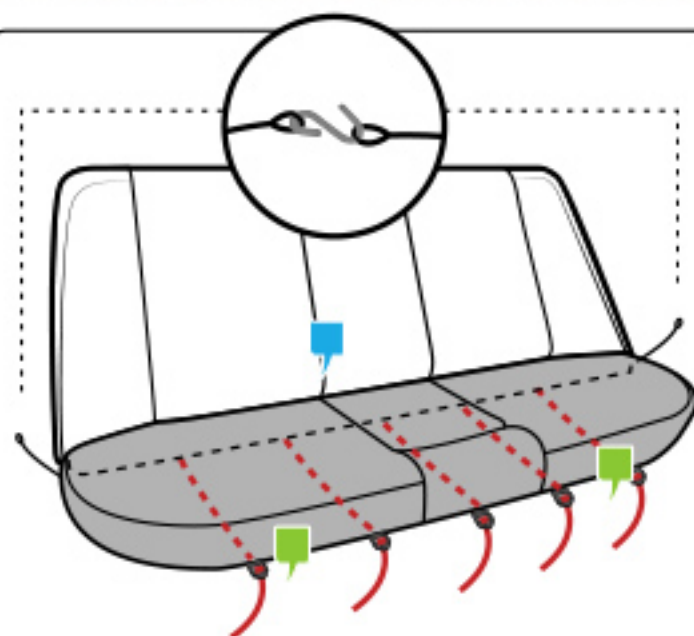

bolt




pull lever

- 4 UNSCREW THE BOLT (USUALLY LOCATED NEAR A SEAT BELT BUCKLE) TO REMOVE THE CUSHION. LOOK FOR LEVERS UNDER THE FRONT EDGE OF THE SEAT TO PULL AND LIFT THE SEAT UP. SLIP THE COVER OVER THE SEAT AND INSERT THE STRAPS INTO THEIR CORRESPONDING BUCKLES. PULL THE BUNGEE CHORDS TOGETHER & CONNECT WITH AN "S" HOOK.



bolt

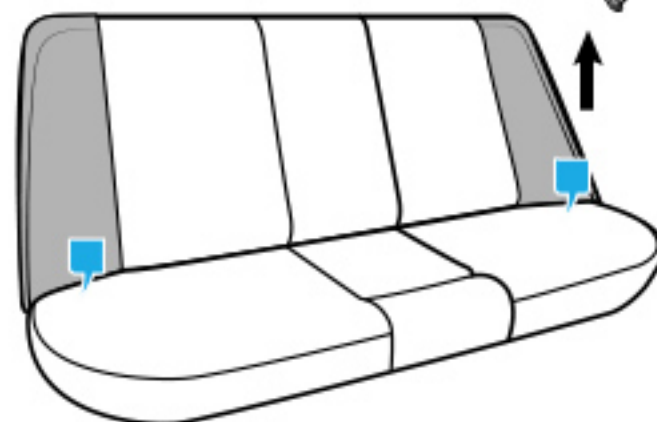


2

- FOR BOLSTER COVERS, REMOVE BOLSTERS BY FIRST UNSCREWING THE BOLT AT THE BOTTOM OF THE BOLSTER FRAME.

3

- TILT BACKREST FORWARD WHILE INSTALLING BACKREST COVER AND USE HANDS TO SMOOTH ANY WRINKLING IN THE FRONT USING A DOWNWARD PUSHING MOTION BEFORE ATTACHING VELCRO FLAPS IN THE BACK OF THE COVER TOGETHER.

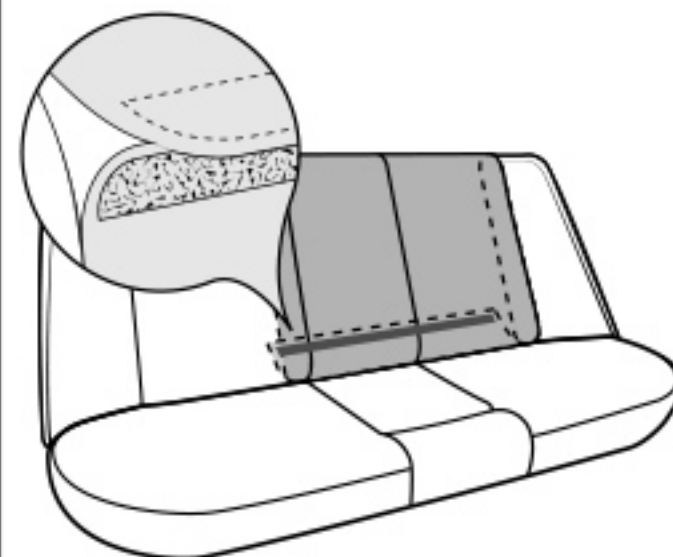

REMOVE HEADRESTS BY INSERTING THE LONGER, STRAIGHT END OF AN "S" CLIP INTO THE PINHOLES OF THE HEADREST BRACKET.

(See step 1 of "For Trucks" for visual reference.)