

Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required. The product of Hillsdale Furniture, LLC is designed for residential use only. Customer Service Phone Number: 502-562-0000

HARDWARE LIST

- C (4) Long Allen Bolts
- D (4) Medium Allen Bolts
- F (8) Rubber Washers
- G (8) Large Metal Washers
- H (8) Spring Washers
- I (8) Hex Nuts
- K (1) Allen Wrench
- L (4) Short Allen Bolts
- M (1) Open End Wrench
- N (10) Wood Plugs
- O (4) Small Metal Washers

PARTS LIST

- A (1) Headboard Grill
- B (2) Headboard Posts
- J (2) Adapter Plates

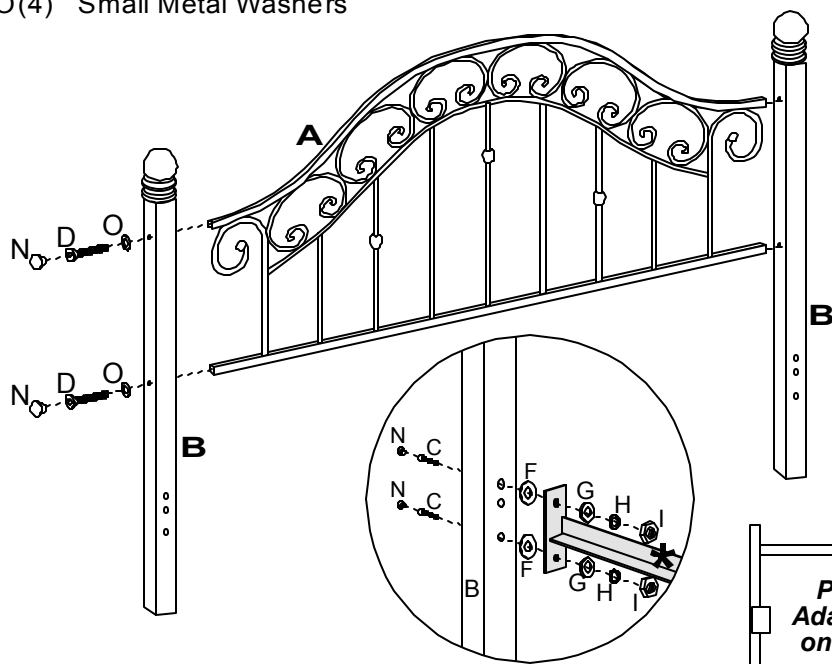
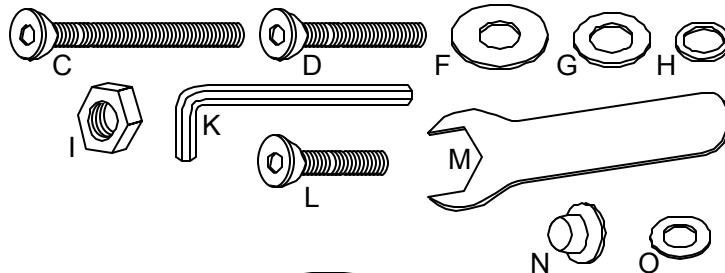


FIGURE 2

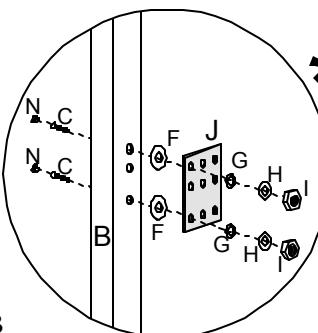


FIGURE 3

*** Bed Frame Not Included**
Only Bed Frame Bracket Shown In Figures 2 & 4.


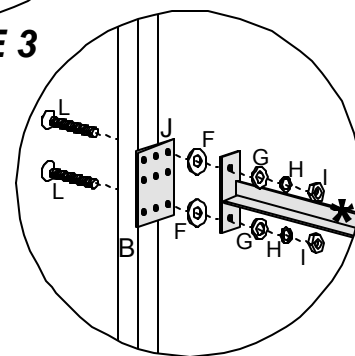


FIGURE 4

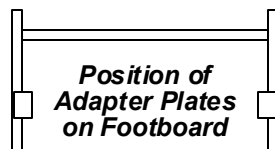

Position of Adapter Plates on Footboard

STEP 1

Attach each Headboard Post (B) to Headboard Grill (A) using 2 Medium Allen Bolts (D) & 2 Small Metal Washers (O) per each side. Tighten all bolts. Insert Wood Plugs (N) to cover bolt heads. See Figure 1.

STEP 2 For Queen Bed Frame Assembly Only

Attach Bed Frame (*Not Included) to each Headboard Post (B), using 2 Long Allen Bolts (C), 2 Rubber Washers (F), 2 Large Metal Washers (G), 2 Spring Washers (H) & 2 Hex Nuts (I) per each side. Tighten all bolts and nuts. Insert Wood Plugs (N) to cover bolt heads. See Figure 2. Assembly of QUEEN BED is now complete. Please keep remaining hardware and A/I for future use.

STEP 3 For Full Bed Frame Assembly Only

Attach Adapter Plate (J) to each Headboard Post (B), using 2 Long Allen Bolts (C), 2 Rubber Washers (F), 2 Large Metal Washers (G), 2 Spring Washers (H) & 2 Hex Nuts (I) per each side. Tighten all bolts. Insert Wood Plugs (N) to cover bolt heads. See Figure 3.

STEP 4 For Full Bed Frame Assembly Only

Attach Bed Frame (*Not Included) to each Adapter Plate (J), using 2 Short Allen Bolts (L), 2 Rubber Washers (F), 2 Large Metal Washers (G), 2 Spring Washers (H) & 2 Hex Nuts (I) per each side. Tighten all bolts and nuts. See Figure 4. Assembly is now complete.