








Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required. The product of Hillsdale Furniture, LLC is designed for residential use only. Customer Service Phone Number: 502-562-0000


HARDWARE LIST

- A (4) 1/4" x 1/2" Allen Bolts
- B (4) 1/4" x 2-1/4" Allen Bolts
- C (4) 1/4" x 3/4" Allen Bolts
- D (4) 1/4" Hex Nuts
- E (12) 1/4" Flat Washers
- F (1) 1/4" Open Wrench
- G (1) 1/4" Allen Wrench

PARTS LIST

- H (2) Leg Extensions
- I (1) Headboard
- J (1) Footboard
- K (4) Finials

PART	QTY	HARDWARE	PART	QTY	HARDWARE
A	4		B	4	
C	4		D	4	
E	12		F	1	
G	1				

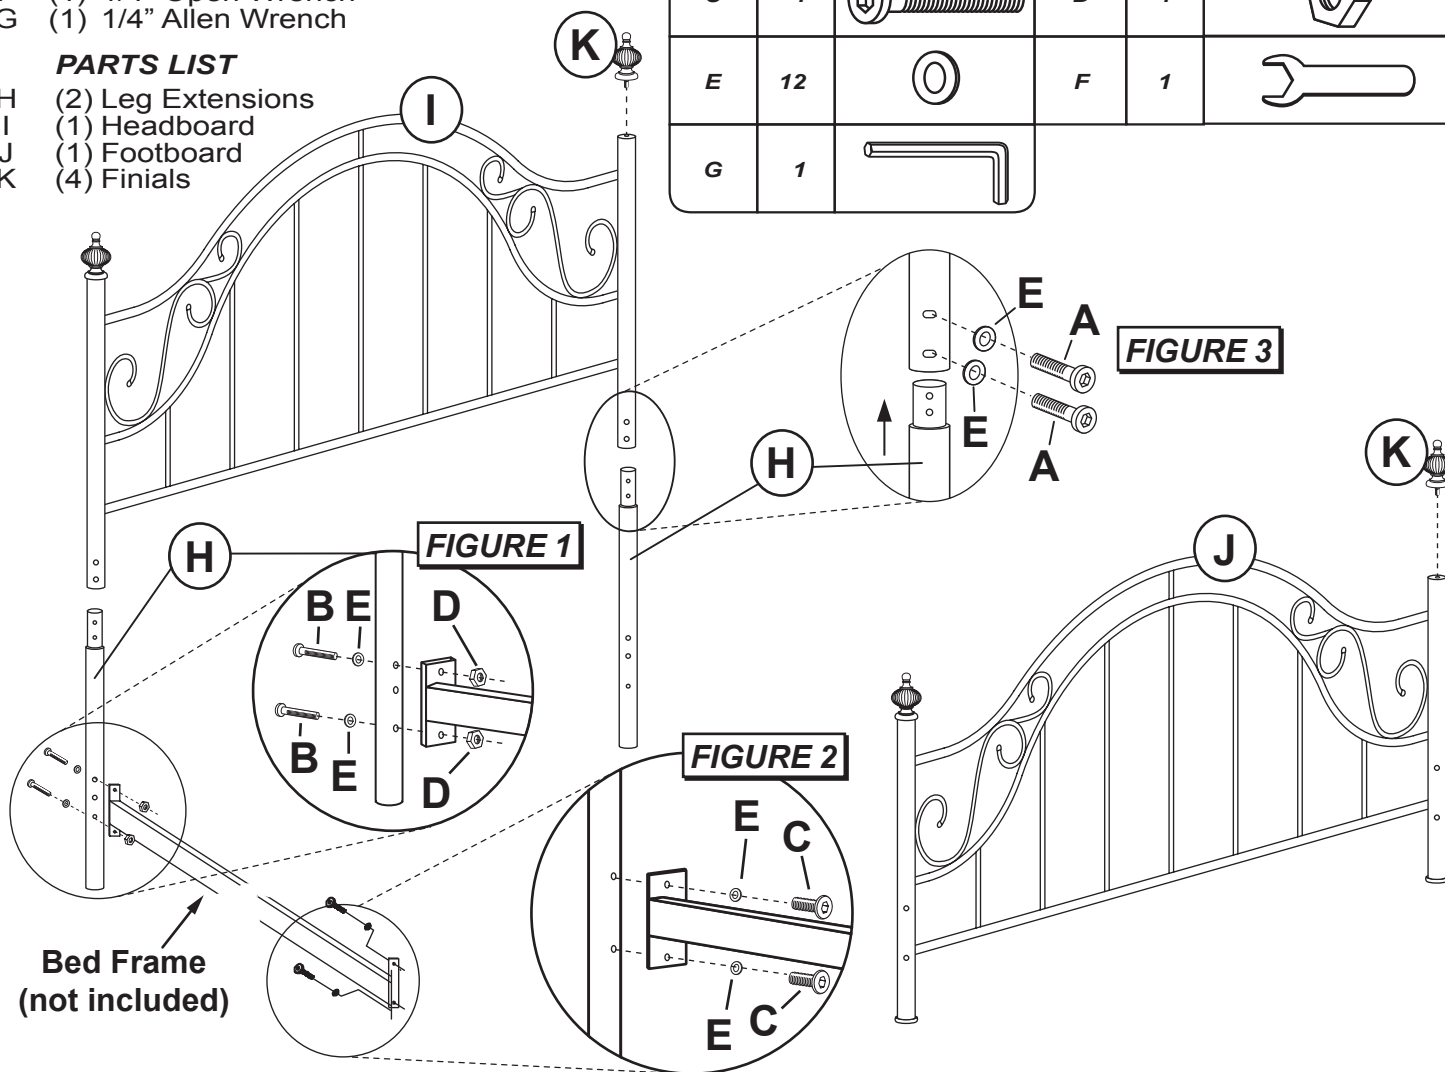

STEP 1

Begin assembly by connecting Leg Extension (H) to Headboard (I) using 2 Allen Bolts (C) & 2 Metal Washers (E). Tighten all bolts. See **Figure 3**.

STEP 2

Next, attach the Bed Frame (*Not Included) to each Leg Extension (H) using 2 Allen Bolts (B) and 2 Flat Washers (E) from the outside, and 2 Hex Nuts (D) per each post. Tighten all nuts and bolts using the Allen & Hex Wrenches (F & G) that have been provided. See **Figure 1**.

STEP 3

Finally attach Bed Frame (*Not Included) to each post on the Footboard Panel (J) using 2 Allen Bolts (A) & 2 Metal Washers (E) per each post. Tighten all bolts. See **Figure 2**. Attach the Finials (K) by screwing them into place. The assembly is now complete.