


UPPER DUCT COVER MOUNTING TEMPLATE

CUT ALONG THIS LINE

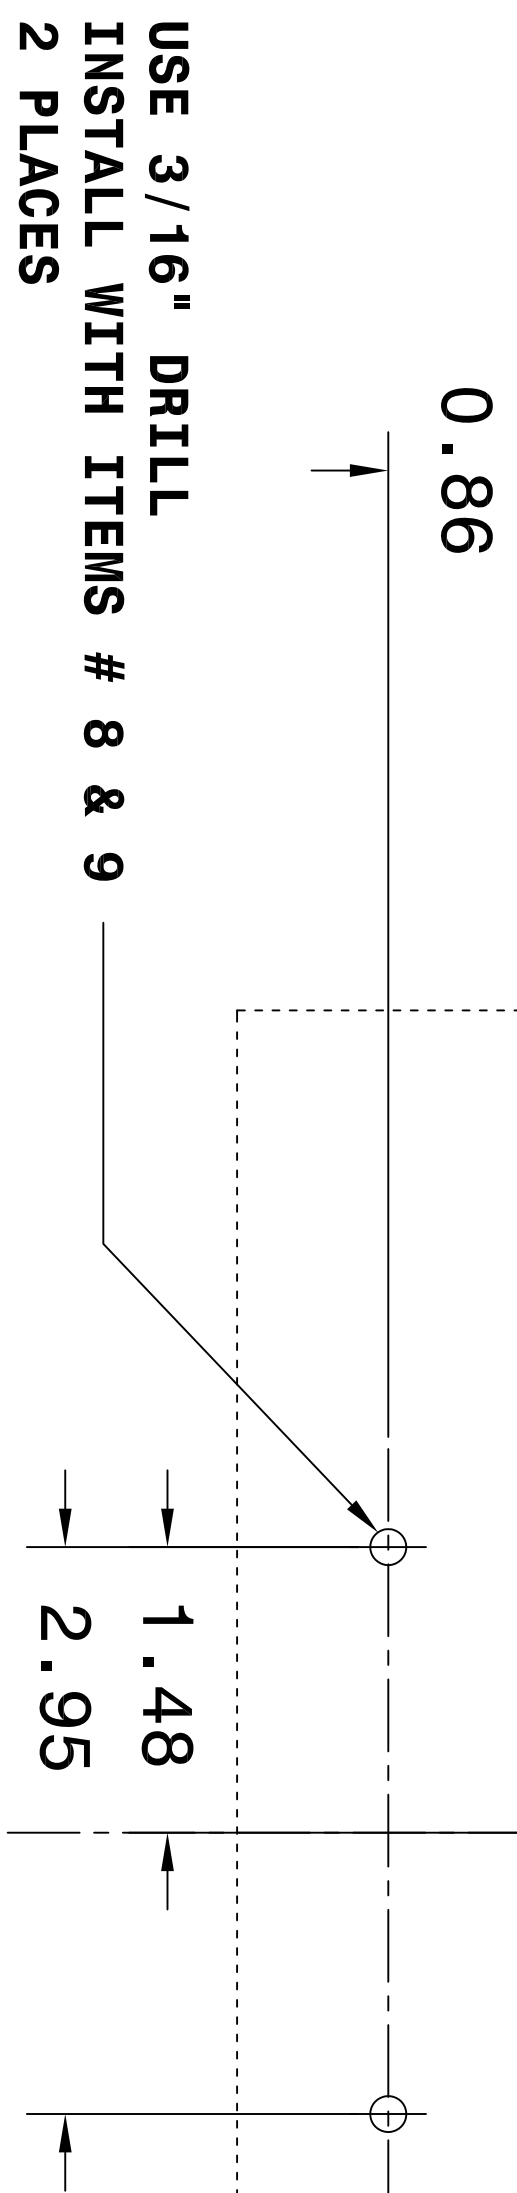

USE 3/16" DRILL
INSTALL WITH ITEMS # 8 & 9
2 PLACES

1.48
2.95

CEILING
(cut on this line to locate templates
at ceiling location.)
UPPER MOUNTING BRACKET - ITEM # 3

Note: Place this template in ceiling corner to mount
upper bracket for chimney cover.

USE 3/16" DRILL
INSTALL WITH ITEMS # 8 & 9
2 PLACES

2.56
5.12

MOUNT BRACKET WITH NOTCH UP
LOWER DUCT COVER MOUNTING BRACKET - ITEM # 4

RANGE HOOD LOCATION INSTRUCTIONS:

- LOCATE CENTER OF COOKTOP
- DRAW VERTICAL LINE ON WALL TO CEILING
- FROM INSTALLATION GUIDE CHART - DETERMINE DESIRED VENT HOOD HEIGHT
- DRAW HORIZONTAL LINE AT THIS HEIGHT
- LOCATE AND TAPE TEMPLATE TO THE WALL FOR PROPER INSTALLATION
- REFER TO INSTALLATION MANUAL FOR PROPER ASSEMBLY

NOTE: LOWER AND UPPER MOUNTING HOLES ON RANGE HOOD
BODY SHOULD BE ATTACHED TO WOOD STRUCTURE TO
SUPPORT 150 LBS.
REFER TO INSTALLATION GUIDE FOR DETAILS

UPPER MOUNTING HOLES
USE 1/8" DRILL
INSTALL WITH ITEM # 11
2 PLACES

UPPER MOUNTING HOLES
USE 1/8" DRILL
INSTALL WITH ITEM # 11
2 PLACES

BOTTOM OF RANGE HOOD
(cut on this line to locate templates
at correct installation height.)

CENTERLINE OF PRODUCT LOCATION SHOULD MATCH CENTER OF COOKTOP

RANGE HOOD MOUNTING TEMPLATE FOR: FHM3655LS

PN: 316902459

39.00

35.00