


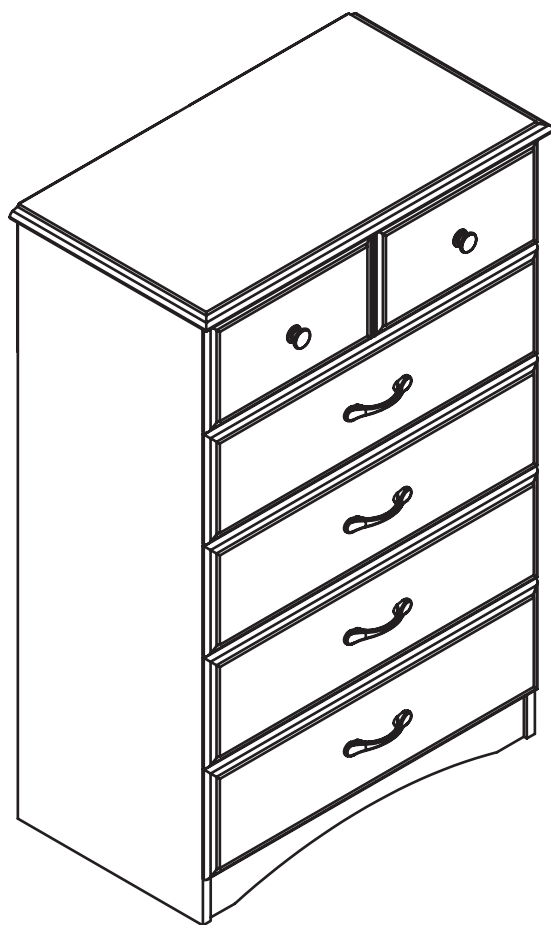

OWNER'S MANUAL

Grayson 5 Drawer Dresser

Product code: 0-06143439-5

UPC code: 029986593436



Date of purchase: ____/____/____

B345934309K00




Visit www.ameriwood.com to view the limited warranty valid in the U.S. and Canada.

Visite www.ameriwood.com para ver la garantía limitada válida solamente en Estados Unidos y Canadá.

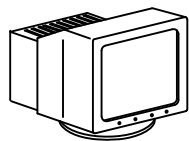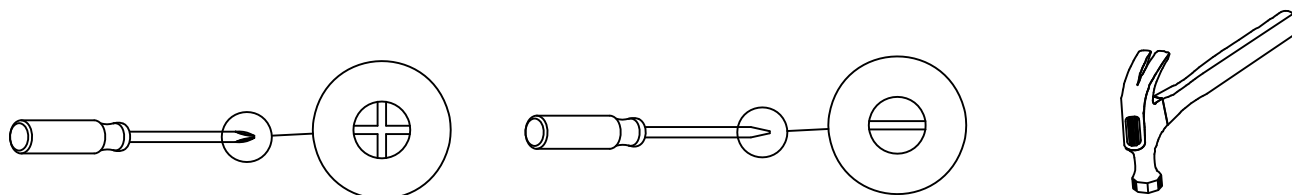

WWW.AMERIWOOD.COM/PARTS

(available 24 hours a day, 7 days a week)



1-800-489-3351

(in U.S.A. only)

Monday - Friday
9:00 am - 5:00 pm
Central Time




1-636-745-1005

Lunes - Viernes
9:00 am - 5:00 pm
Tiempo Central




AMERIWOOD
410 East First Street South
Wright City, MO 63390 USA
Attention: Consumer Service


PARTS - PIEZAS

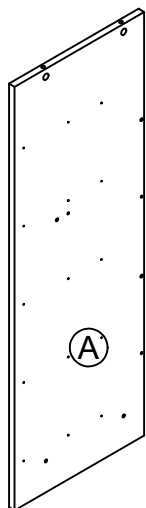


left panel
panel izquierdo
35934309010

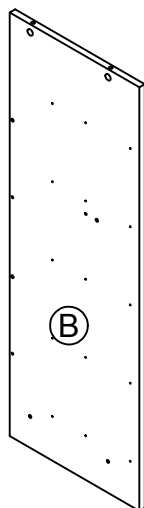


right panel
panel derecho
35934309020

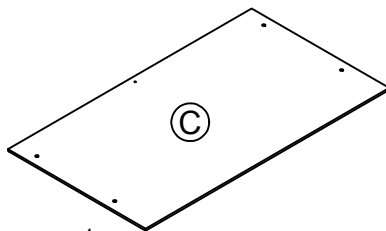


top
cime
35934309030

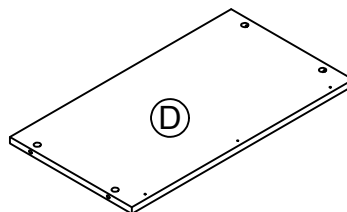


bottom
fondo
35934000040

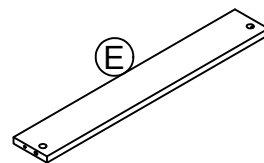


support
soporte
35934000050

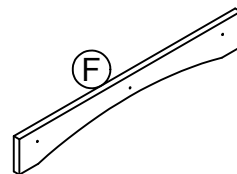


kick
retroceso
35934309060

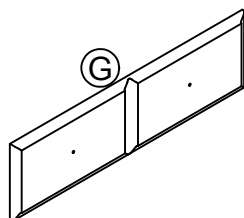


upper drawer front
frente del cajón superior
35934309070

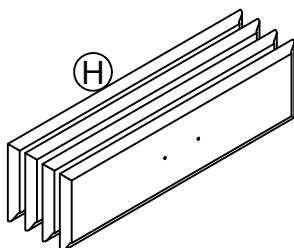


4 drawer fronts
4 cajones del frente
35934309080

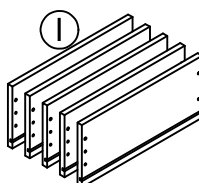


5 left drawer sides
5 lado del cajones izquierdo
35934302090

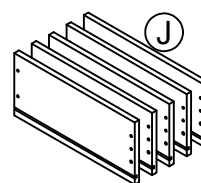


5 right drawer sides
5 lado del cajonesn derecho
35934302100

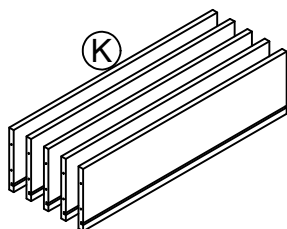


5 drawer backs
5 cajones trasero
35934302110

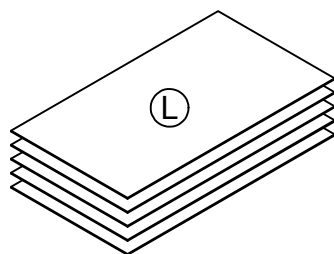


5 drawer bottoms
5 cajones inferiores
35934302120

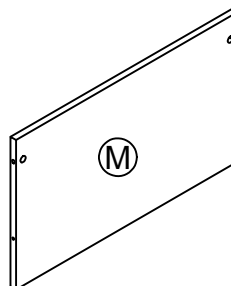

lower back
panel inferior
35934000130

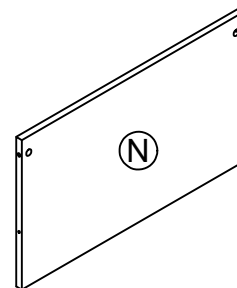

upper back
panel superior
35934000140


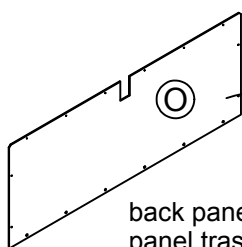


back panel
panel trasero
K59340000


This piece is paperboard construction. It is not made from wood but is required for the assembly of your unit.

Esto pedazo son la construcción del cartón. Ello no son hecho de madera, pero se requiere para la asamblea de su unidad.


PARTS - PIEZAS

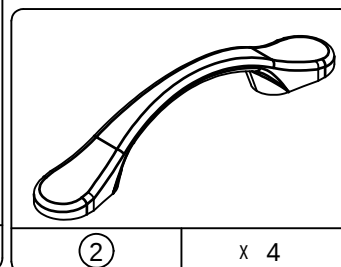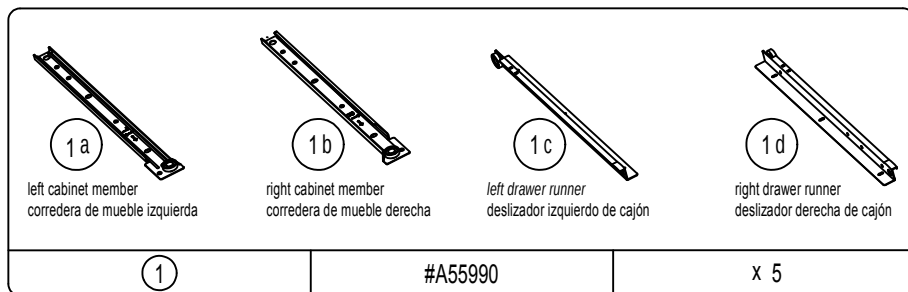


#A51405
handle
el tirón

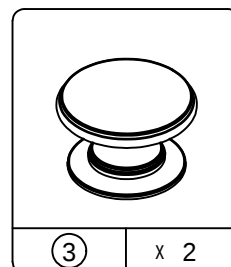


#A51400
knob
perilla

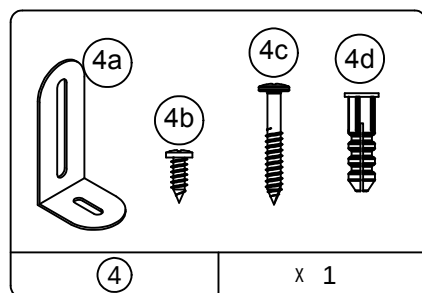


#A84050
safety bracket kit
juego del soporte de seguridad

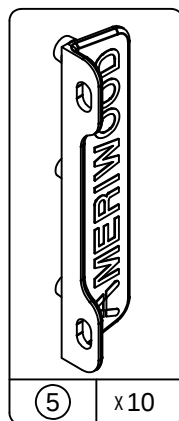


#A54210
drawer bracket
soporte de cajón

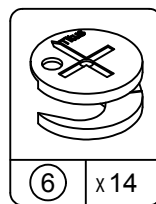


#A22570
cam lock
cerradura de leva

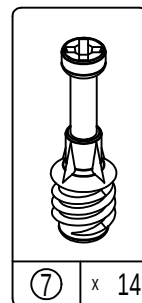


#A22510
cam bolt
perno de leva

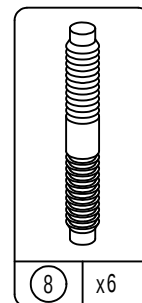


#A21520
compression dowel
clavija de compresion

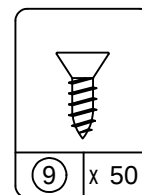


#A11080
7/16" flat head
7/16" cabeza plano

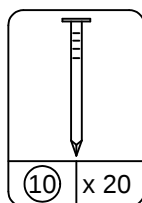


#A21110
nail
clavo

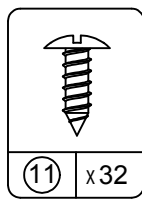


#A12120
7/16" pan head
cabeza redondo 7/16"
tête ronde 7/16"

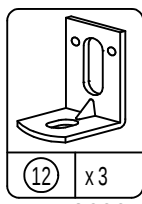


#A53600
angle bracket
anaquel del ángulo

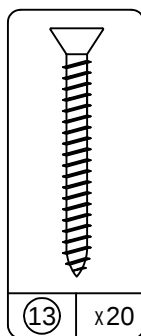


#A11600
1-1/4" flat head
cabeza plano 1-1/4"

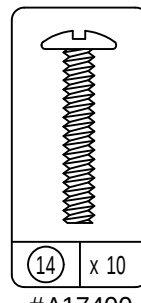

#A17400
7/8" machine screw
7/8" tornillo

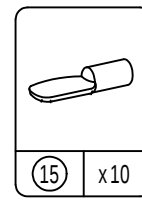


#A80250
shelf support
soporte de estante

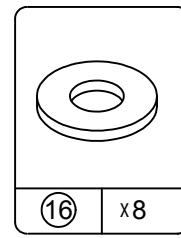

#A25400
1/4" washer
arandela 1/4"


This illustration shows how the CAM fastening system works.
Esta ilustración muestra el sistema de fijación de leva y como funciona.

1

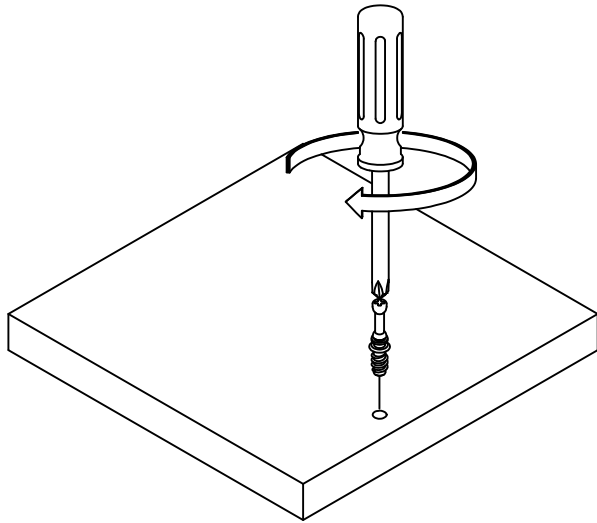


Tighten to fully seat. Do not over tighten.
Apriétese a totalmente asiento. No haga encima de apriétese.

2

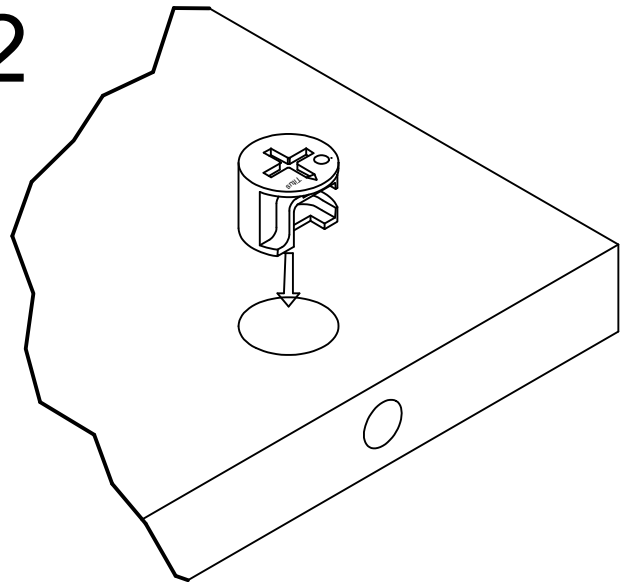


Proper orientation of cam.
La orientación apropiada de leva.

3

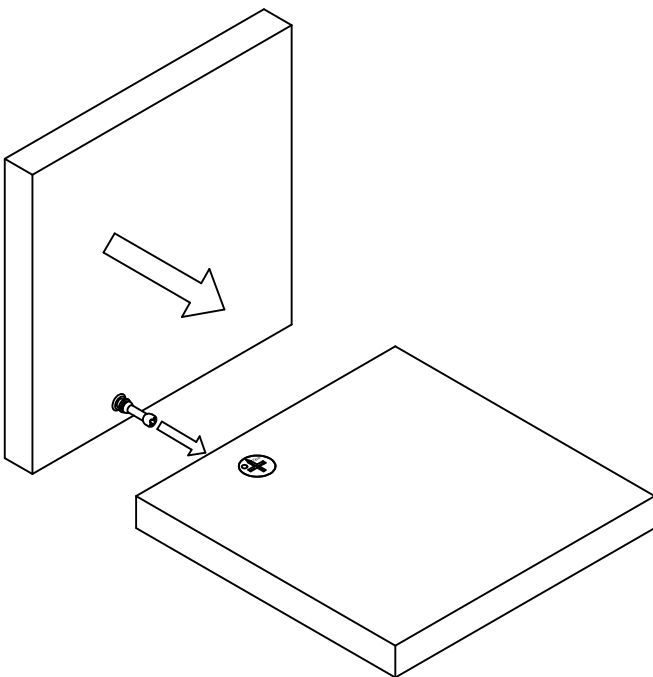







4

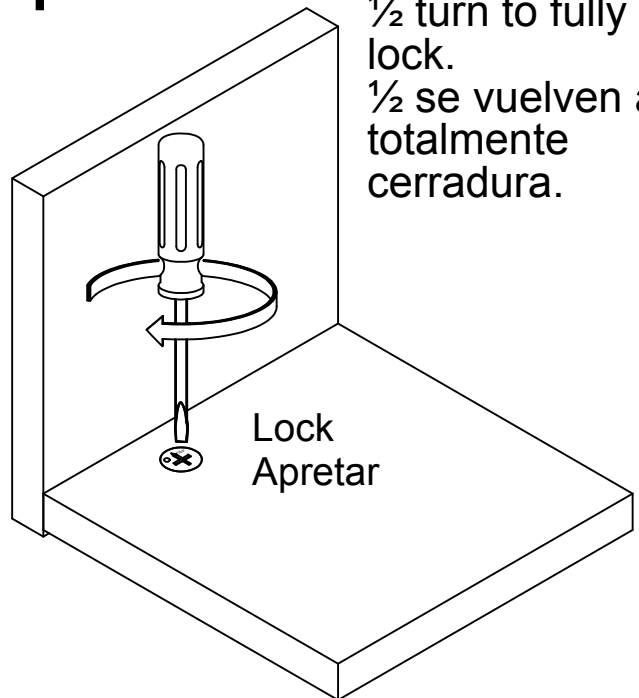





$\frac{1}{2}$ turn to fully lock.
 $\frac{1}{2}$ se vuelven a totalmente cerradura.

Lock
Apretar


1

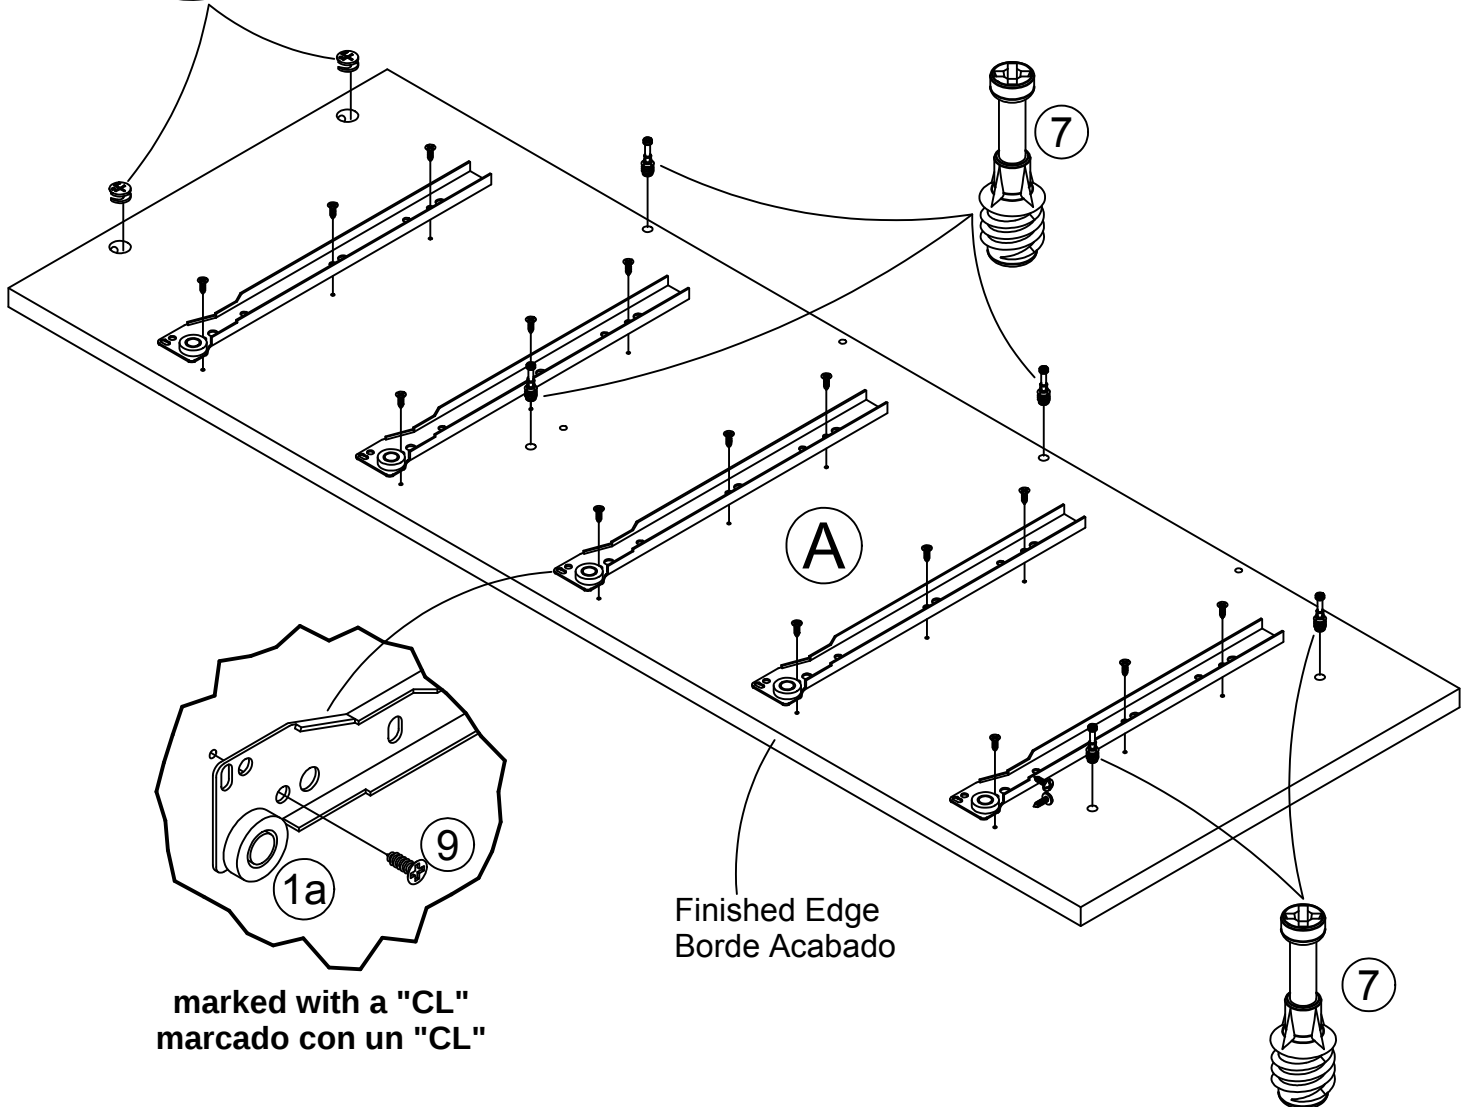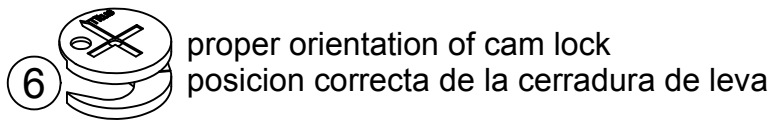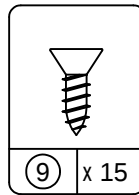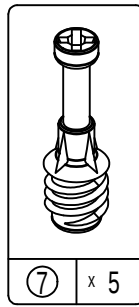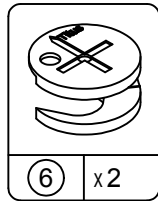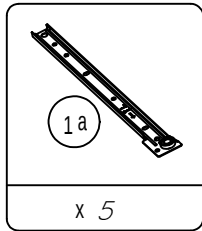

2

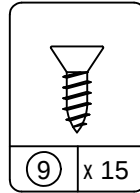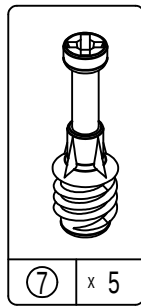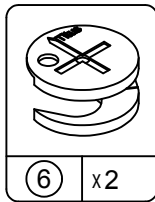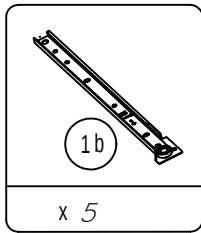






proper orientation of cam lock
posicion correcta de la cerradura de leva

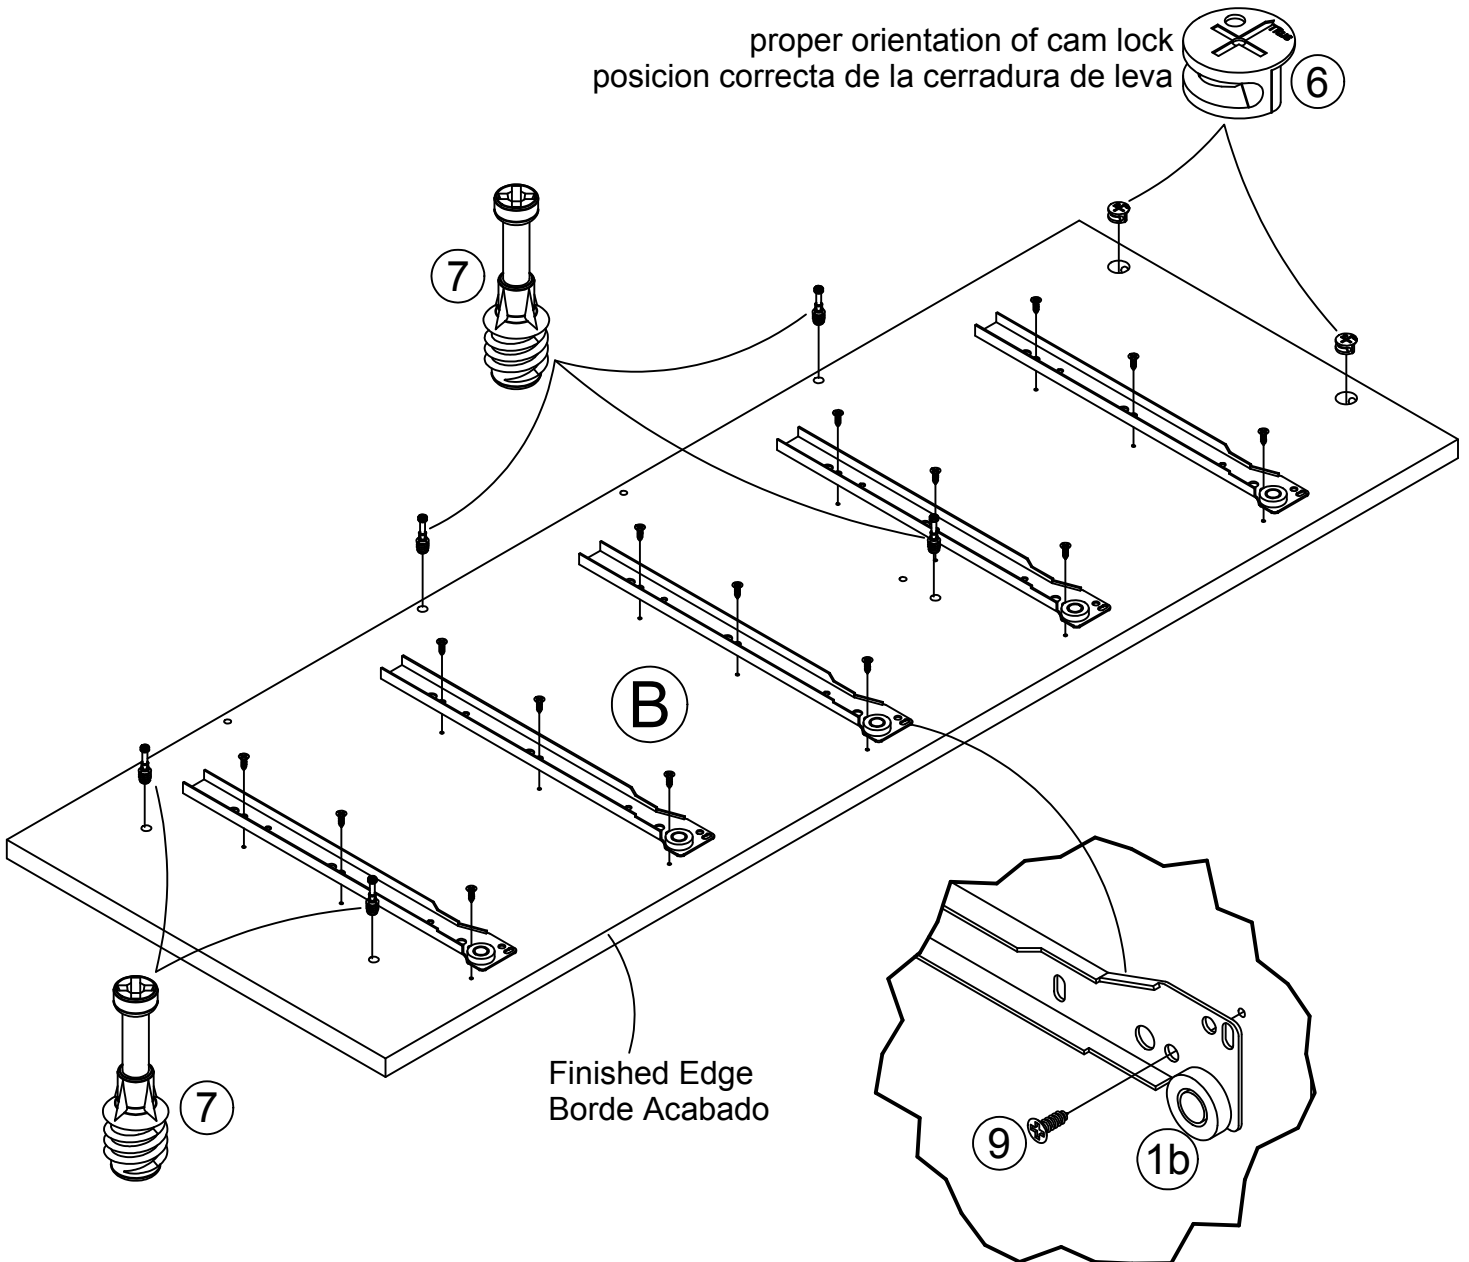





Finished Edge
Borde Acabado

marked with a "CR"
marcado con un "CR"


3

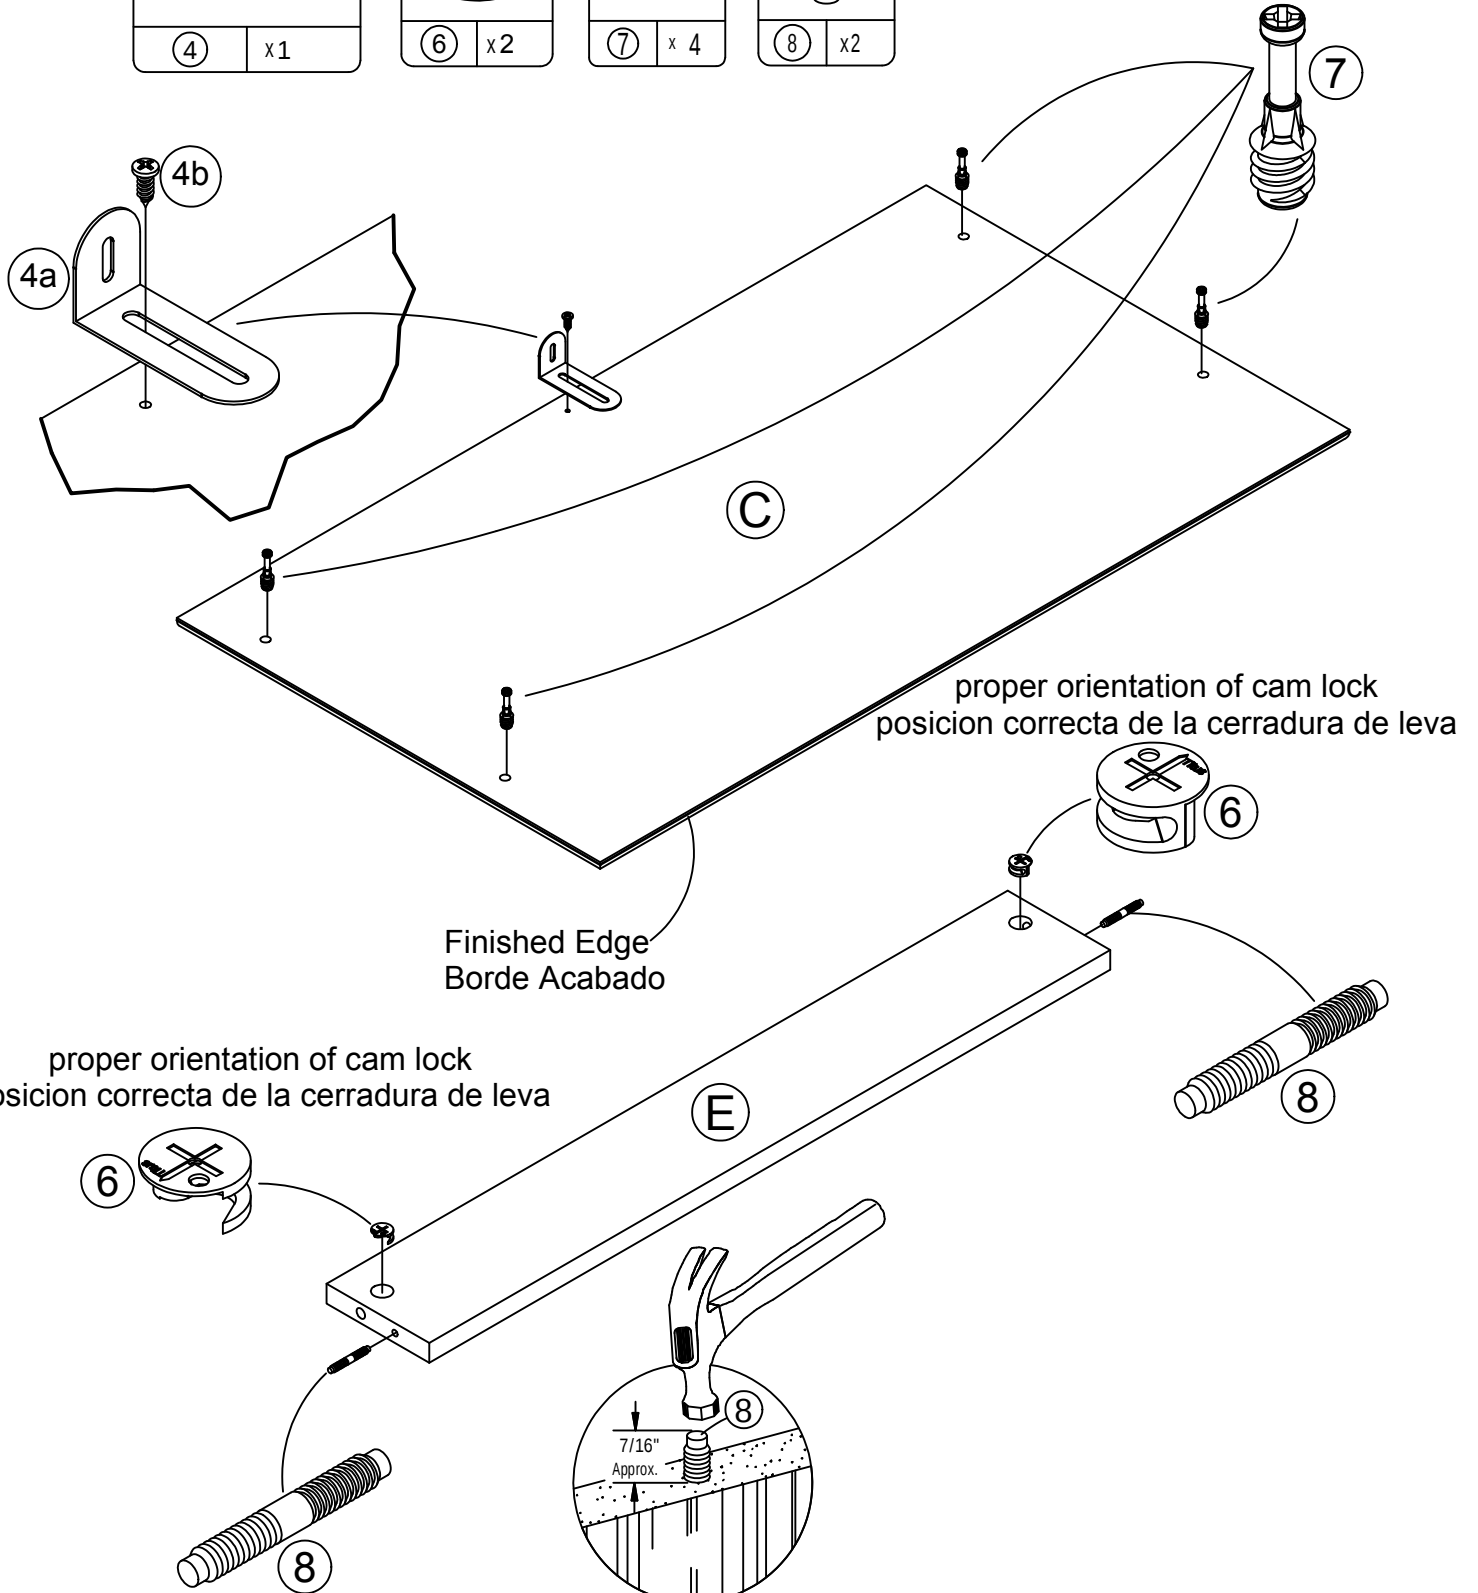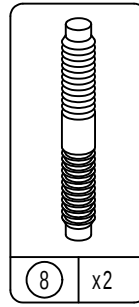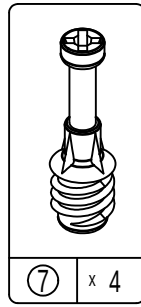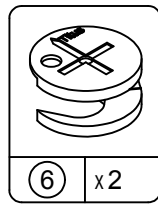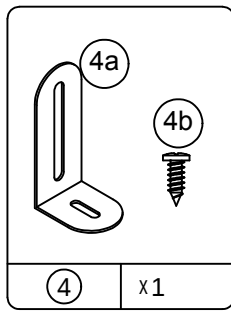



4

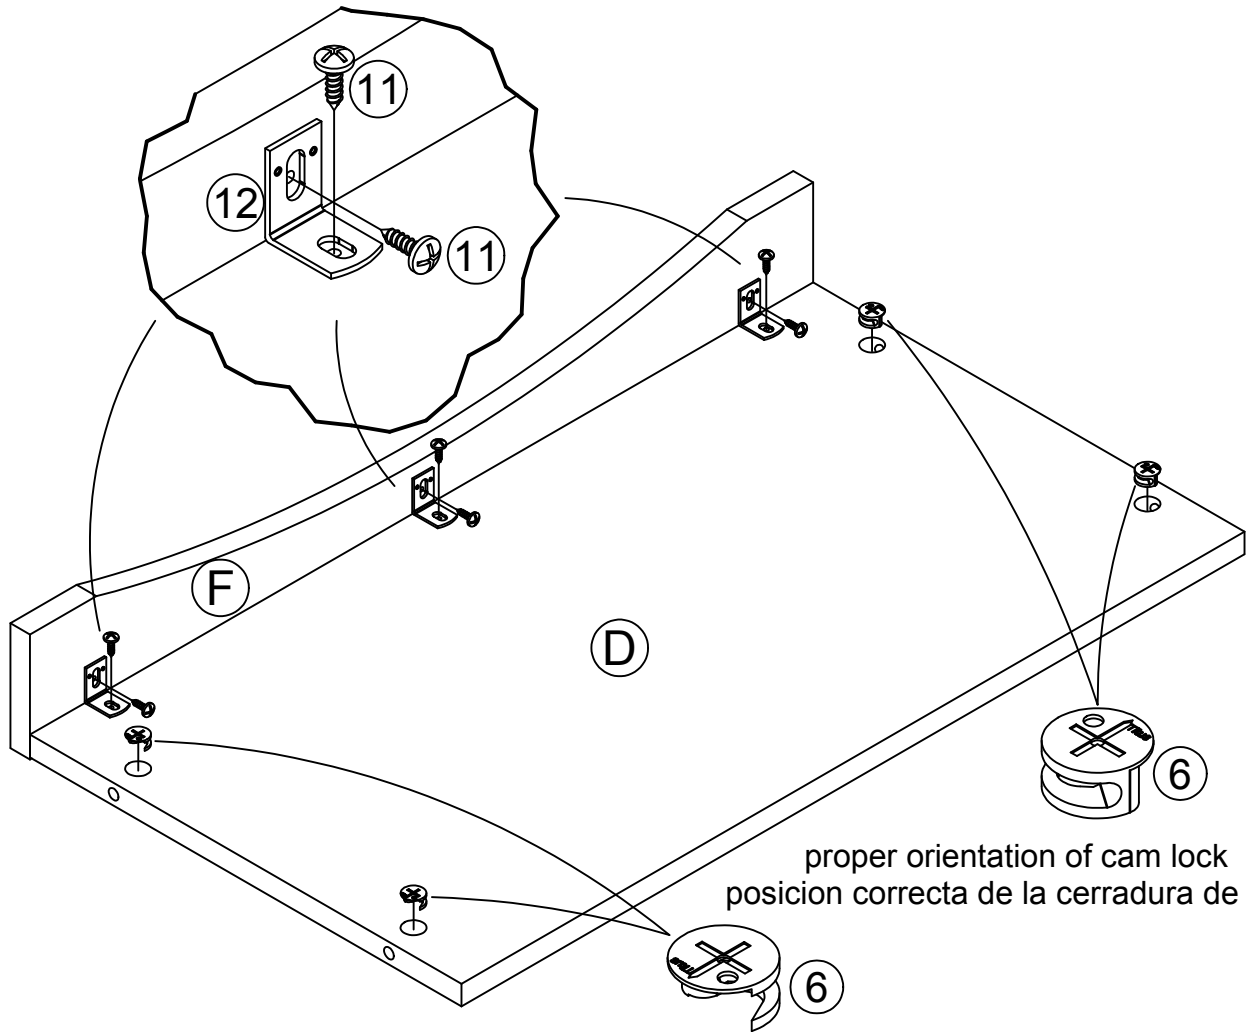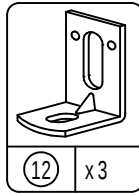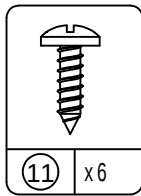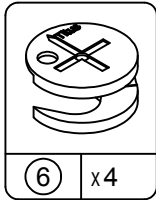


proper orientation of cam lock
posicion correcta de la cerradura de leva

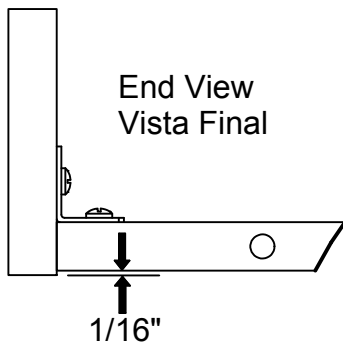


5

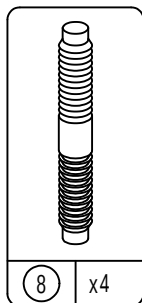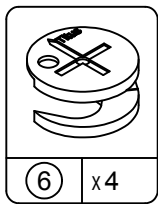


proper orientation of cam lock
posicion correcta de la cerradura de leva

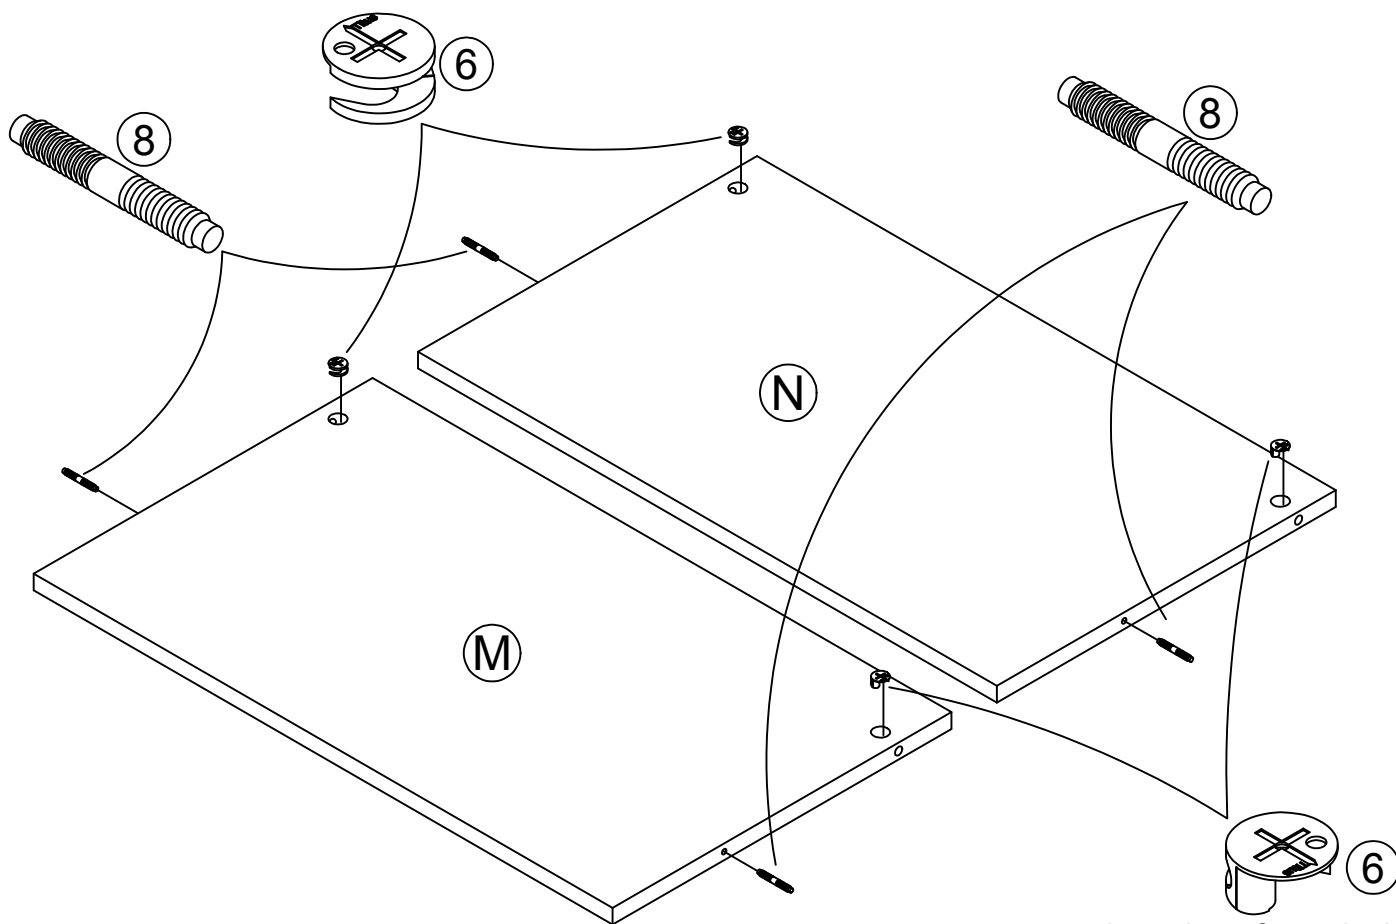


proper orientation of cam lock
posicion correcta de la cerradura de leva

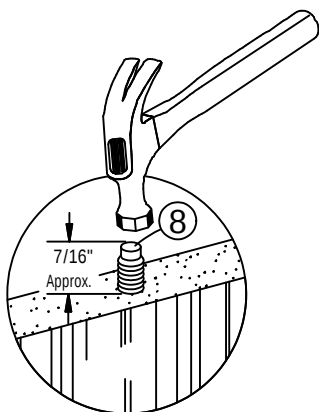



6

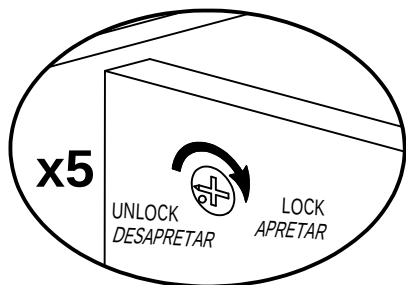


Finished Edge
Borde Acabado

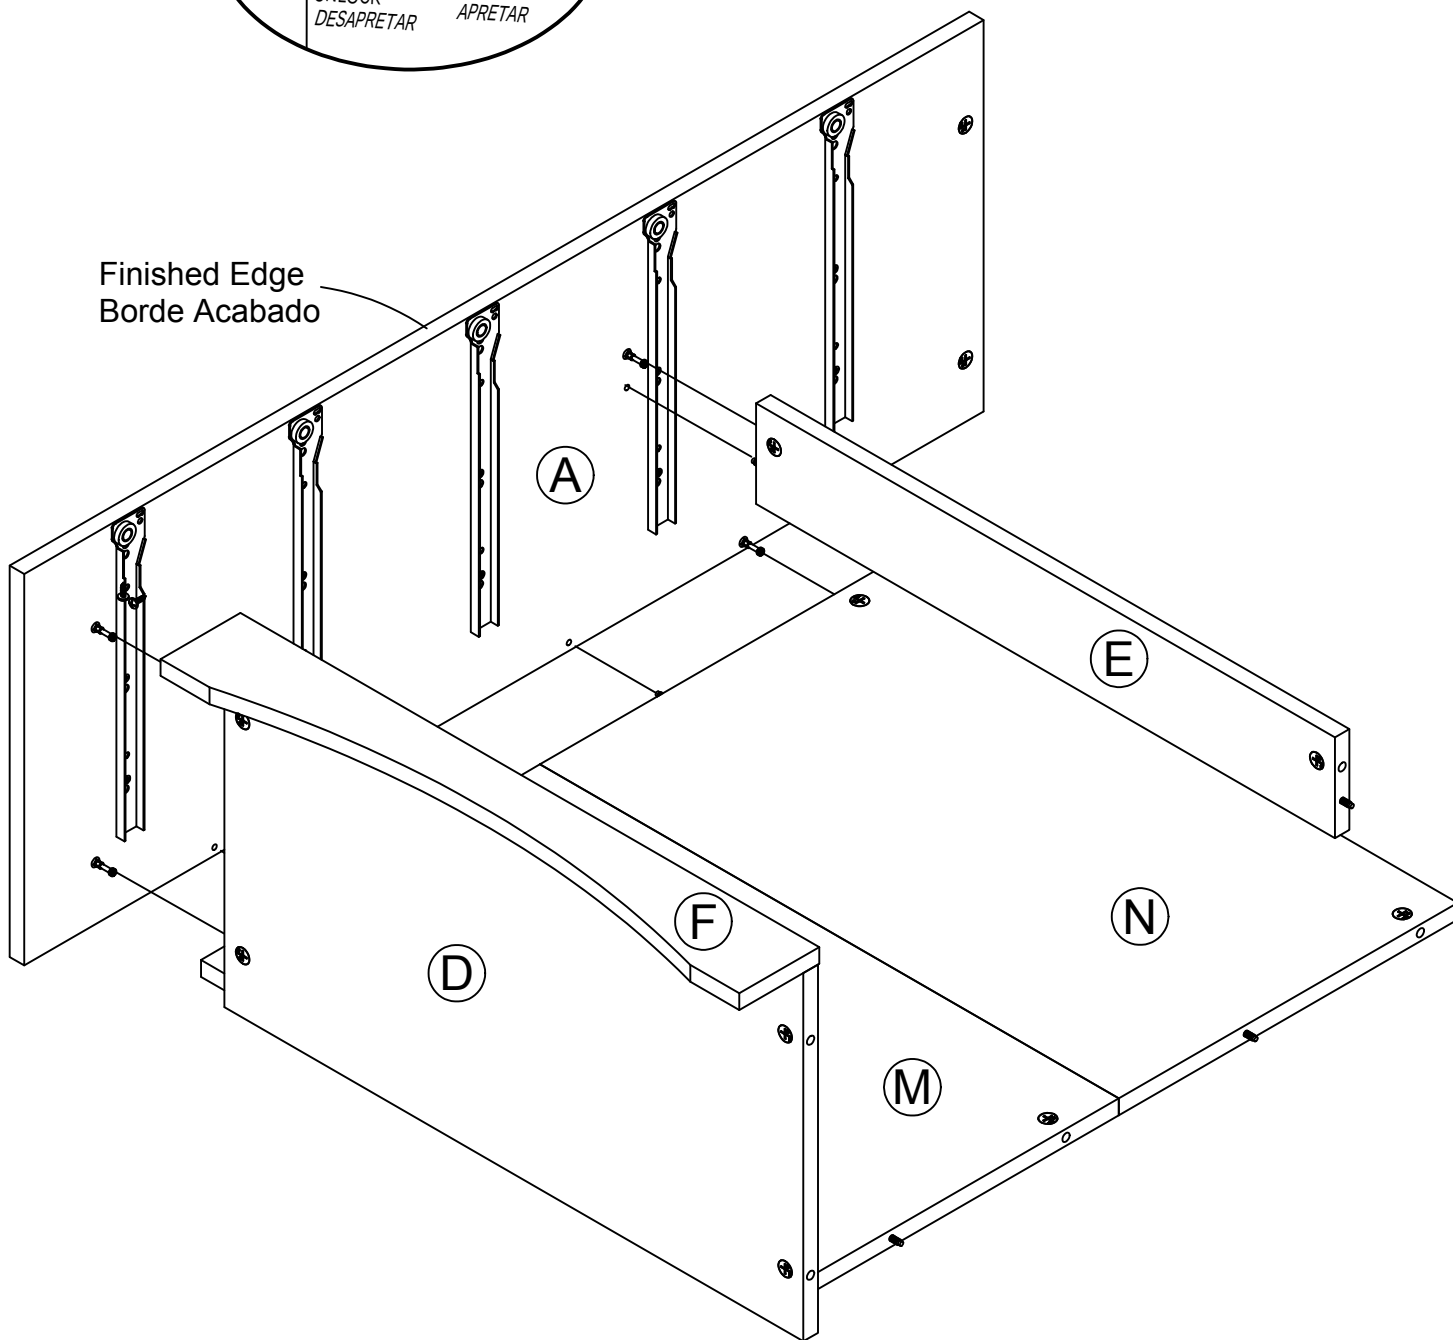


7

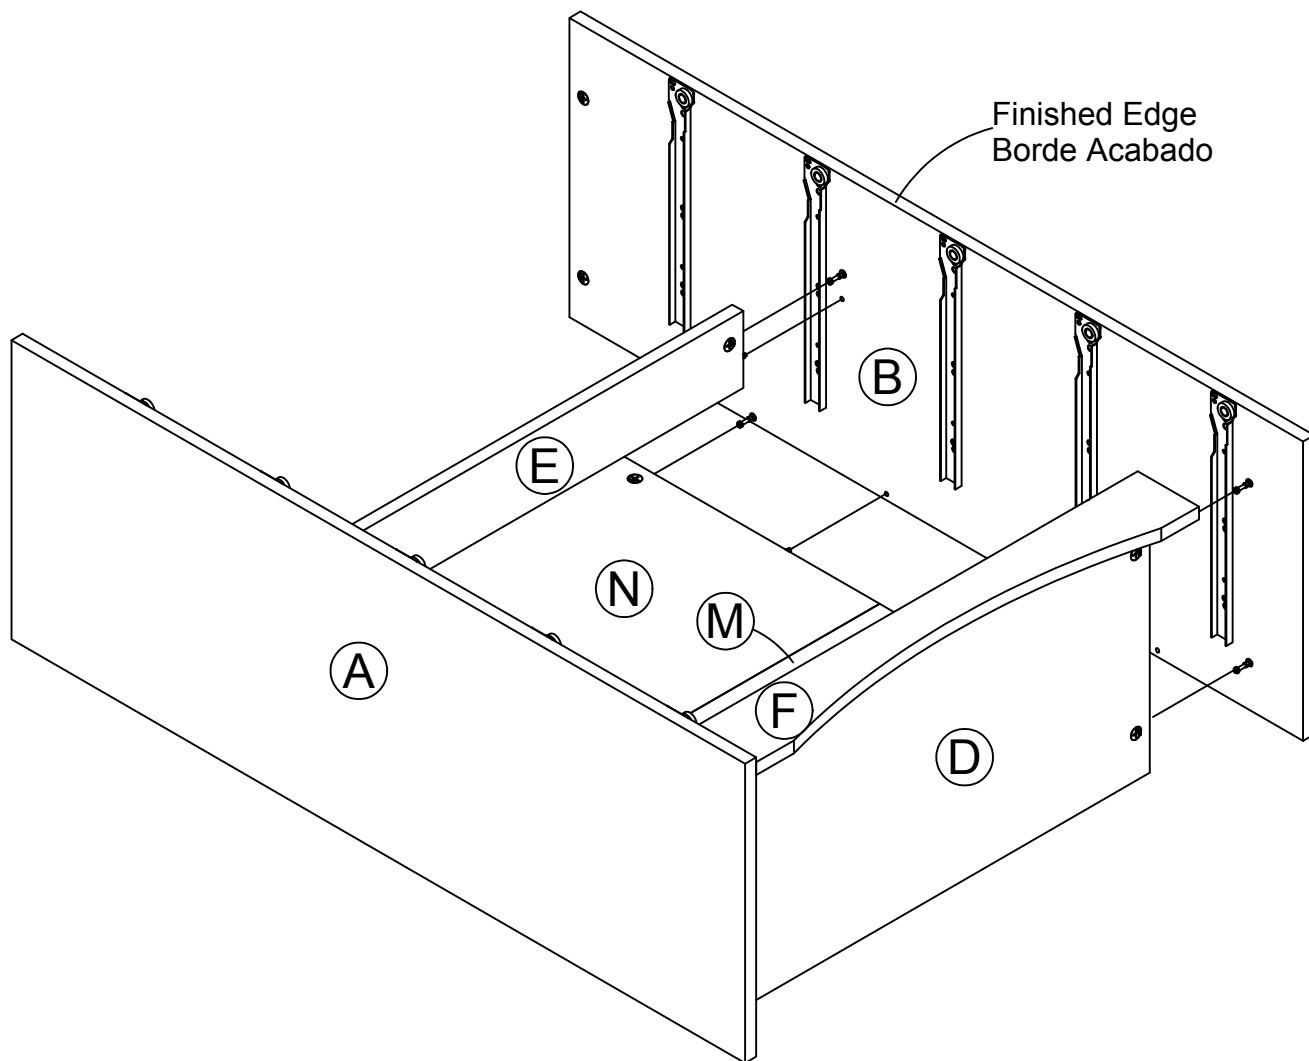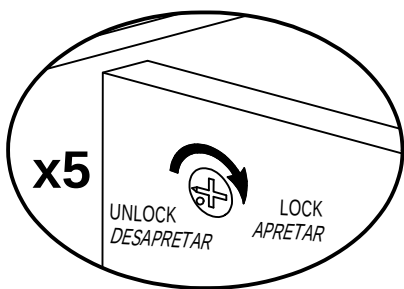



8

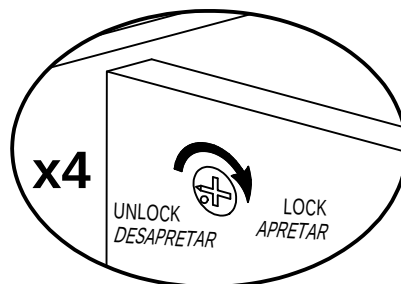

Finished Edge
Borde Acabado

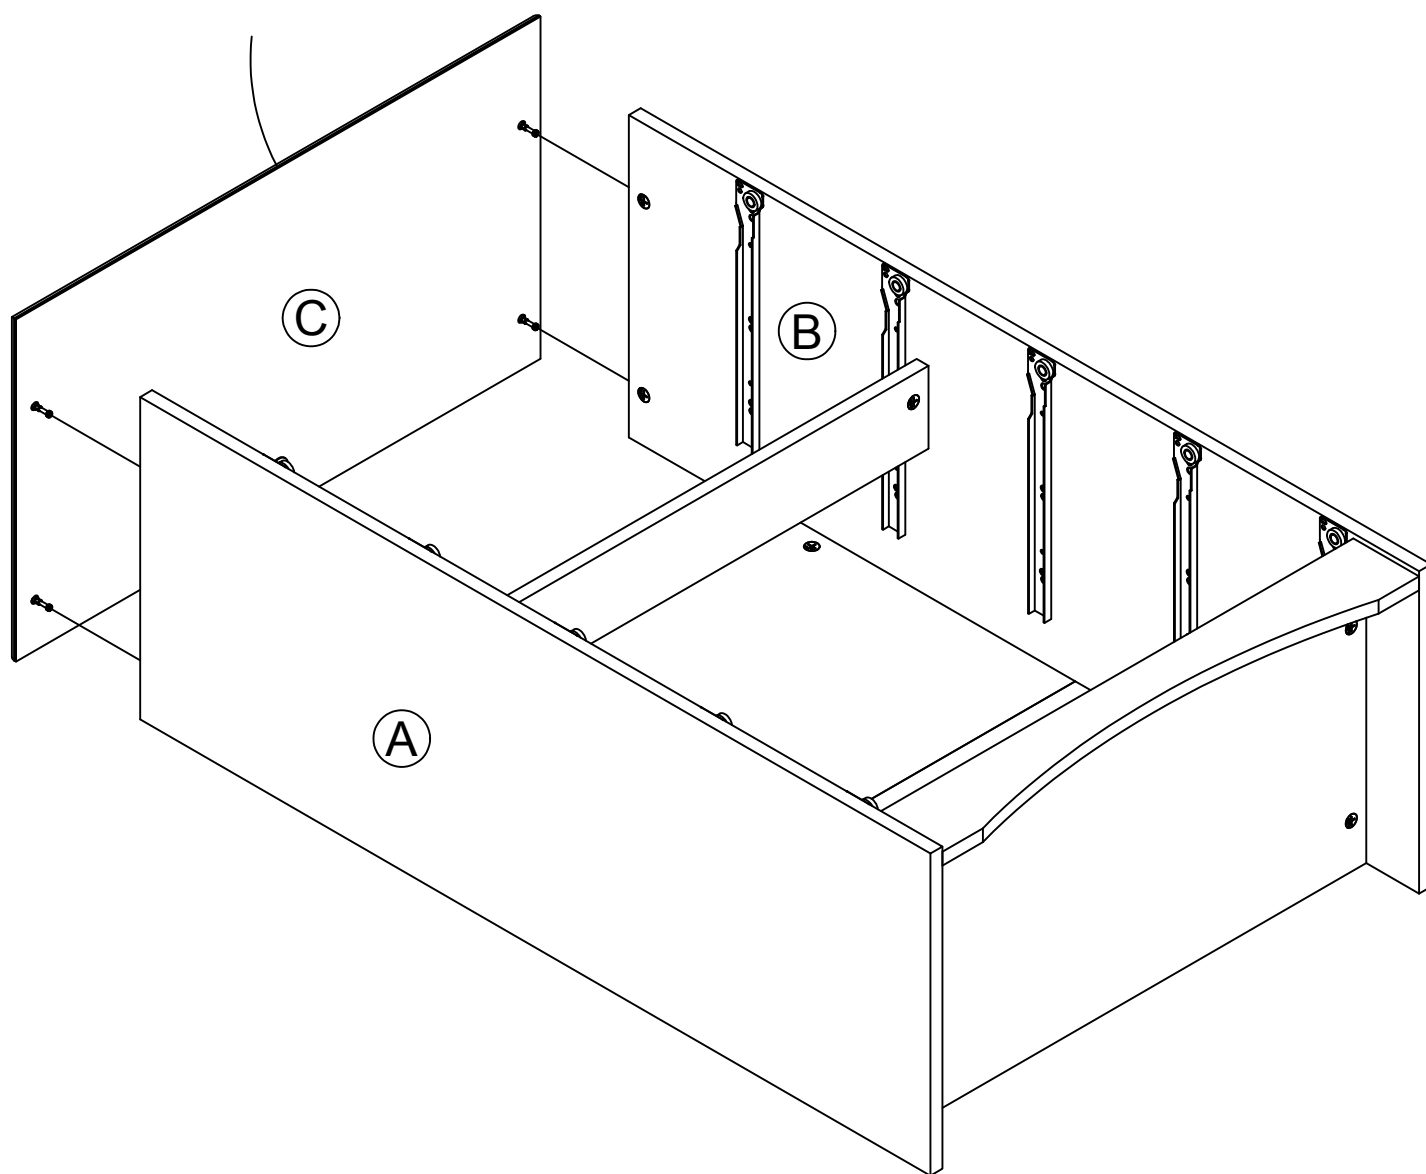

9

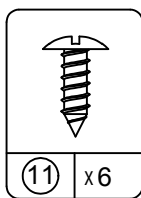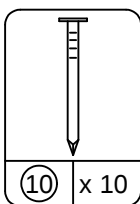


⚠ WARNING

Please make sure that the Back Panel is attached securely. All nails must be driven into the parts straight. Failure to do so could cause instability, product collapse, and/or serious injury.

⚠ ADVERTENCIA

Por favor asegúrese que el Panel Trasero se ate firmemente. Todos los clavos deben manejarse en las partes recto y firmemente. El fracaso para hacer para que podría causar inestabilidad, derrumbamiento del producto, y/o la lesión seria.

Notch location
Ubicación de la muesca

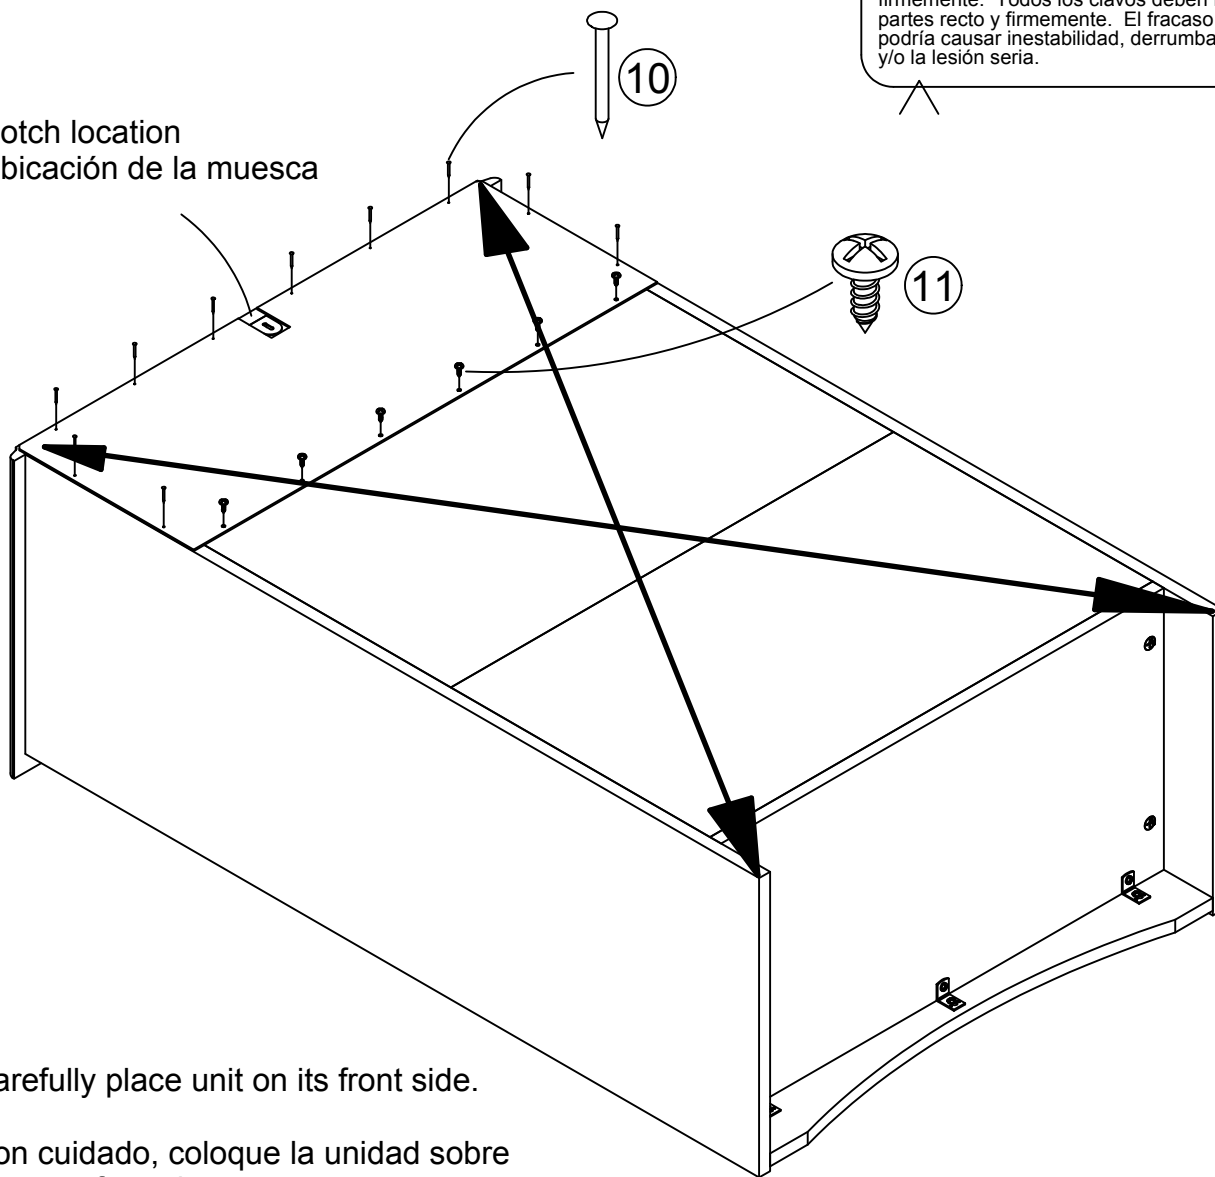

Carefully place unit on its front side.

Con cuidado, coloque la unidad sobre su parte frontal.

Assure that the unit is square.

Distance from corner to corner must be equal as shown.

Asegura que el unidad es cuadrada.

Distancia de esquina a esquina debe ser igual como se muestra por favor.



IMPORTANT! THE BACK PANEL IS A STRUCTURAL PART OF THIS UNIT AND MUST BE INSTALLED PROPERLY.

¡IMPORTANTE! EL PANEL TRASERO ES UNA PARTE ESTRUCTURAL DE ESTA UNIDAD Y DEBE SER INSTALADO CORRECTAMENTE.



10

Lay the drawer sides down on a flat hard surface. Carefully line up the drawer bracket with the holes in the drawer side as shown. Using a hammer, tap each drawer bracket stem part way into each hole. Repeat this process until the drawer bracket is fully seated on the drawer side.



Coloque los lados del cajón sobre una superficie plana y dura. Alinee cuidadosamente el soporte del cajón con los agujeros en el lado del cajón, como se muestra. Con un martillo, golpee cada vástago del soporte del cajón parcialmente en cada orificio. Repita este proceso hasta que el soporte del cajón esté completamente asentado en el lado del cajón.

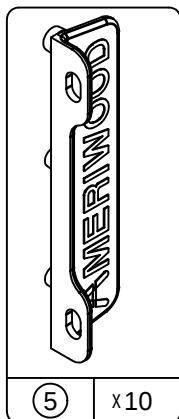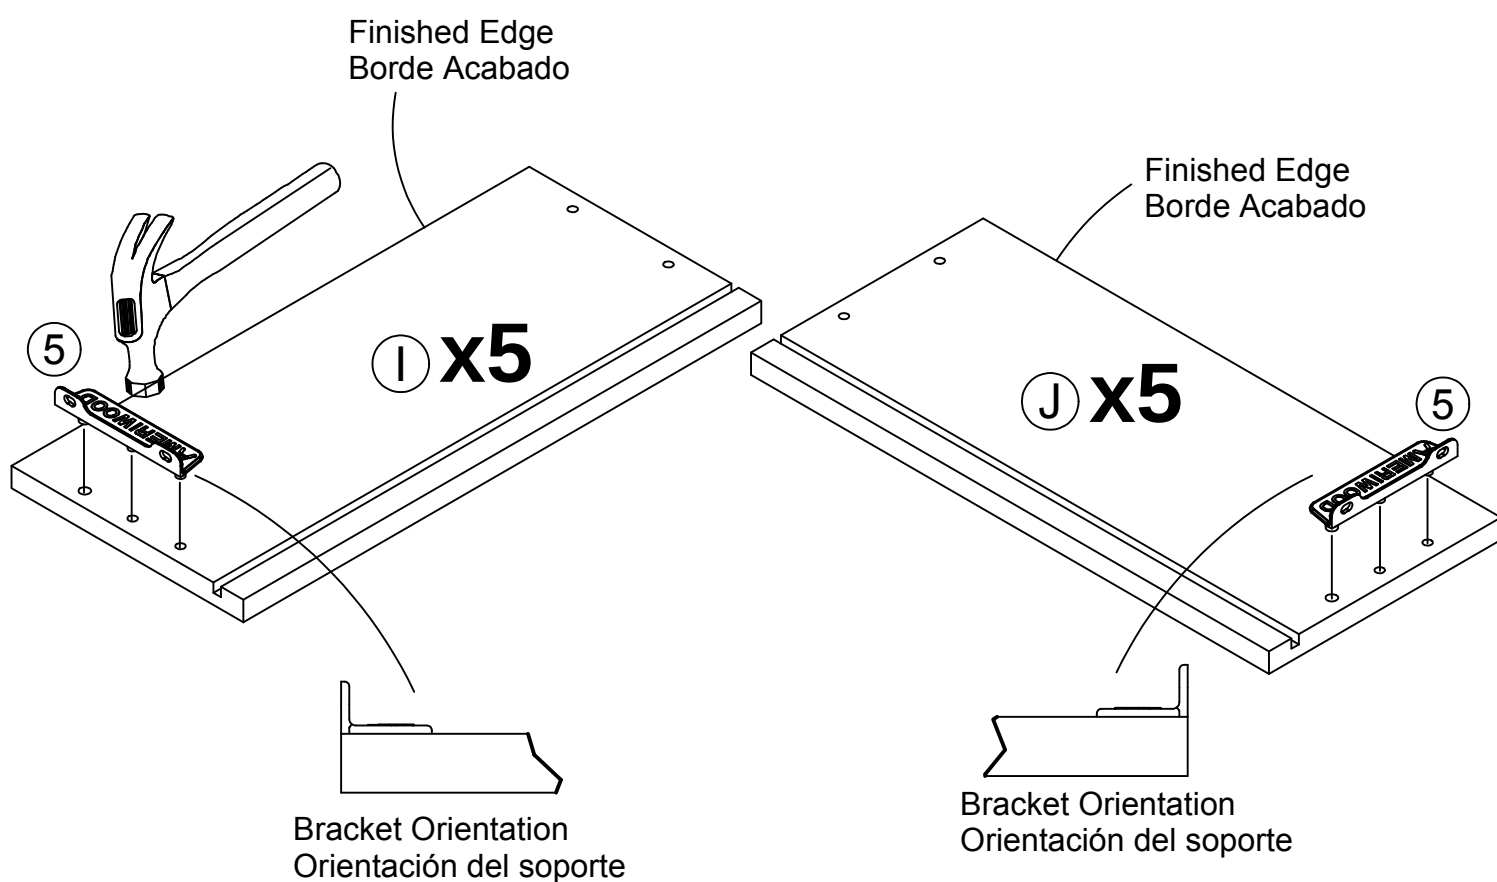



11

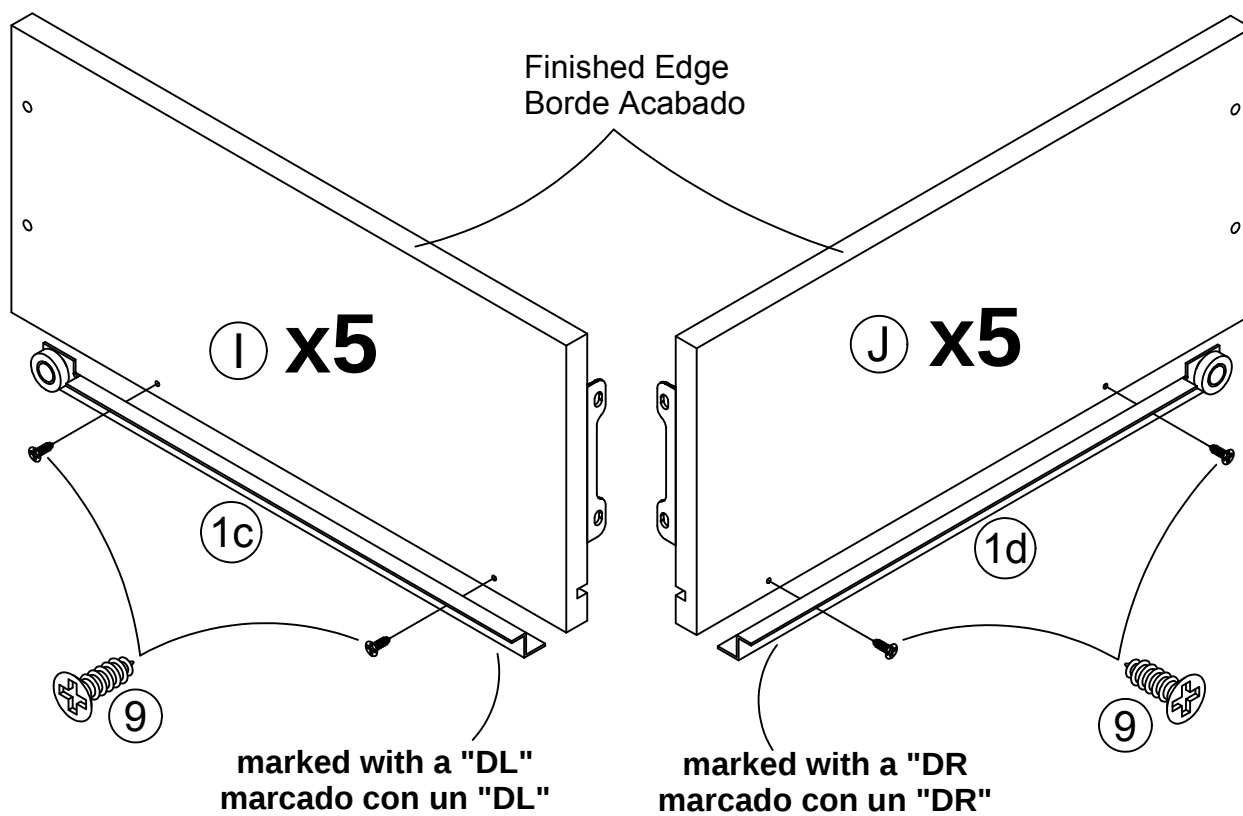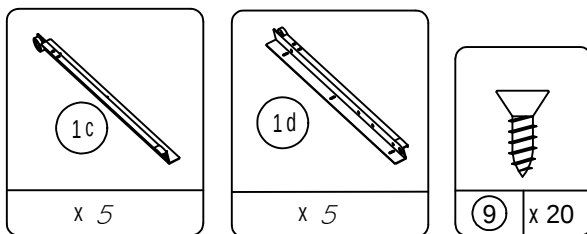



12

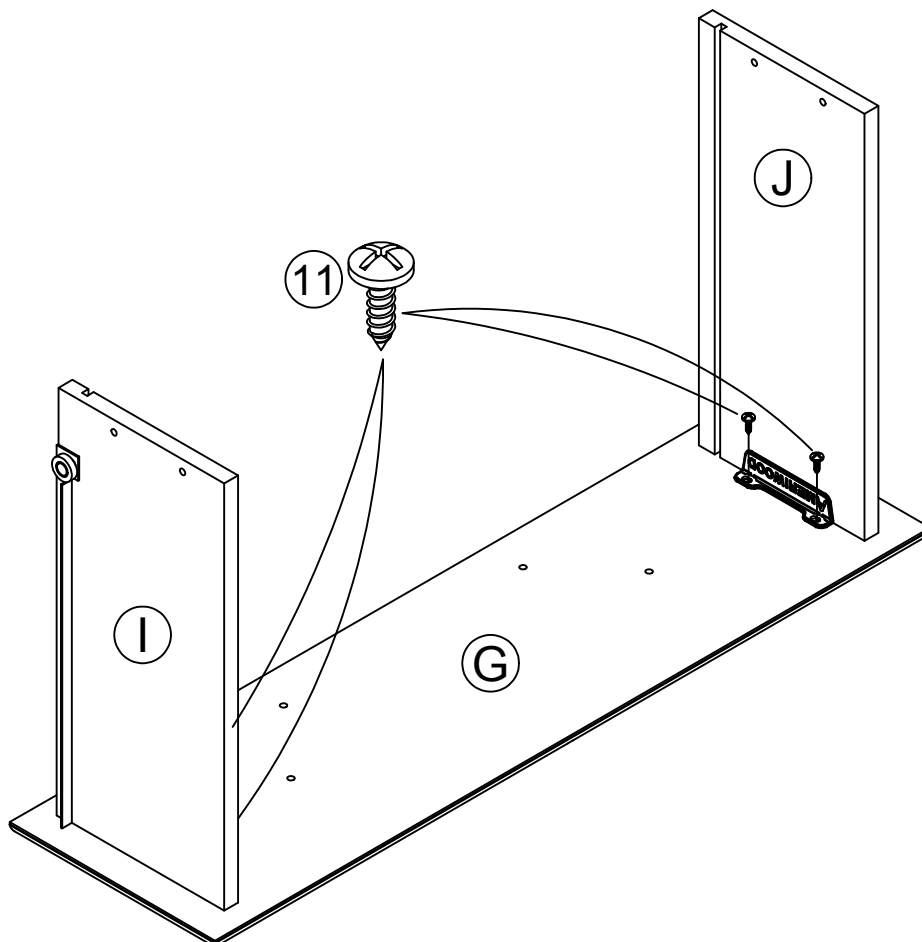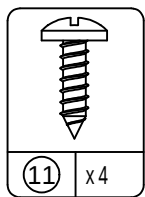



12

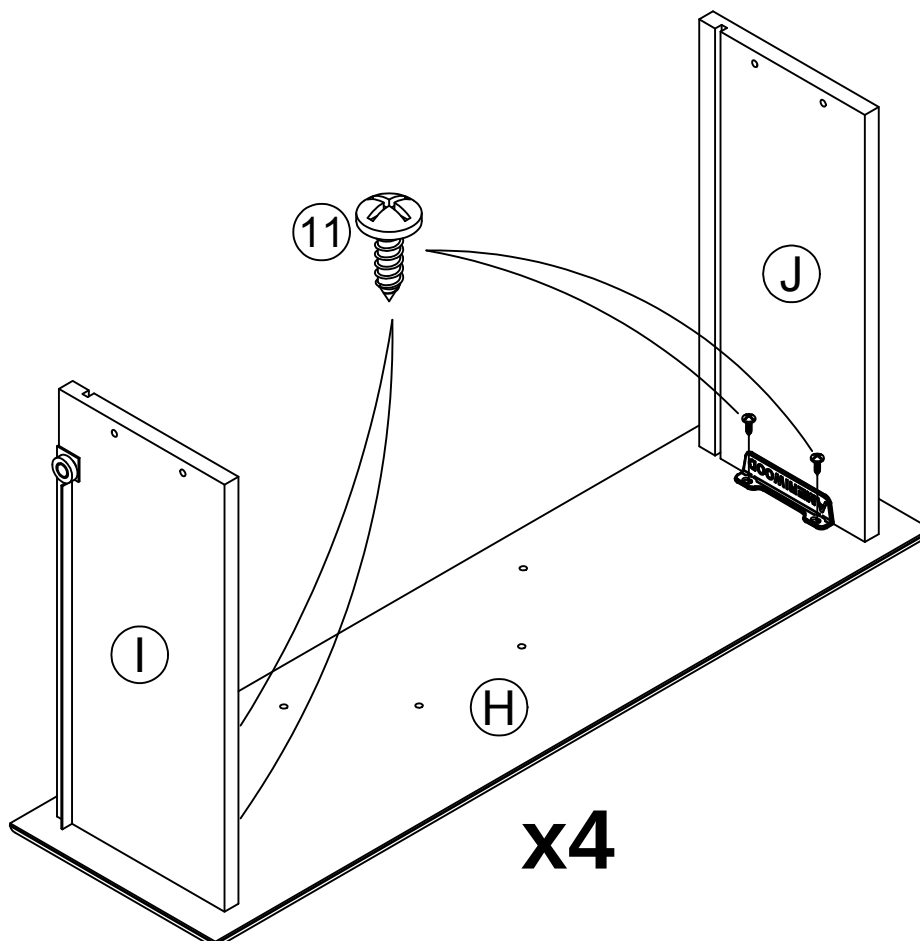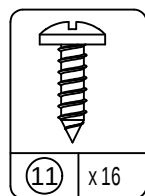



13

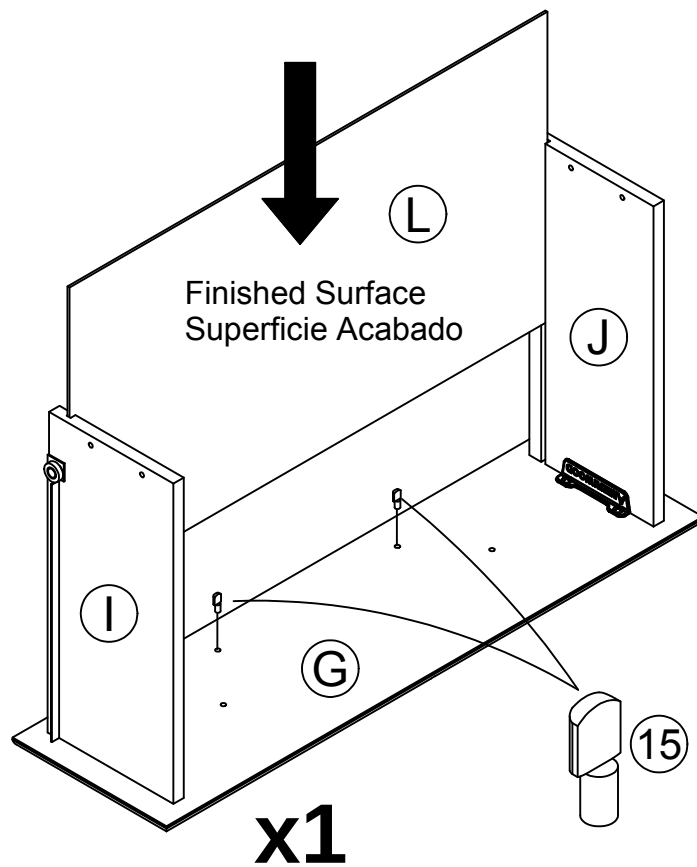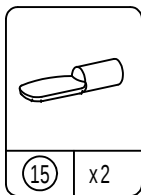



14

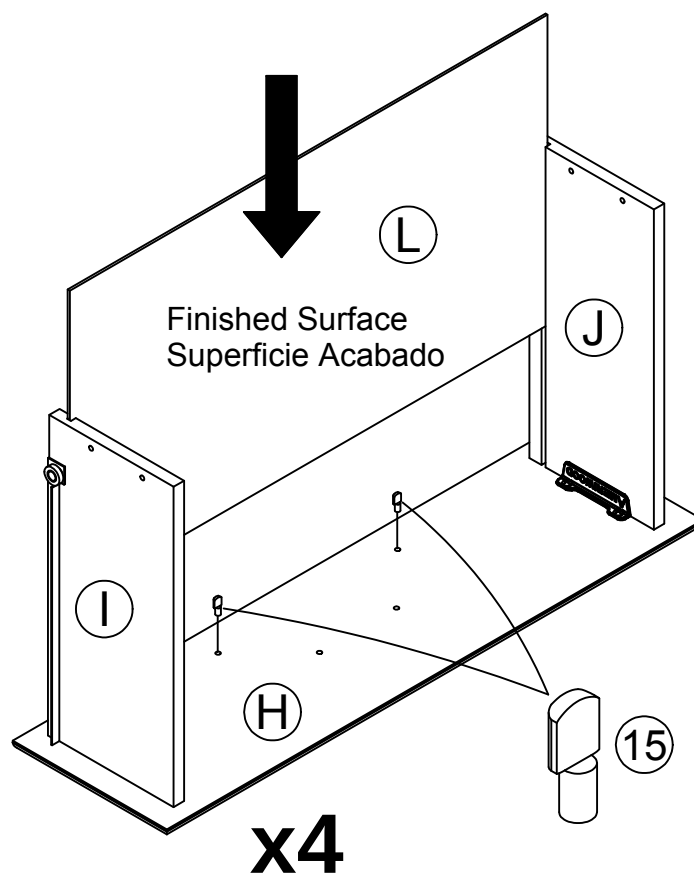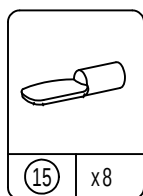




15

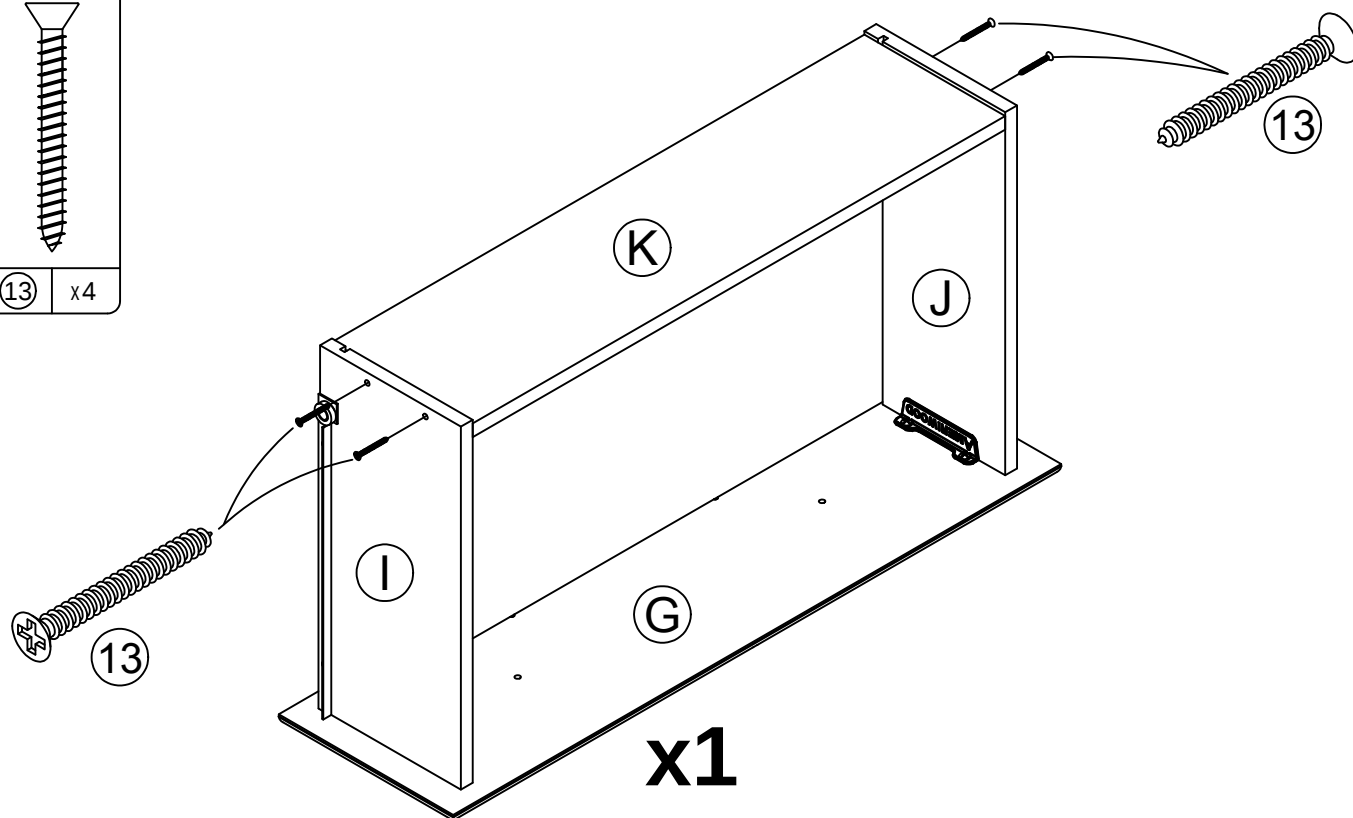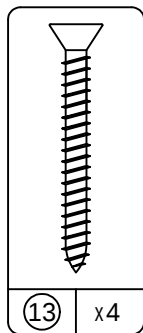





16

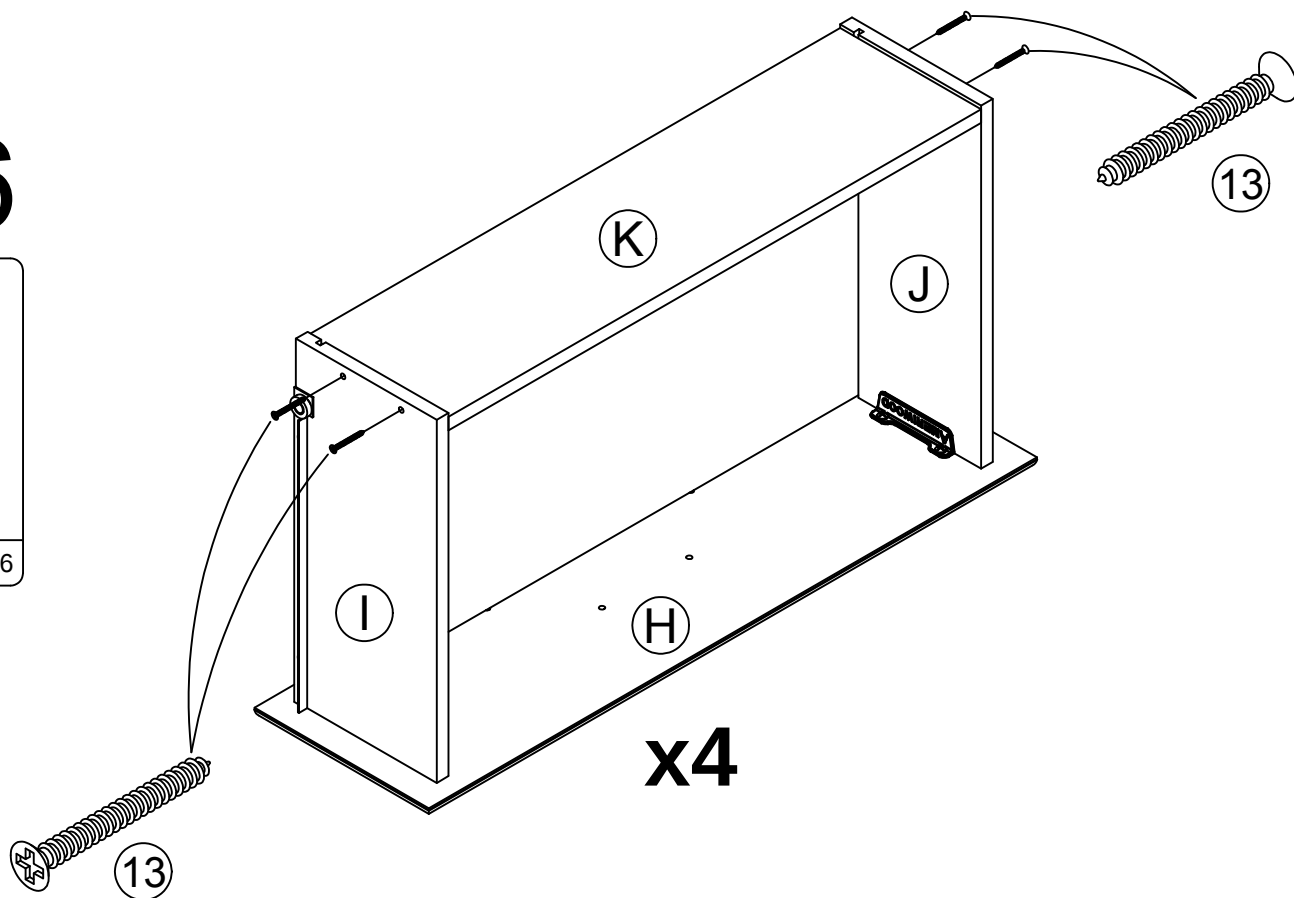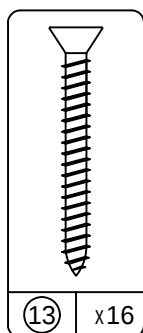

17

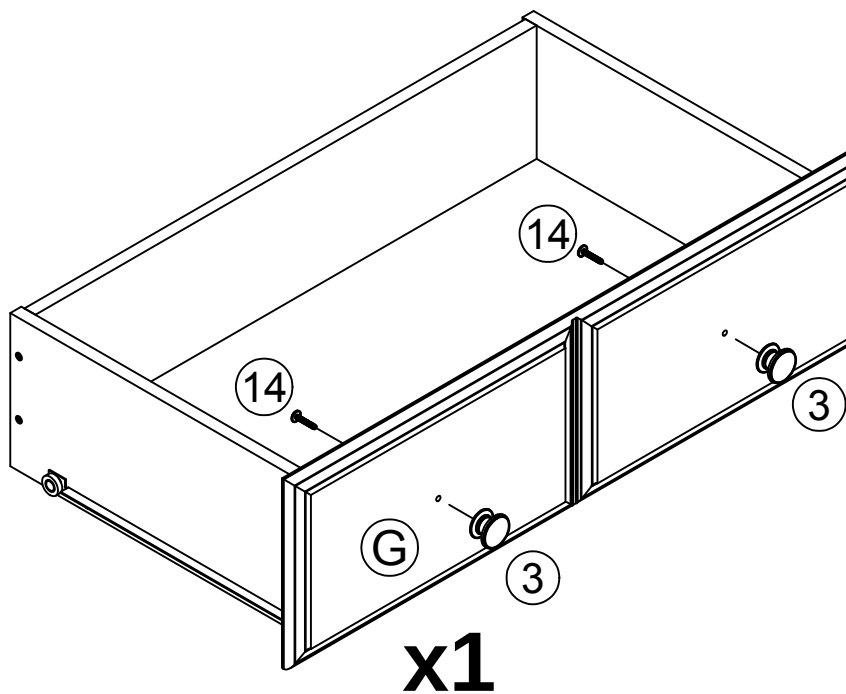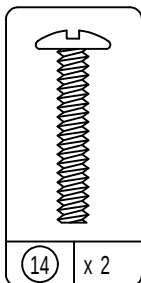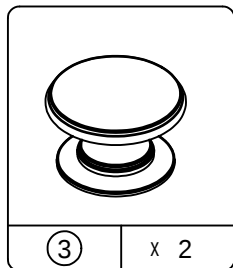

18

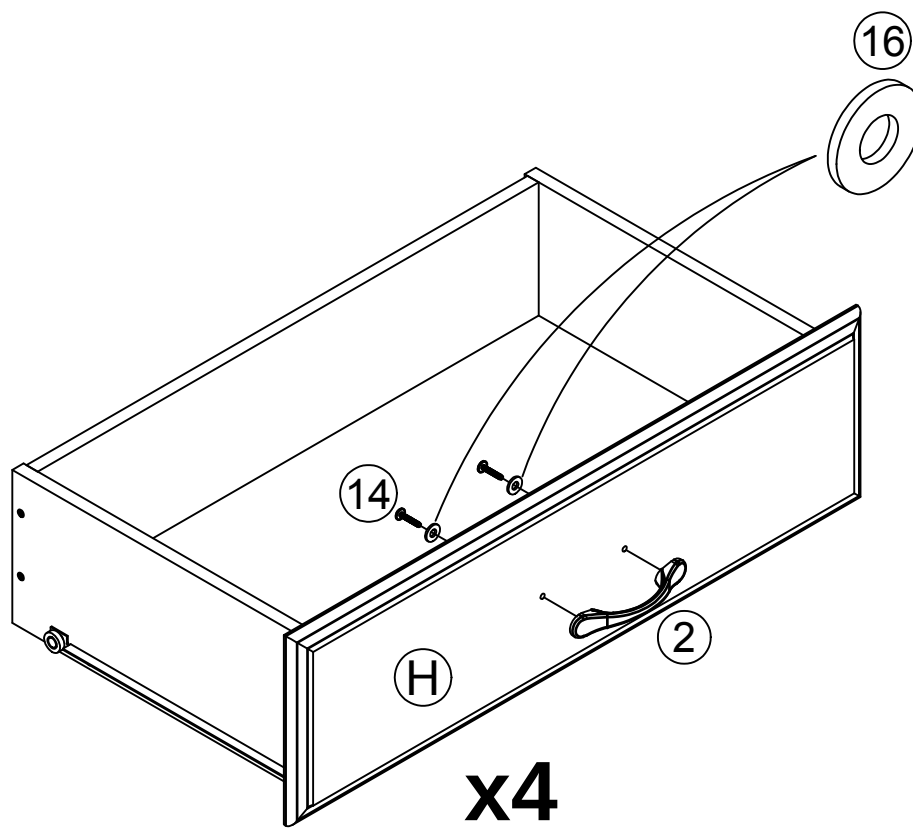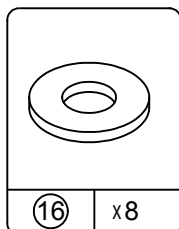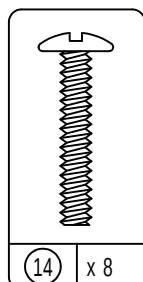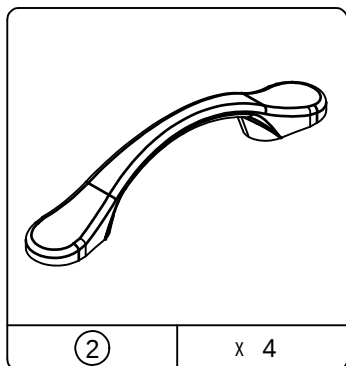




19

Please Note:

The top of the unit is not shown for visibility of the safety bracket attachment. **DO NOT** remove the top of the unit.

Observe por favor:

La unidad de encima no demuestra la visibilidad del accesorio del soporte de seguridad. No quite la parte de encima de la unidad.

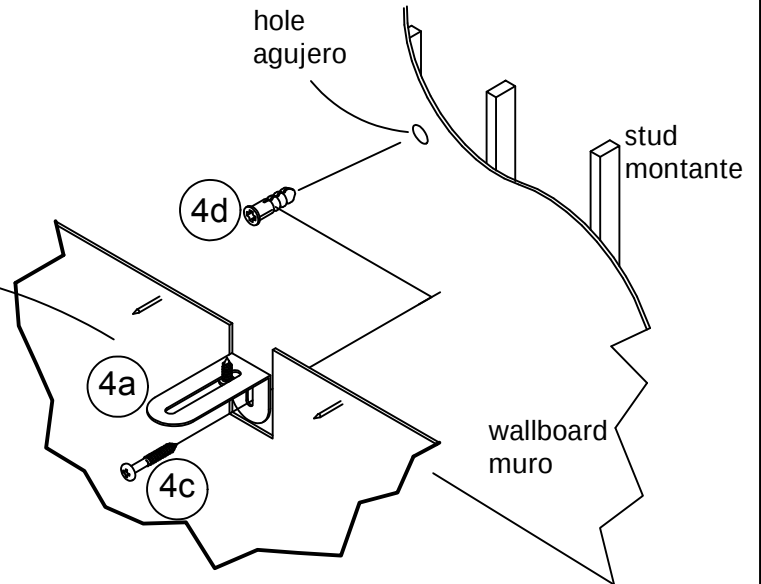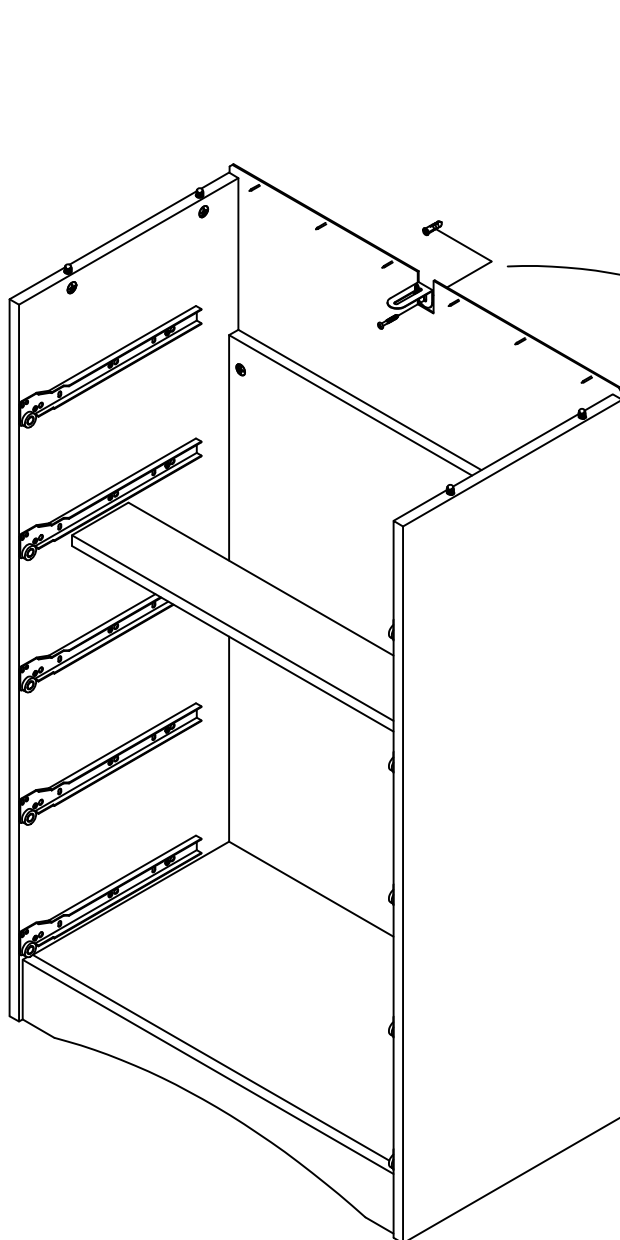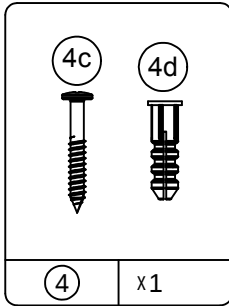

Option 1:

Securely fasten the screw (4c) into a solid area of the wall as shown.

Opción 1:



Atornille firmemente el tornillo (4c) en el área sólida de la pared como mostrado.

Option 2:

Drill a 3/16" diameter hole (5mm) in the wallboard. Tap the wall anchor(4d) into the hole until it is flush. Fasten the wall bracket (4a) to the wall anchor (4d) with the screw (4c).

Opción 2:


Taladre un agujero de 3/16" de diámetro (5mm) en la pared. Golpea la ancla de pared (4d) en el agujero hasta que sea parejo. Abroche la escuadra de pared (4a) al la ancla de la pared (4d) con el tornillo (4c).

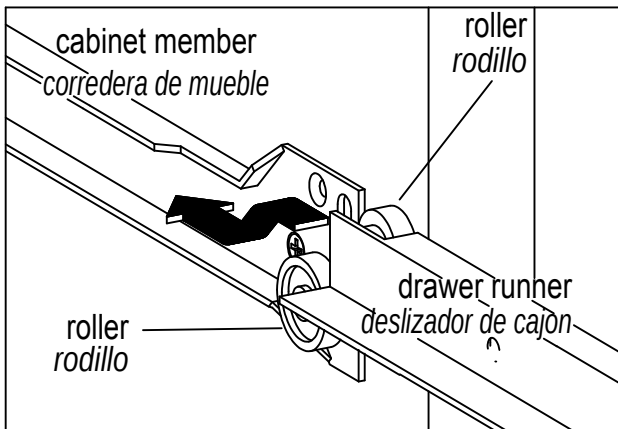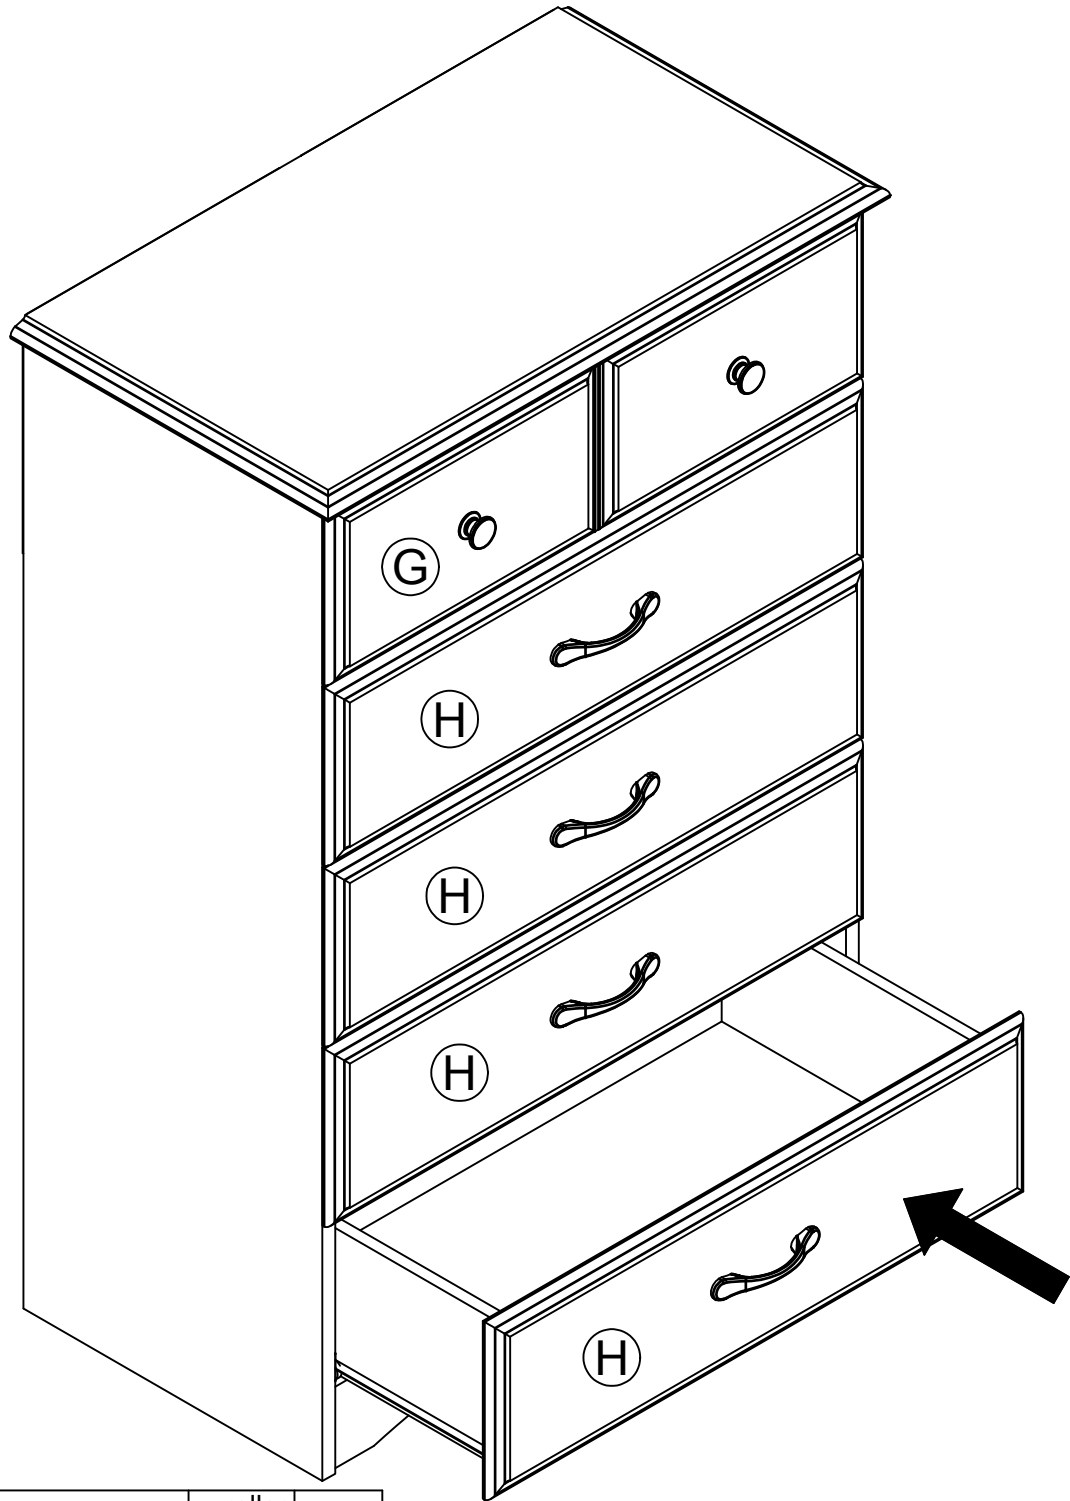

MAXIMUM LOADS – CARGA MAXIMA

This unit has been designed to support the maximum loads shown. Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.

Esta unidad ha sido diseñada para soportar la carga máxima anotada. El exceder estos límites puede causar inestabilidad, colapsarse y/o causar serias lesiones.

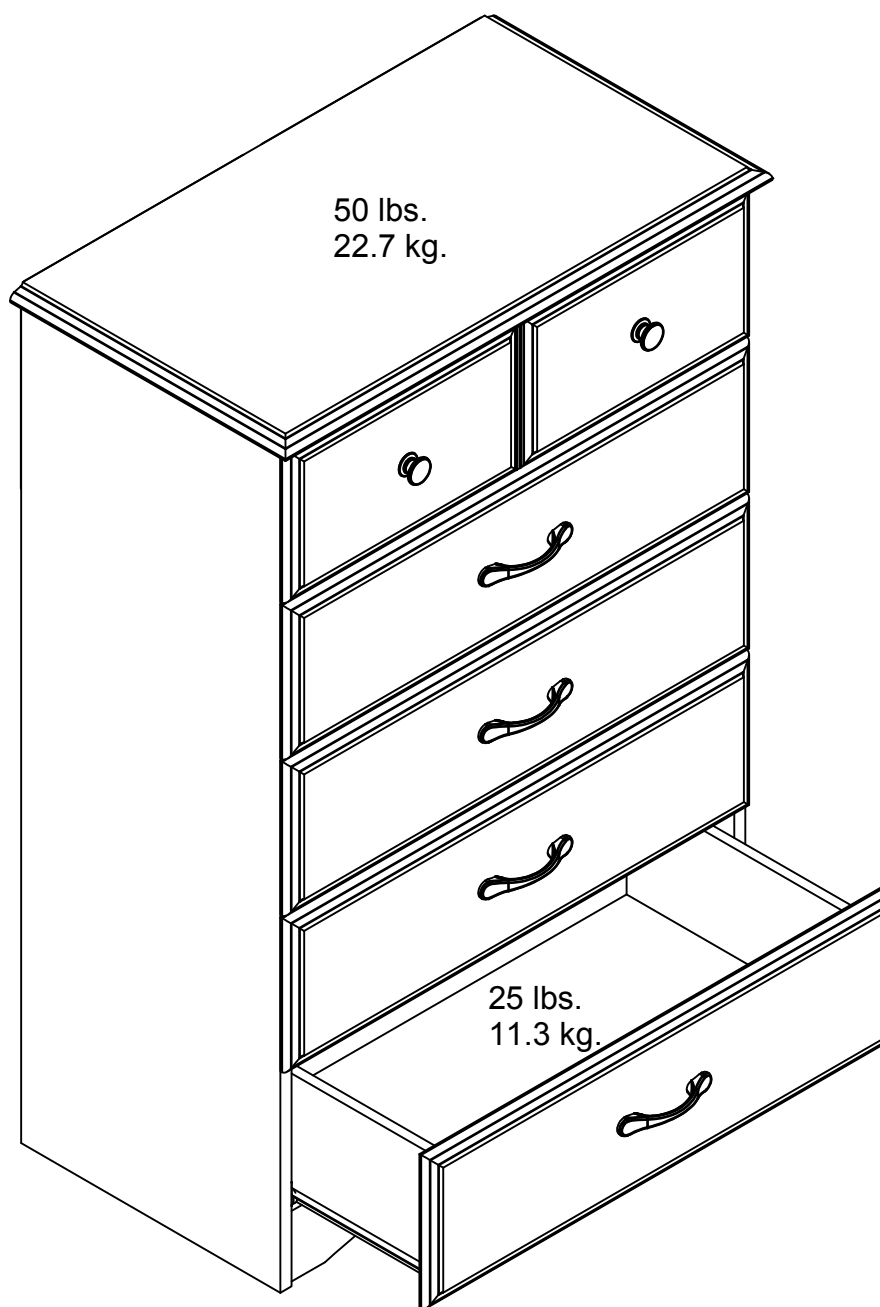

Load drawers by starting with the bottom drawer and working your way up.
Cargue los cajones, comenzando con el cajón inferior y su forma de trabajo.

Certificate of Conformity

1. This certificate applies to the Ameriwood Industries Inc. product identified by this instruction manual.
2. This certificate applies to compliance of this product with the CPSC Ban on Lead-Containing Paint (16 CFR 1303).
3. This product is distributed by: Ameriwood Industries Inc.
410 East First Street South
Wright City, MO 63390
1-636-745-3351
4. Site of manufacture:
☐ Cornwall, ON
5. See front page of instruction manual for date of manufacture.



Please refer to part numbers when reordering

For questions or comments about product:

www.ameriwood.com/parts or Call toll-free: 1-800-489-3351

Made in / Hecho en CANADA. Distributed by Kmart Corporation, Hoffman Estates, IL 60179
SHOP kmart.com

B345934309K00