


CONVENIENCE CONCEPTS

Tahoe Highboy TV Stand

Item No. 8067000





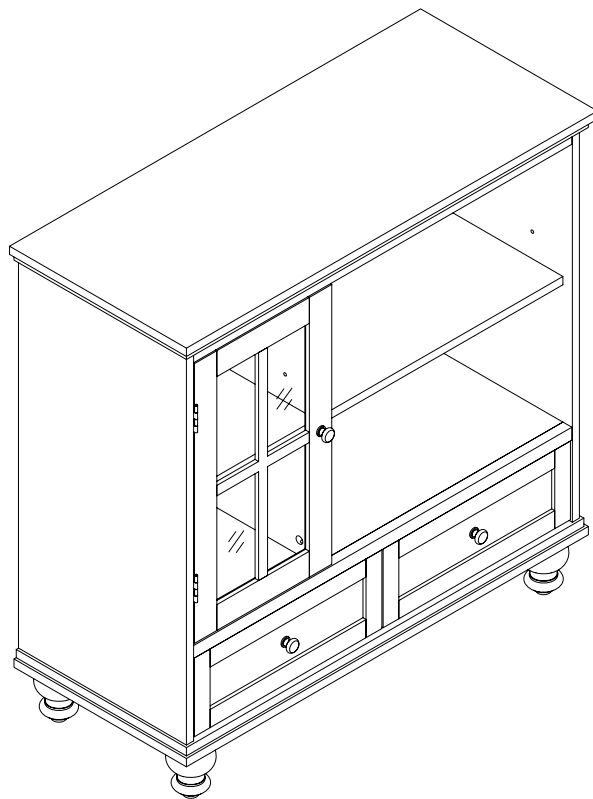











Please do not return to the store







- . Broken or Missing Parts?
- . Need help with Assembly?

If you have any questions just call 1-800-468-6447 or email us at parts@convenience-concepts.com














HARDWARE LIST

CODE	NAME	FIGURE	Q'TY
A	CAM LOCK (Ø15*9mm)		24PCS
B	CAM BOLT (Ø6.5*35mm)		24PCS
C	WOOD DOWEL (Ø6*30mm)		30PCS
D	KNOB		3PCS
E	KNOB SCREW (Ø4*12mm)		2PCS
F	KNOB SCREW (Ø4*22mm)		1PC
G	WOOD SCREW (Ø7*25mm)		11PCS
H	MAGNET		1PC
I	MAGNET SCREW (Ø3*15mm)		2PCS
J	ROUND HEAD SCREW (Ø3*12mm)		26PCS
K	FLAT HEAD SCREW (Ø3*12mm)		4PCS
L	SHELF PIN		8PCS
M	WOOD GLUE		1PC
N	ALLEN WRENCH		1PC

PARTS LIST

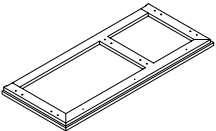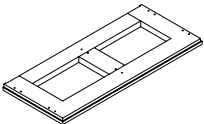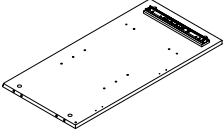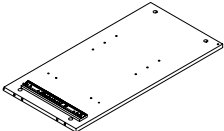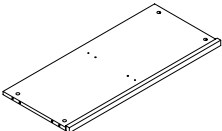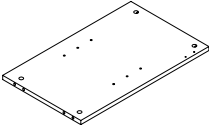
CODE	NAME	FIGURE	Q'TY
①	TOP PANEL		1PC
②	BOTTOM PANEL		1PC
③	LEFT SIDE PANEL		1PC
④	RIGHT SIDE PANEL		1PC
⑤	FIXED PANEL		1PC
⑥	LARGE PARTITION		1PC

PARTS LIST

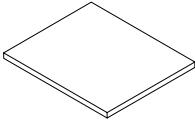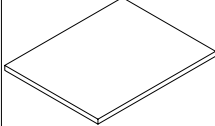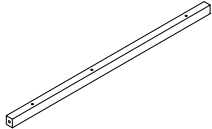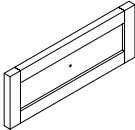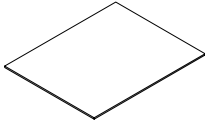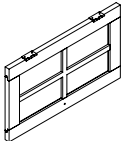CODE	NAME	FIGURE	Q'TY
⑦	SMALL PARTITION		1PC
⑧	LEFT SIDE ADJUSTABLE SHELF		1PC
⑨	RIGHT SIDE ADJUSTABLE SHELF		1PC
⑩	FRONT CROSSBAR		1PC
⑪	FRONT PANEL OF DRAWER		2PCS
⑫	LEFT DRAWER PANEL		2PCS
⑬	RIGHT DRAWER PANEL		2PCS
⑭	BACK DRAWER PANEL		2PCS
⑮	BOTTOM DRAWER PANEL		2PCS
⑯	DOOR		1PC
⑰	BACK PANEL		1PC
⑱	FOOT		4PCS
⑲	LEG		1PC

STEP 1

A x 4PCS
B x 4PCS
C x 4PCS
H x 1PC
I x 2PCS

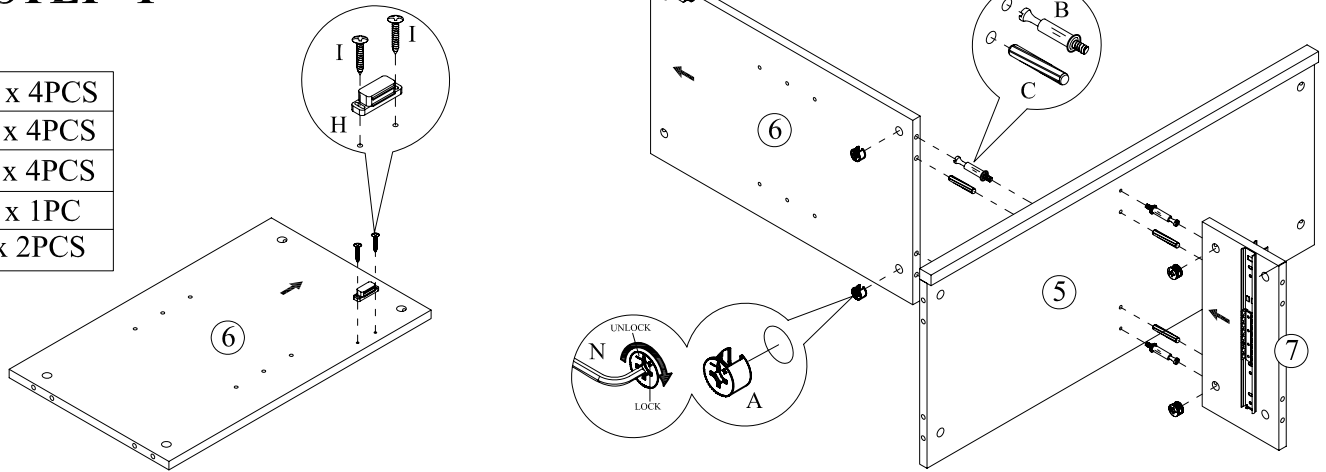


(1) ATTACH CAMLOCKS AND HARDWARE AS SHOWN.


(2) CONNECT PIECES.

(3) GENTLY TIGHTEN CAMLOCKS.


HOW TO USE THE CAMLOCK SYSTEM

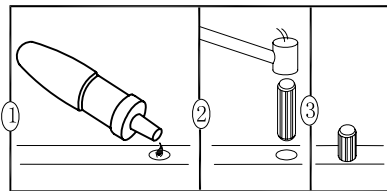

APPLY GLUE AND TAP IN WOOD DOWELS

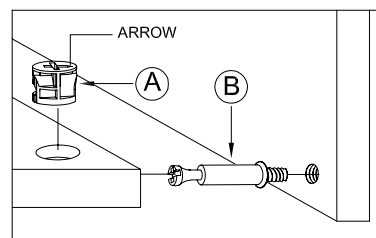

INSERT HARDWARE


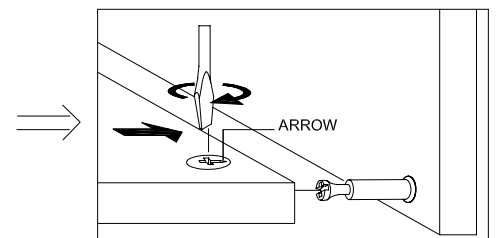


CONNECT PANELS AND GENTLY TIGHTEN CAMLOCKS

• NOTE: THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS.

STEP 2

A x 4PCS
B x 4PCS
C x 6PCS

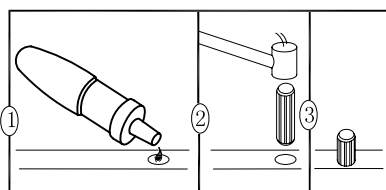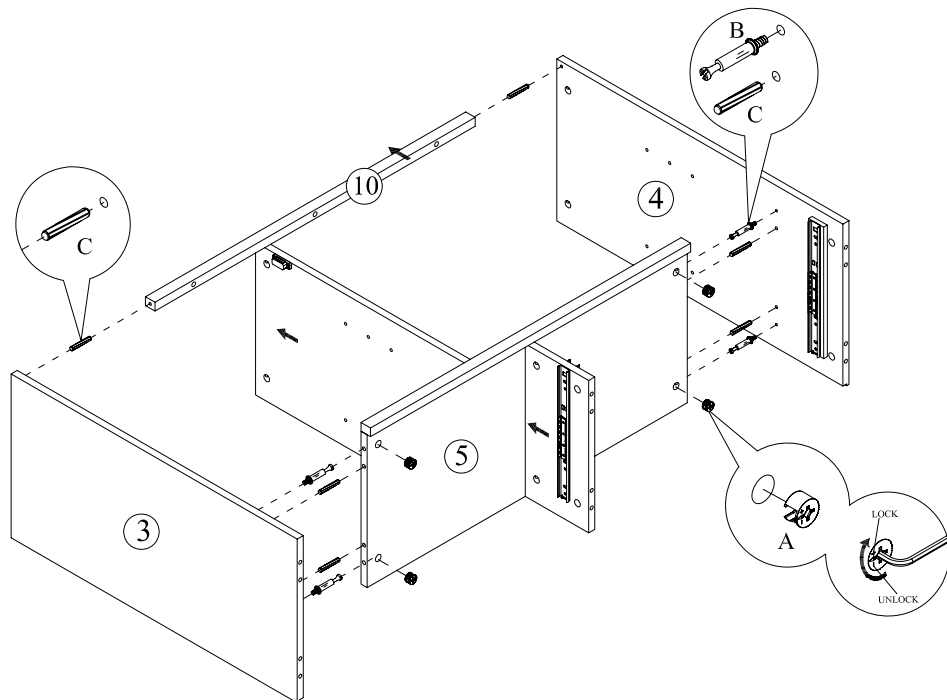

APPLY GLUE AND TAP IN WOOD DOWELS



(1) ATTACH CAMLOCKS AND HARDWARE .

(2) CONNECT PIECES TO UNIT.

(3) GENTLY TIGHTEN CAMLOCKS.

STEP 3

A x 6PCS
B x 6PCS
C x 6PCS

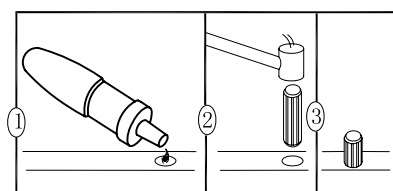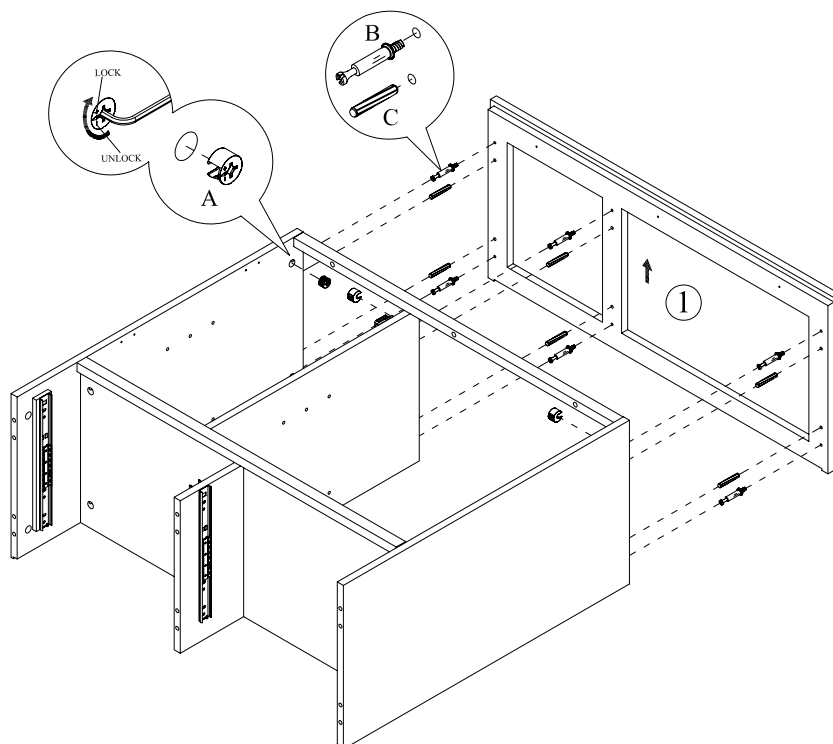


APPLY GLUE AND TAP IN WOOD DOWELS

(1) CONNECT TOP PANEL ① TO UNIT USING CAMLOCK SYSTEM.

STEP 4


(1) ATTACH FRONT CROSSBAR ⑩ TO UNIT USING WOOD SCREWS (G).

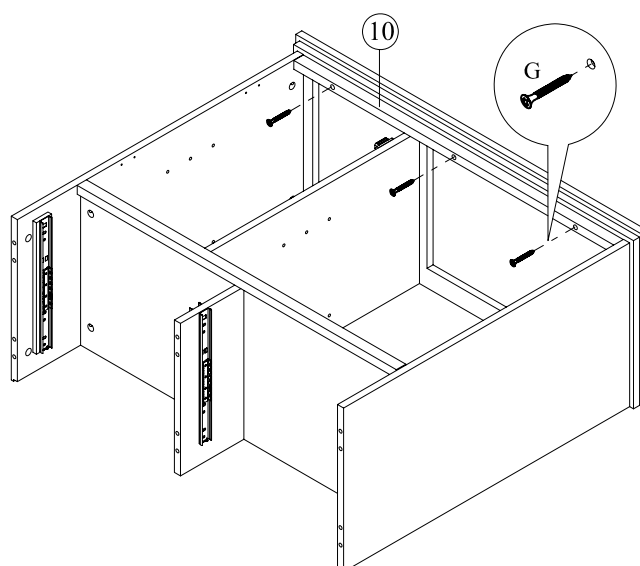


G x 3PCS

STEP 5

A x 6PCS
B x 6PCS
C x 6PCS

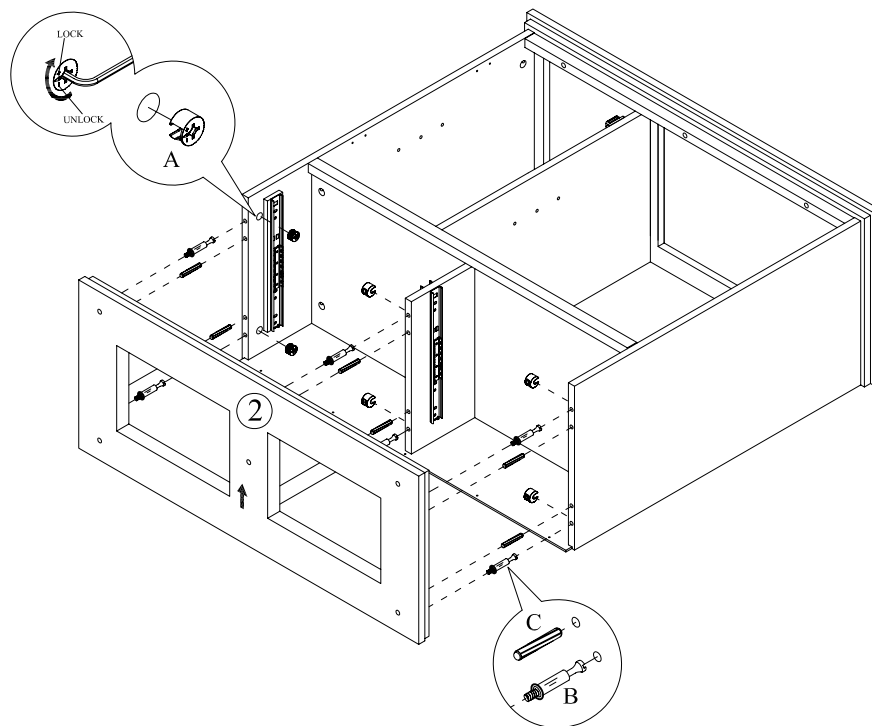


(1) ATTACH BOTTOM PANEL (2) TO UNIT USING CAMLOCK SYSTEM.

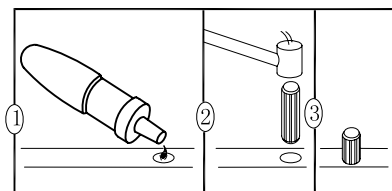

APPLY GLUE AND TAP IN WOOD DOWELS


STEP 6

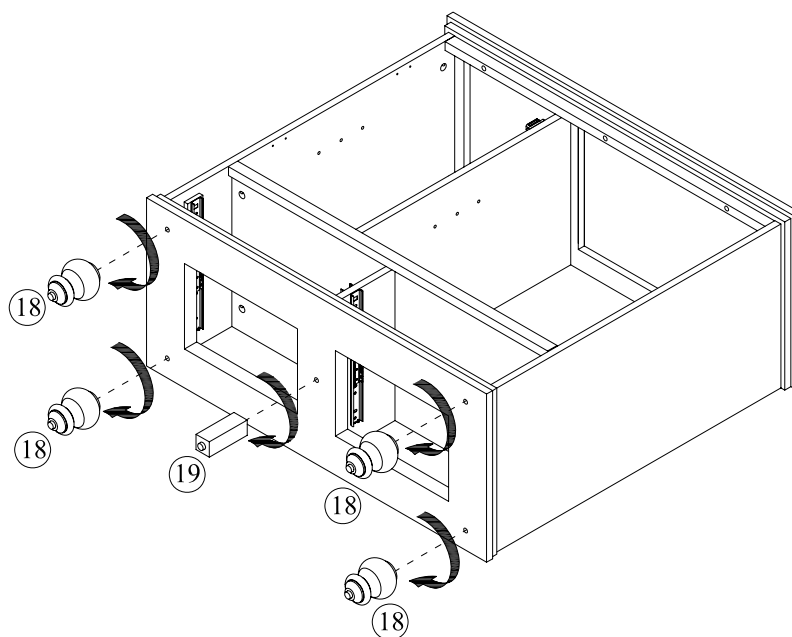

(1) ATTACH FEET (18) & (19) TO UNIT .

STEP 7


J x 26PCS

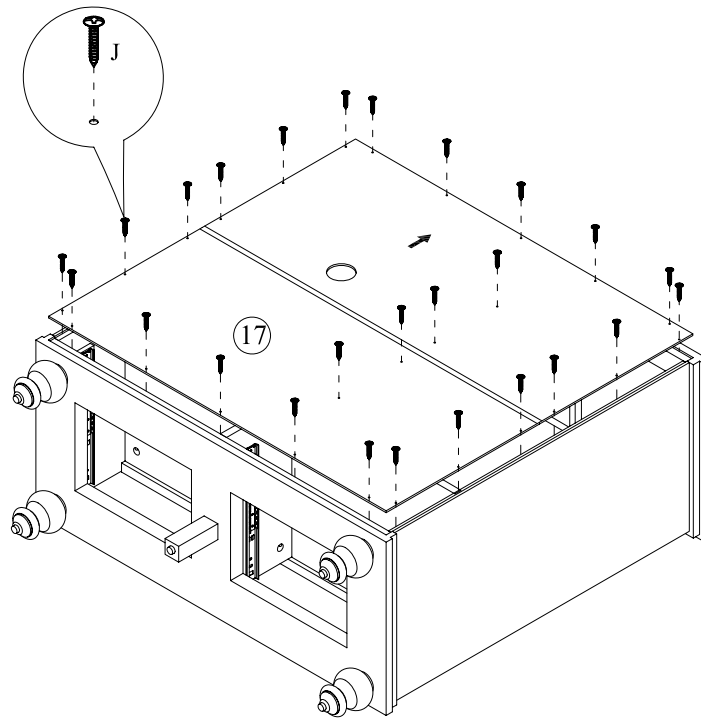

(1) FASTEN BACK PANEL TO UNIT WITH ROUND HEAD SCREW (J).

STEP 8


L x 8PCS

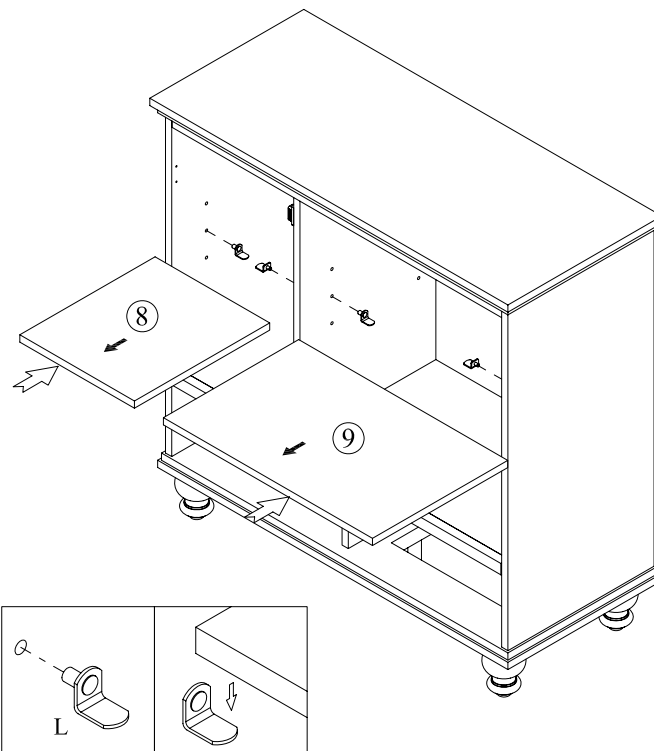

(1) INSERT SHELF BRACKETS.



(2) SLIDE IN SHELVES ⑧ & ⑨.

STEP 9

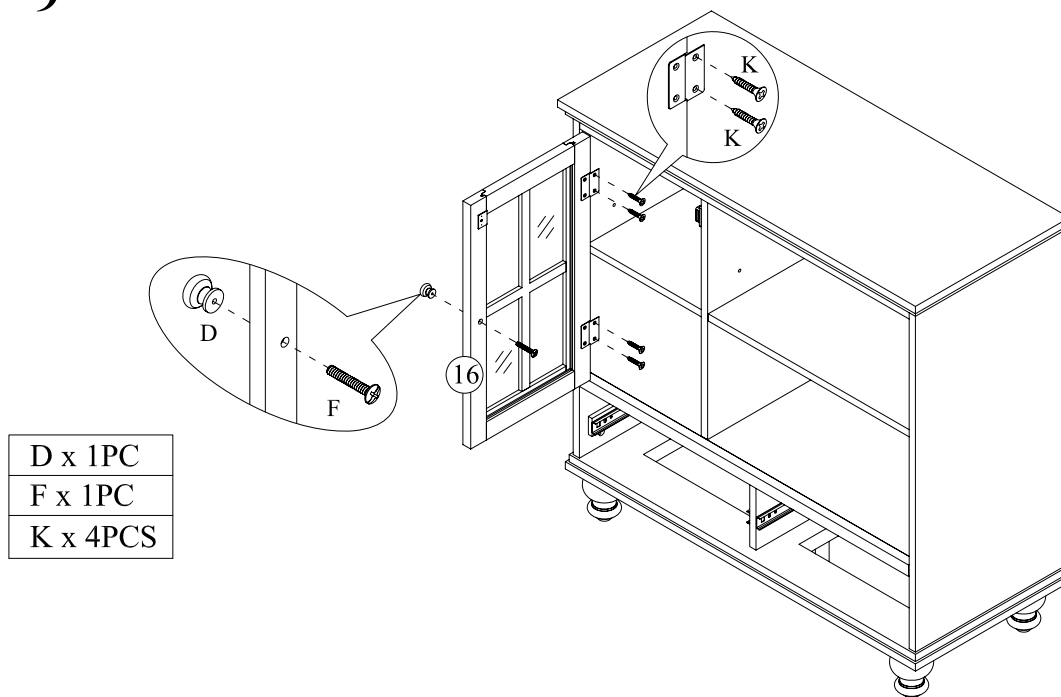

- (1) USING SCREWS(K), ATTACH DOOR TO UNIT.
- (2) ATTACH KNOBS TO DOOR AS SHOWN.


STEP 10

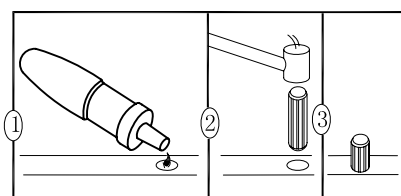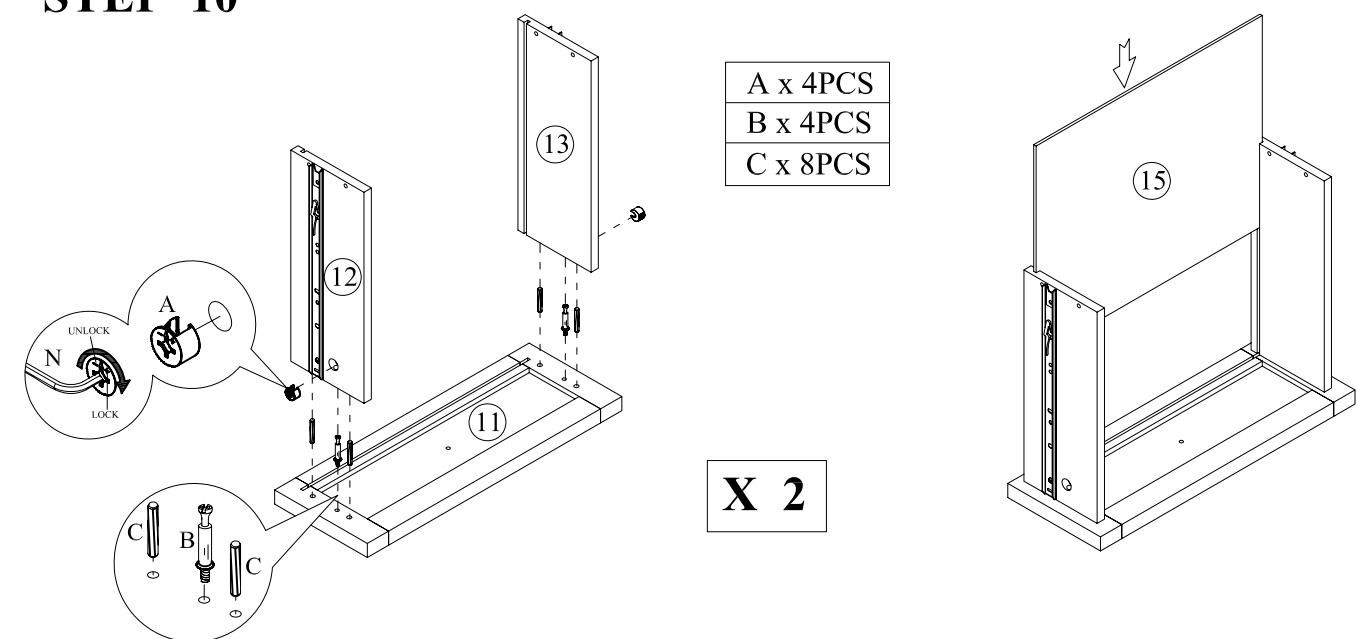

APPLY GLUE AND TAP IN WOOD DOWELS


- (1) ATTACH CAMLOCK HARDWARE TO PANELS.
- (2) GENTLY TIGHTEN CAMLOCKS.
- (3) SLIDE DRAWER BOTTOM (15) INTO DRAWER ASSEMBLY.

STEP 11

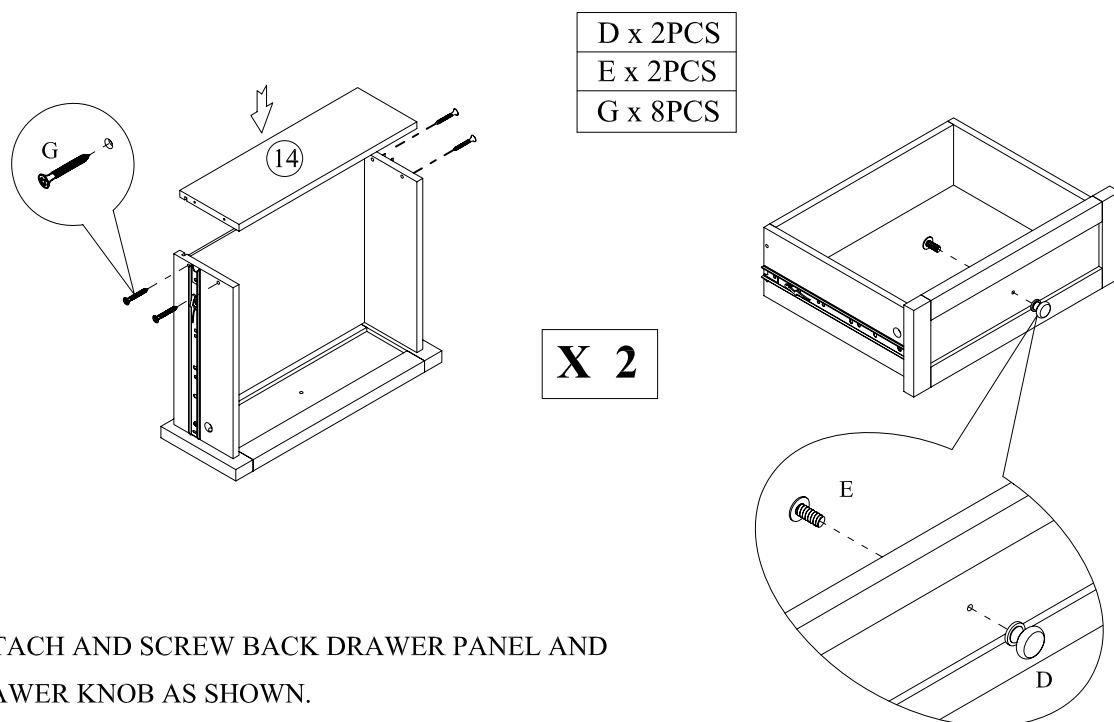

- (1) ATTACH AND SCREW BACK DRAWER PANEL AND DRAWER KNOB AS SHOWN.
- (2) REPEAT FOR SECOND DRAWER.

STEP 12

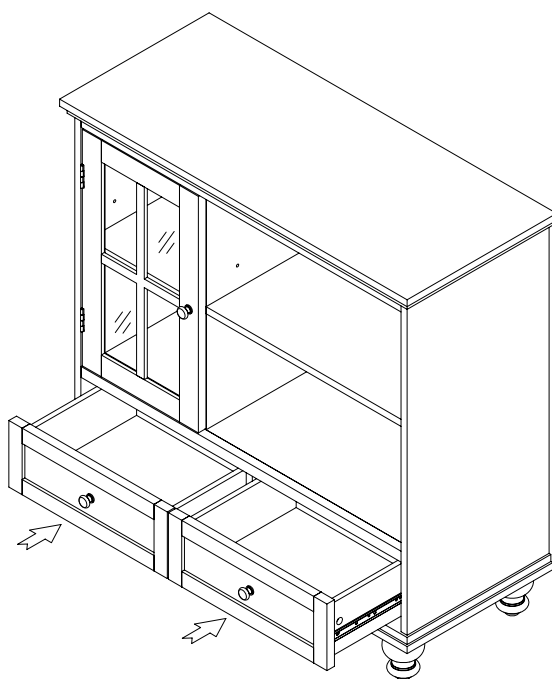

GENTLY SLIDE DRAWERS INTO YOUR TV STAND AND ENJOY!