

# CONVENIENCE CONCEPTS

## 131452BB TELEVISION CONSOLE



### Assembly Instructions

We have designed our furniture with you, the customer in mind. Our clear, easy to follow, step by step instructions will guide you through the project from start to finish. Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment.















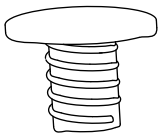
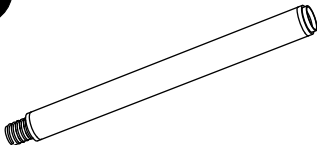
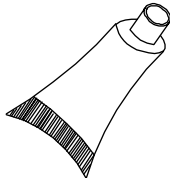


Please do not return to the store


- . Broken or Missing Hardware?
- . Need help with Assembly?

If you have any questions just call 1-800-468-6447 or email us at [parts@convenience-concepts.com](mailto:parts@convenience-concepts.com)


## Hardware List
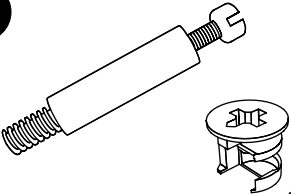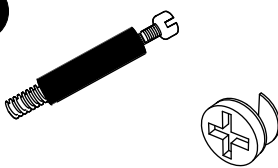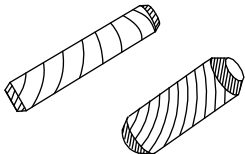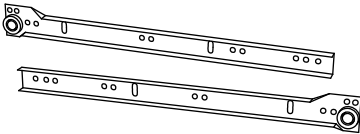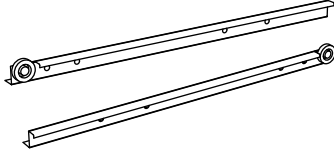
<div>A</div> <div></div> <div>Cambolt (17pcs) Camlock (16pcs)</div>	<div>B</div> <div></div> <div>Drawer Cambolt&amp;Camlock (2pcs)</div>	<div>C</div> <div></div> <div>Thin dowel (2pcs) Thick dowel (20pcs)</div>
<div>D</div> <div></div> <div>Cabinet Slide Rails CL (1pc) CR (1pc)</div>	<div>E</div> <div></div> <div>Drawer Slide Rails DL (1pc) DR (1pc)</div>	
<div>F</div> <div></div> <div>Slide Screw (12pcs)</div>	<div>G</div> <div></div> <div>Knob &amp; Knob Screw (4pcs)</div>	<div>H</div> <div></div> <div>Drawer Screw (4pcs)</div>
<div>I</div> <div></div> <div>Long Screw (4pcs)</div>	<div>J</div> <div></div> <div>Spring Insert (4pcs)</div>	<div>K</div> <div></div> <div>Bracket (2pcs)</div>
<div>L</div> <div></div> <div>Magnet (2pcs)</div>	<div>M</div> <div></div> <div>Metal Pin (4pcs)</div>	<div>N</div> <div></div> <div>Nail (15pcs)</div>
<div>O</div> <div></div> <div>Cap (10pcs)</div>	<div>P</div> <div></div> <div>Pole (10pcs)</div>	<div>Q</div> <div></div> <div>Glue (1pc)</div>

Part List

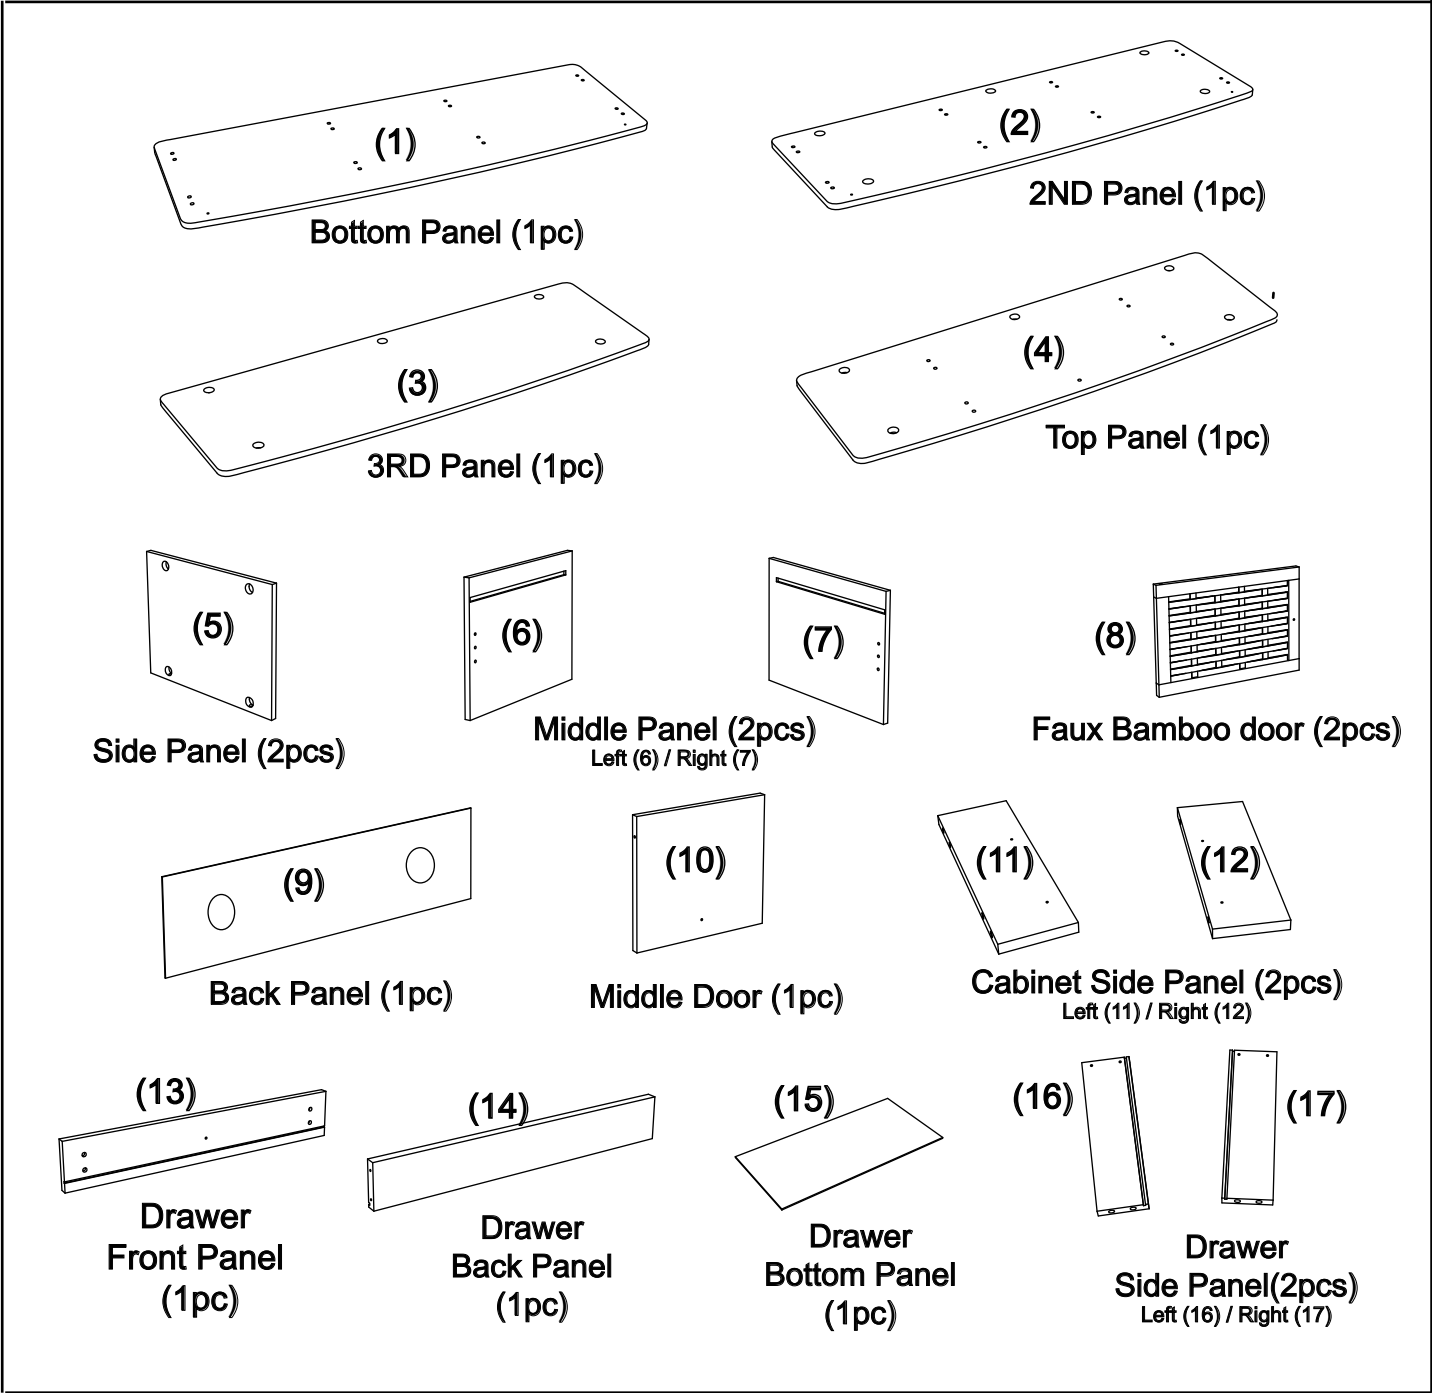


Assembling the unit with camlocks and wood dowels.

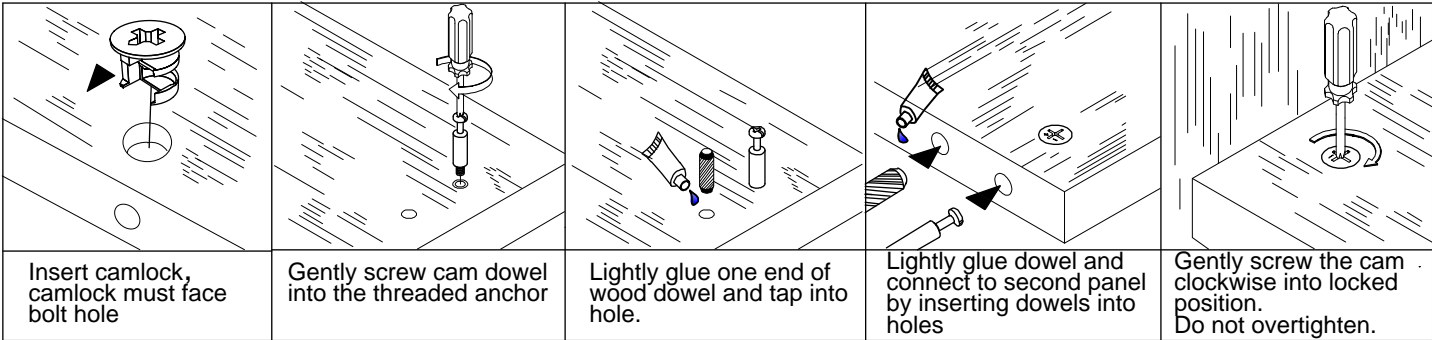

## step1

1. Attach cambolts (A) and thick dowels (C) to bottom panel (1).


2. Insert camlocks (A) to Side Panel (5).

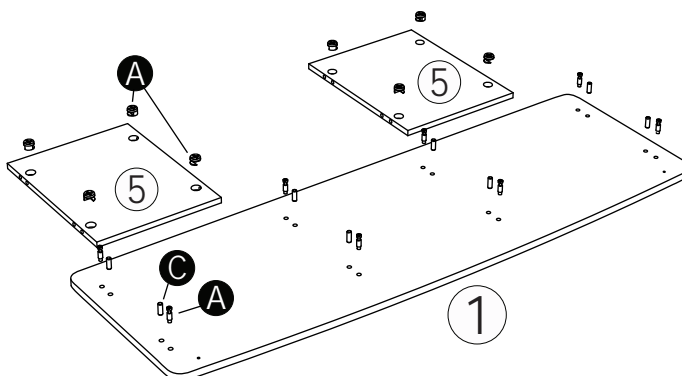

\*REFER TO PAGE3 FOR CAMLOCK ASSEMBLY.

## step2


Attach side panels (5) to bottom panel (1).  
Gently tighten camlocks.

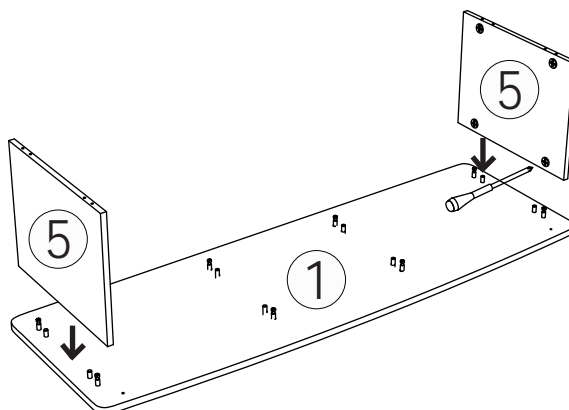

## step3


1. Attach cambolts (A) and thick dowels (C) to 2ND panel (2).

2. Attach camlocks (A) to middle panels (6)&(7).

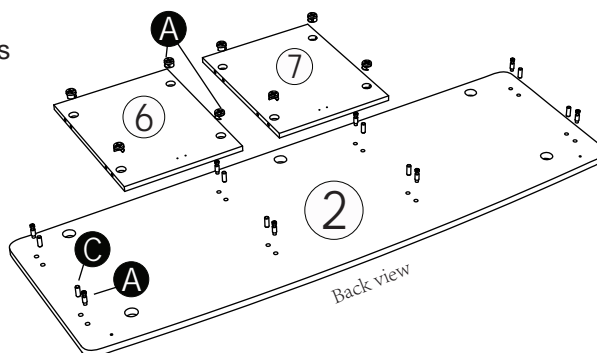

## step4

Attach middle panels (6)&(7) to bottom panel (1). Gently tighten camlocks.

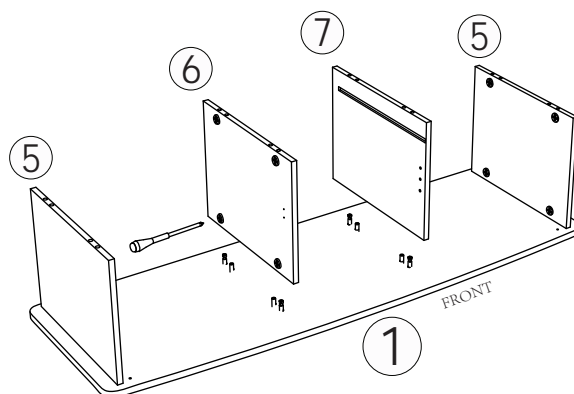


## step5

Middle door (10) assembly.


1. Push metal pins (M) into middle door (10).

2. Attach knob (G) to middle door using knob screw.

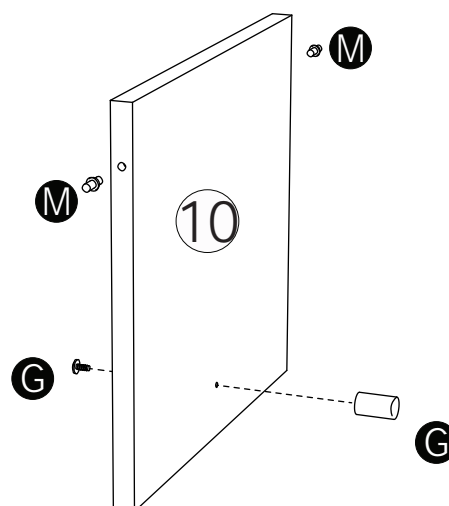

## step6

Attach middle door (10) to the middle panels by inserting the metal pins (M) into slots on each panel .

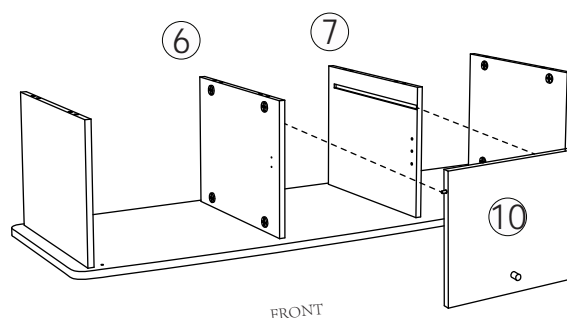



## step7

1. Attach 2ND panel (2) to unit.  
Gently tighten camlocks.

2. Lift middle door and gently  
push toward rear while placing  
metal pins into side wall holes.


3. Attach magnets (L) to middle  
panels (6)&(7) as shown.

\*These pins will  
hold door upright  
when in open.

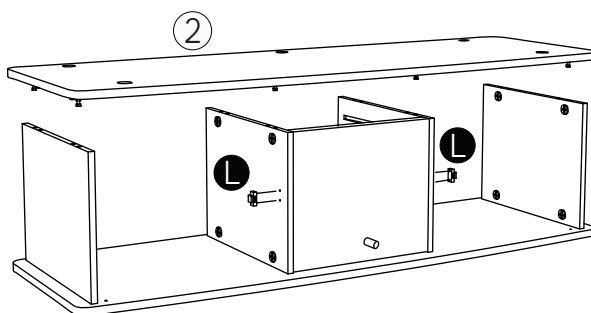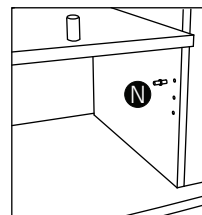


## step8

Push caps (O) through the holes  
of 2ND panel (2) and gently  
screw poles (P) into caps as  
shown.

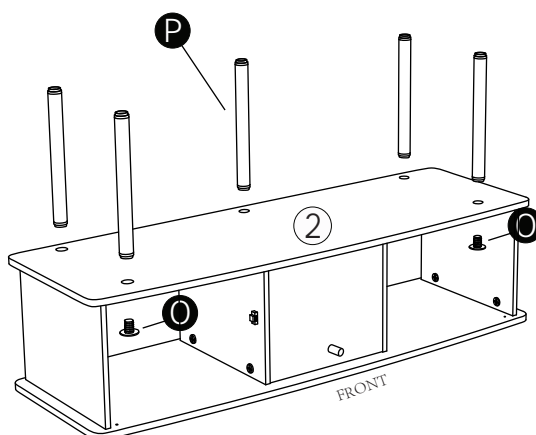

## step9

1. Place 3RD panel (3) onto unit.  
2. Screw poles (P) into unit, using care  
not to overtighten .

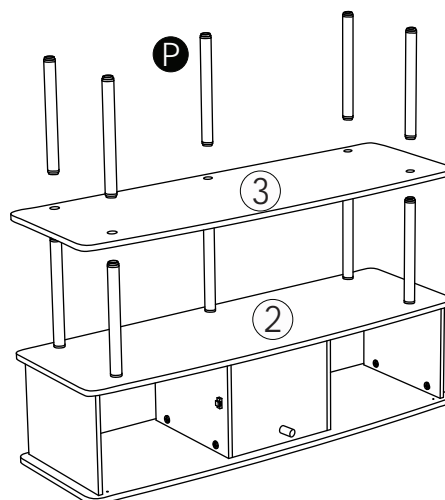


## step10

Attach cabinet slide rails (D) to cabinet side panel (11)&(12) using slide screws (F).

\* Make sure:

1. Slide rail CL screws into left side panel (11).  
Slide rail CR screws into right side panel (12).


2. The rails' front edge should level with side panels' front side.

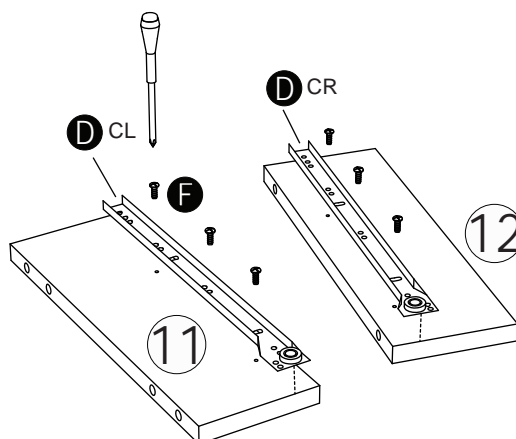

## step11

1. Insert thick dowels (C) to top panel (4).


2. Attach cabinet side panels (11)&(12) to top panel (4) using long screws (I).

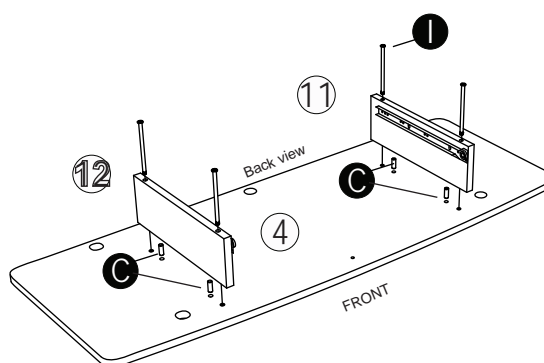

## step12

1. Place top panel (4) onto unit.

2. Screw caps (O) into unit.

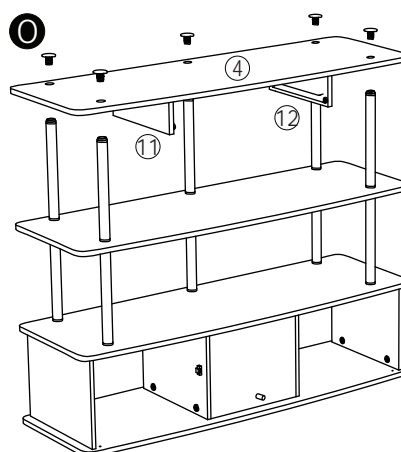


## step13

1.Insert drawer camlocks (B) and connect drawer slide rails (E) to drawer side panels (16)&(17) using slide screws (F).

\* Slide rail DL screws into left side panel (16).  
Slide rail DR screws into right side panel (17).

2.Fasten drawer side panels (16) &(17) to drawer back panel (14) using drawer screws (H).

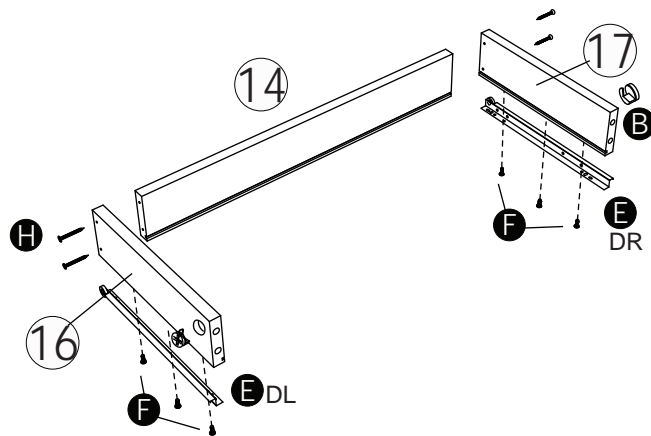


## step14

1.Slide drawer bottom panel (15) into slots in drawer unit.

2.Attach knob (G) to drawer front panel (13) using knob screw (G).

3.Attach drawer cambolts (B) and thin dowels (C) to drawer front panel (13).

4.Attach panel (13) to unit and gently tighten camlocks.


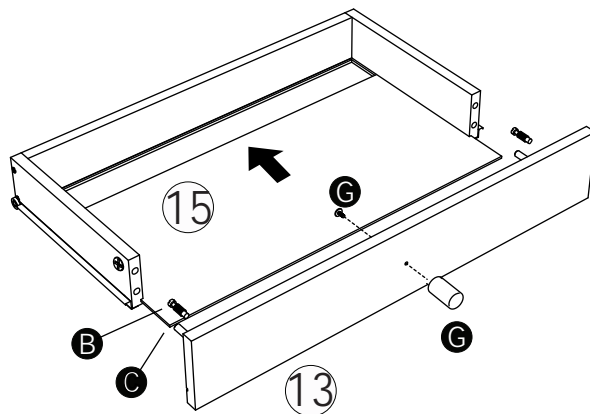


## step15

1.Slide the drawer into unit.

2.Attach the cambolt (A) to the hole under the top panel (4).

\*The Cambolt will prevent the drawer from sliding out.

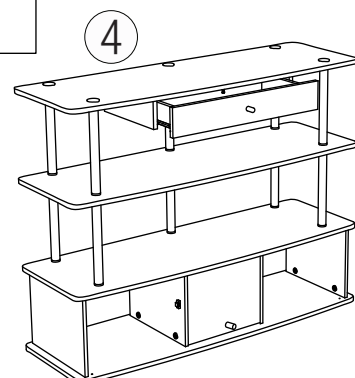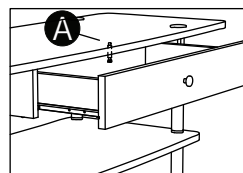




## step16

Faux bamboo doors (8) assembly.


1. Connect knob (G) to door (8) using knob screw (G) & bracket (K) as shown.

2. Push spring pins (J) into top and bottom holes.

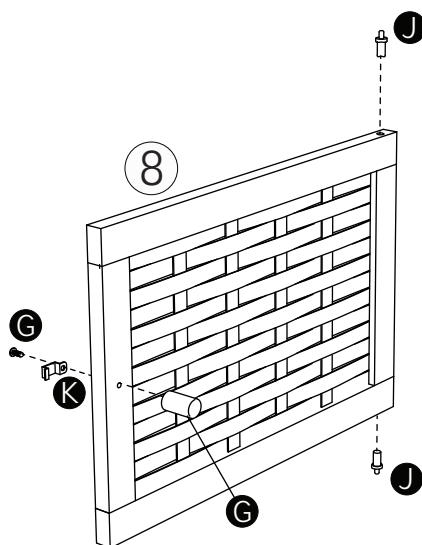

## step17

Attach door (8) to unit by placing one end of spring pin into hole, gently compress other end of spring pin so that it will slide into remaining hole.

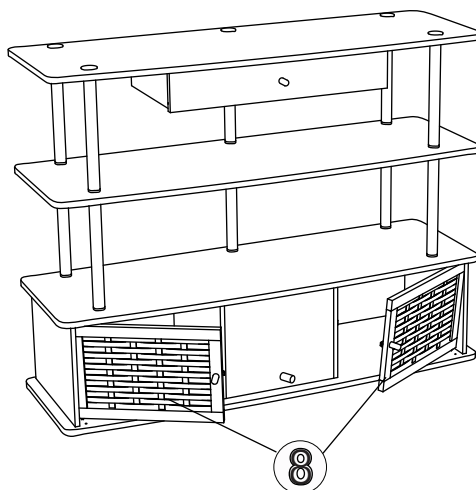

## step18

1. Turn sample around and connect back panel (9) to unit using nails (N).

2. Enjoy your new television console!

