


CONVENIENCE CONCEPTS

AMERICAN HERITAGE 3 TIER END TABLE

7107159BL	7107159W
7107159ES	7107159DW
7107159CH	7107159MG
7107159BE	

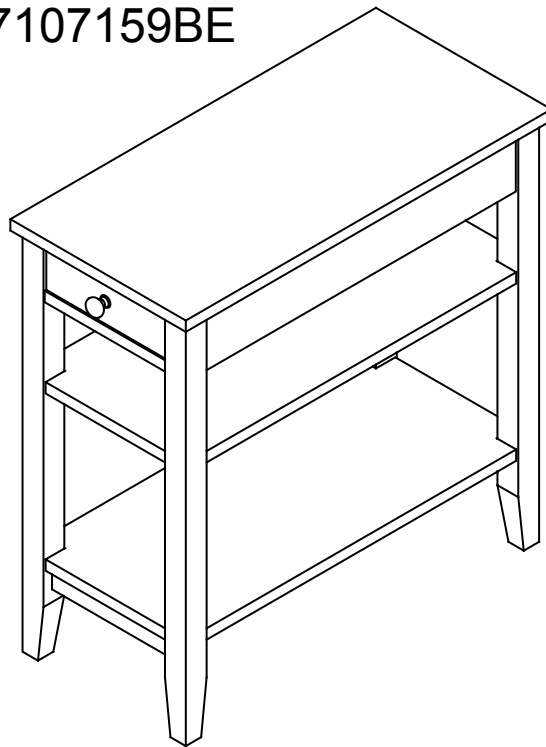

ASSEMBLY INSTRUCTIONS

We have designed our furniture with you , the customer in mind . Our clear , easy to follow , step by step instructions will guide you through the project from start to finish . Feel confident that this will be a fun and rewarding project . The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment .



Please do not return to the store

Broken or missing parts?

Need help with assembly?

If you have any questions just call 1-800-468-6447 or email us at parts@convenience-concepts.com

Hardware List

Part List

A


Camlock (12pcs)

B


Cambolt (12pcs)

C

Wood dowel (12pcs)

D


Allen screw (4pcs)

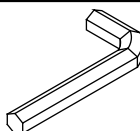E

Allen wrench (1pc)

F

Knob(1pc)

G

Knob Screw(1pc)


H

Wood glue(1pc)

I


Color sitick (1pc)

(1)

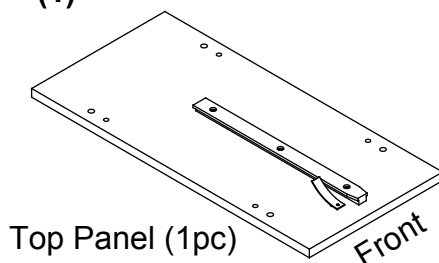


Top Panel (1pc)

(2)

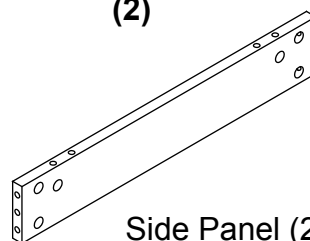


Side Panel (2pcs)

(3)

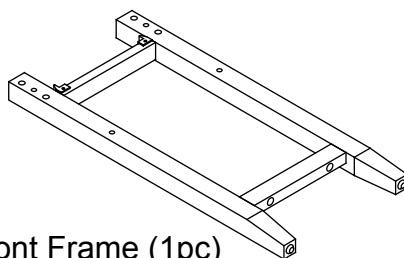


Front Frame (1pc)

(4)

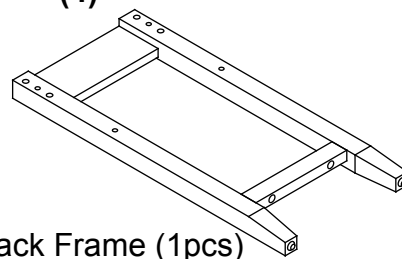


Back Frame (1pcs)

(5)

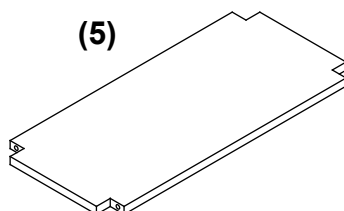


Middle Shelf Panel (1pc)

(6)

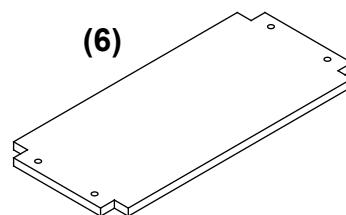


Bottom Shelf Panel (1pc)

(7)

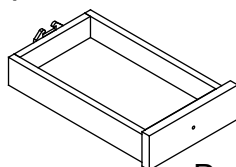


Drawer (1pc)


Assembling the unit with camlocks and wood dowels.

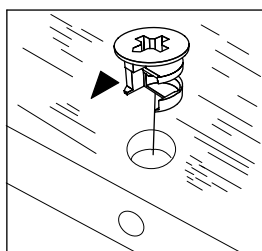


Insert camlock,
arrow must face
bolt hole.

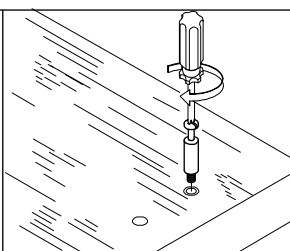


Gently screw cambolt
into the threaded anchor

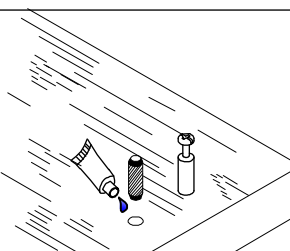

Lightly glue one end of
wood dowel and tap into
hole.

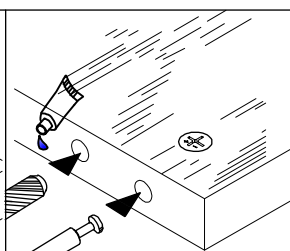


Lightly glue dowel and
connect to second panel
by inserting cambolt and
dowel into holes

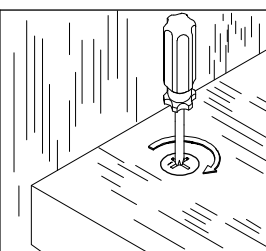

Gently screw the cam
clockwise into locked
position.
Do not overtighten.


Step1

1. Screw Cambolts (B) and insert Wood Dowels (C) into Back Frame (4).
2. Insert Camlocks (A) into Side Panels (2).
- **Arrow on Camlock Faces toward Opening****
3. Connect Side Panel (2) to back Frame (4) by gently tightening Camlocks (A).

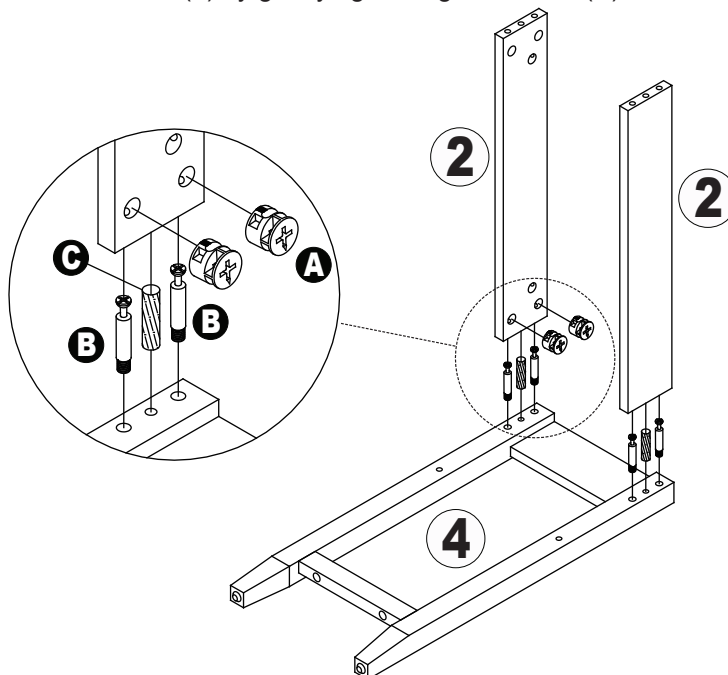


Step2

1. Insert Wood Dowels (C) into Back Frame (4) .
2. Attach Middle Shelf Panel (5) and Bottom Shelf Panel (6) to Back Frame (4)
Use care not to bend Wood Dowels.
3. Connect Bottom Shelf Panel (6) with Allen Screw (D) and Allen Wrench (E).

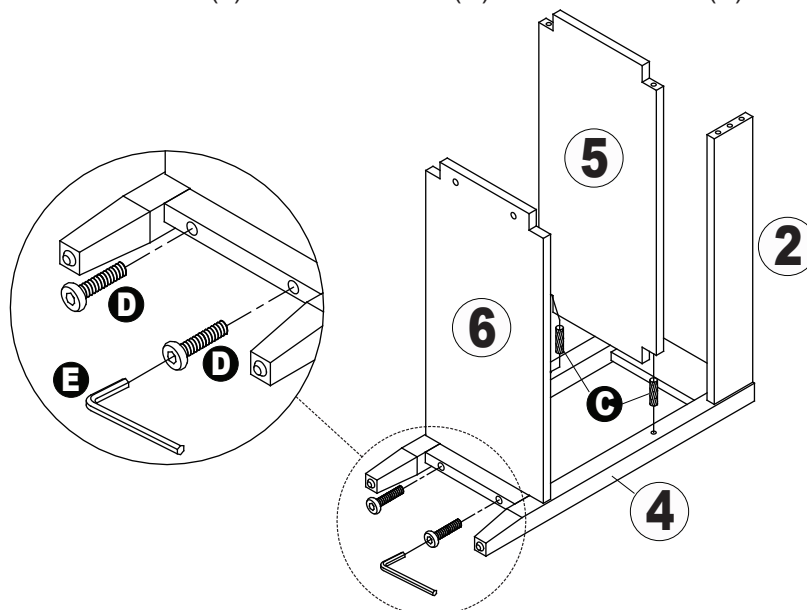


Step3

1. Insert cambolts (B) and Wood Dowel (C) into Front Frame (3) as shown .
2. Attach Front Frame (3) to Side Panel (2) Middle Shelf Panel (5) and Bottom Shelf Panel (6) as shown.
3. Using Allen Wrench (E) and Allen Screws (D) attach Bottom Shelf Panel (6) to Assembly as shown.
4. Gently tighten Camlocks (A) in Side Panels (2).

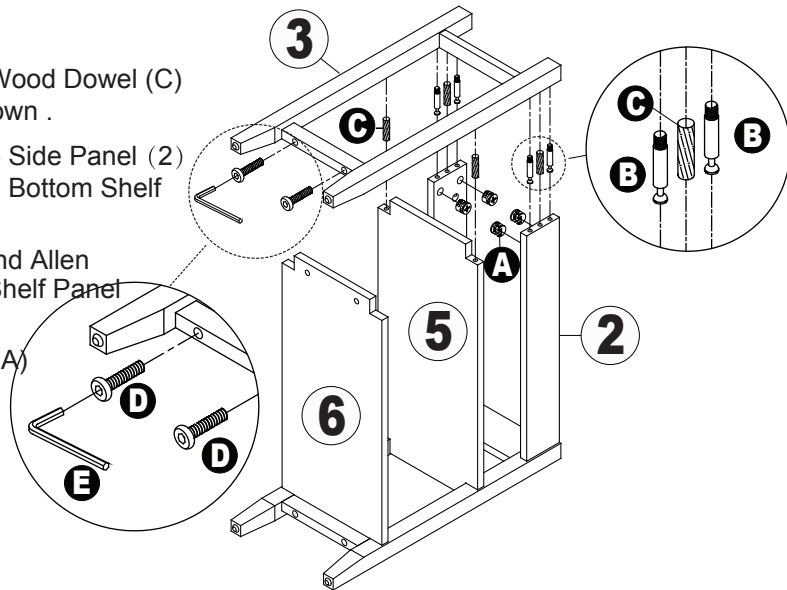

Step4

1. Insert wood Dowels (C) and screw Cambolts (B) into Top Panel (1).
2. Insert Camlock (A) into Side Panel (2) .
3. Attach Top Panel (1) to Frame Assembly by gently tightening Camlocks (A)

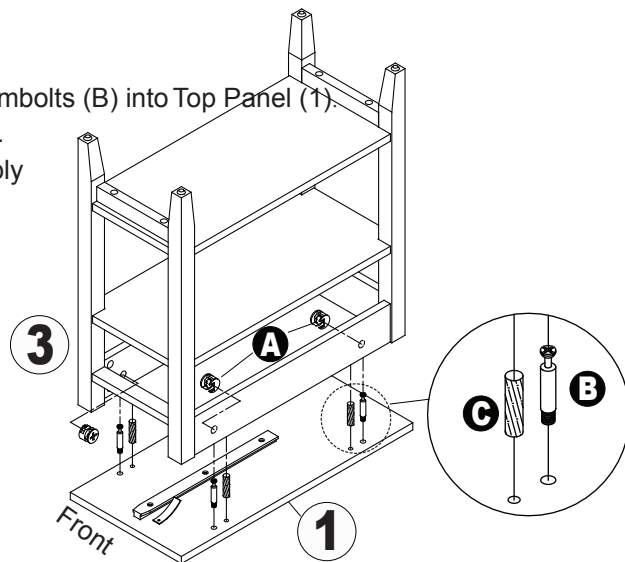

Step5

1. Screw Knob (F) onto drawer front panel with Knob Screw (G).
2. Insert Drawer (7) into unit making sure that drawer glide slides onto rail on underside of Top Panel (1).

