


# CONVENIENCE CONCEPTS

## Bookshelf Ladder

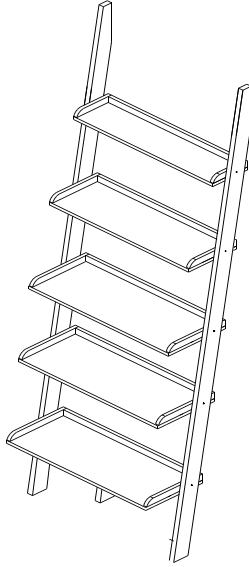













Item No. 8043391  
8043391CH  
8043391W

8043391BL  
8043391BE  
8043391GN












8043391FC

### HARDWARE LIST

CODE	NAME	FIGURE	Q'TY
A	WOOD DOWEL (Ø6*30mmL)		22PCS
B	BOLT		10PCS
C	NUT (Ø8*10mmL)		10PCS
D	SCREW (8*50mmL)		2PCS
E	CAM LOCK (15*9 mmL)		1PC
F	CAM BOLT (6.5*35mmL)		1PC
G	WOOD PLUG		10PCS
H	GLUE		1PC
I	METAL BRACKET		2PCS
J	SCREWS (Φ 6X12mmL)		2PCS
K	WALL SCREWS (Φ 7X1'1/4mmL)		2PCS
L	WALL PLUGS (Ø6*30mmL)		2PCS

Wall  
Fixings  
Not  
Shown  
On the  
Diagram

### PARTS LIST

CODE	NAME	FIGURE	Q'TY
①	RIGHT SIDE TOP BAR		1PC
②	LEFT SIDE TOP BAR		1PC
③	RIGHT SIDE BOTTOM BAR		1PC
④	LEFT SIDE BOTTOM BAR		1PC
⑤	SHELF A		1PC
⑥	SHELF B		1PC
⑦	SHELF C		1PC
⑧	SHELF D		1PC
⑨	SHELF E		1PC
⑩	LEG		1PC
⑪	COLOR STICK		1PC




Please do not return to the store

. Broken or Missing Parts?

. Need help with Assembly?

If you have any questions just call 1-800-468-6447 or email us at  
[parts@convenience-concepts.com](mailto:parts@convenience-concepts.com)

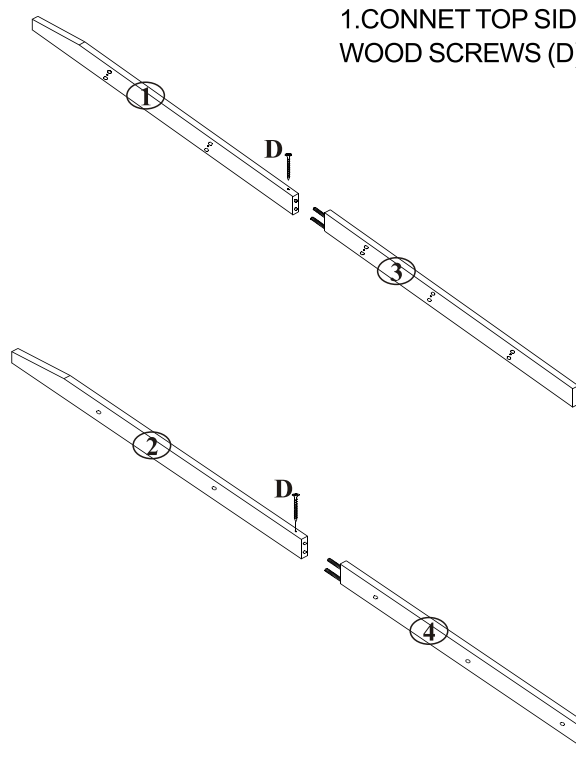

1.CONNET TOP SIDE BAR (1) AND FASTEN WITH WOOD SCREWS (D), INSERT IT INTO BOTTOM SIDE BAR (3).

HARDWARE  
NEEDED

**D x 1**

**STEP 1**

2. REPEAT STEP 1 ON OTHER SIDE.

HARDWARE  
NEEDED


**D x 1**

**STEP 2**

Assembling the unit with cam and wood dowels.

Gently screw cam dowel into the threaded anchor.	Lightly glue one end of the wood dowel and tap halfway into hole. Add 2nd drop of glue to top of dowel.	Connect to second panel by inserting dowels into holes.	Insert cam lock with arrow pointing down. Screw the cam firmly into locked position.

**\*\* NOTE: NUTS (C) NEED TO BE INSERTED INTO SHELVES BEFORE SCREWS.**

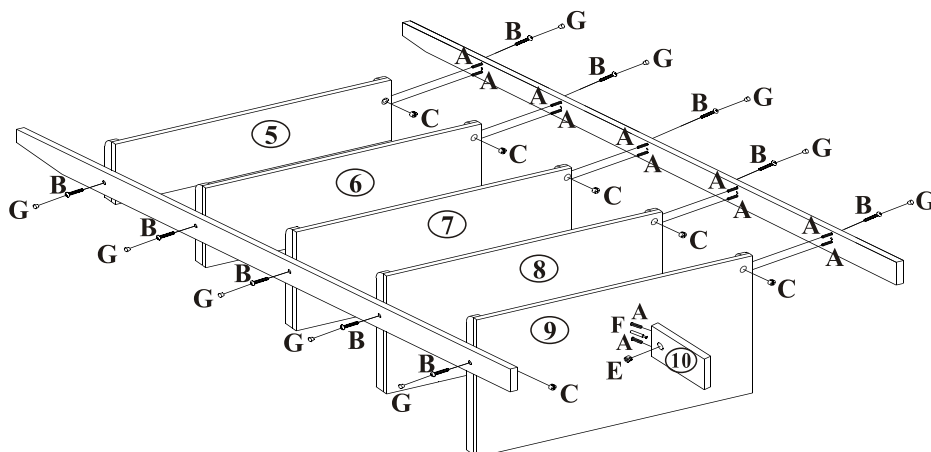

HARDWARE  
NEEDED

**A x 22**

**B x 10**

**C x 10**


**E x 1**

**F x 1**

**G x 10**

**STEP 3**

3. USING PICTURE AS A GUIDE, ATTACH SMALLEST SHELF (5) TO TOP OF RAIL, USING 2 WOOD DOWELS (A) AND 1 BOLT (B) . REPEAT THIS PROCESS FOR ALL SHELVES BEFORE ATTACHING SECOND RAIL TO UNIT. USING 2 DOWELS AND 1 CAMLOCK/BOLT, FASTEN BOTTOM LEG TO LARGEST SHELF.

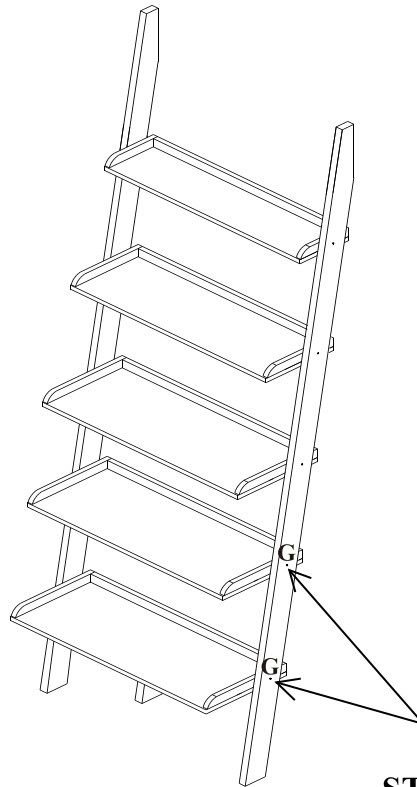

#### **STEP 4**

4. PRESS WOOD PLUGS (G) OVER SCREW HEADS AND ENJOY.

\* Metal Brackets are included to secure the bookshelf ladder to a wall.  
Secure to solid wall or wall stud.