

DOREL ASIA




TODDLER BED

MODEL NO:

DA6919W	White
DA6919GR	Gray
DA6919BL	Blue

UPC CODE:

0-65857-16957-7	White
0-65857-16958-4	Gray
0-65857-16959-1	Blue

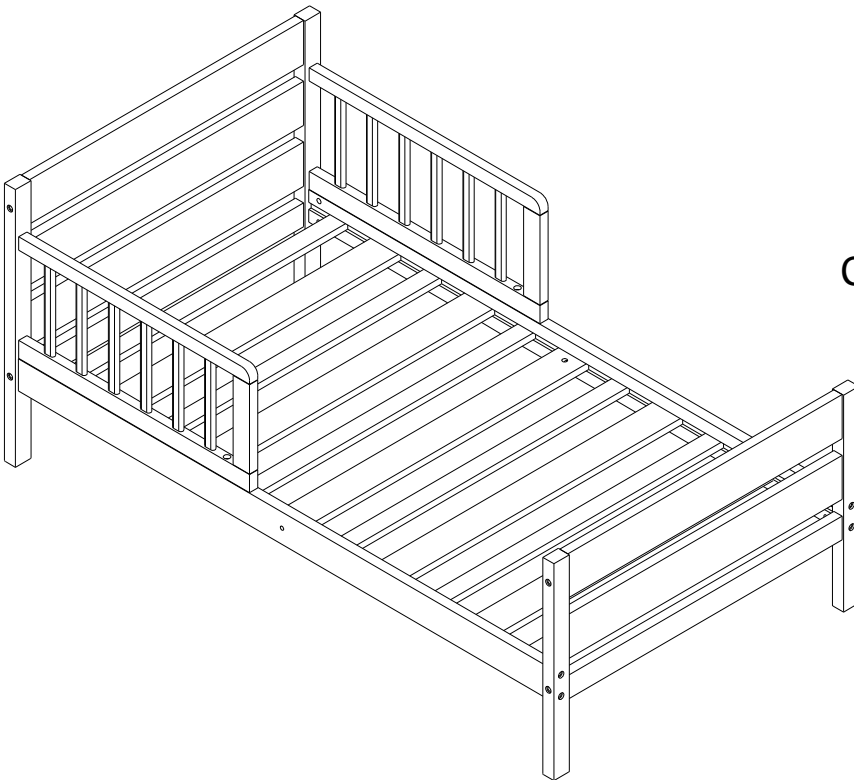

NOTE:

THIS INSTRUCTION BOOKLET
CONTAINS **IMPORTANT** SAFETY
INFORMATION. PLEASE
READ AND KEEP FOR
FUTURE REFERENCE.

LOT NUMBER:

(TAKEN FROM CARTON)

DATE OF PURCHASE:

____ / ____ / ____

DO **NOT** RETURN PRODUCT TO THE STORE.

If a part is missing or damaged, Contact our
customer service department. We will
replace the part FREE of charge.



Tel # : 1-800-295-1980
E-Mail: das@dorel.com
Fax #: 514-353-7819

CUSTOMER SERVICE

If you are missing parts or have any questions about this product, contact our customer service representative first!



CALL 1-800-295-1980

You can also order parts by writing to the address listed below. Please include the product model number, color and a detailed description of the part.

**Customer Service Department No. 413
12345 Albert-Hudon Boulevard, Suite 100
Montreal, Quebec
Canada, H1G 3L1
E-MAIL: das@dorel.com**



WARNING ENTRAPMENT/STRANGULATION HAZARD:

- * Infants have died in toddler beds from entrapment and strangulation.
- * Failure to follow these warnings and assembly instructions could result in serious injury or death from entrapment or strangulation.
- * NEVER use bed with children under 15 months.
- * The TODDLER BED is not intended for children under 15 months of age or over 50 pounds (22.7kg).
- * If guardrails are used as the mattress containment means, guardrail(s) provided must be used to avoid the formation of a gap between the mattress and the bed that could cause an entrapment.
- * DO NOT place TODDLER BED near windows where cords from blinds or drapes may strangle a child.
- * DO NOT place items with a string, cord, or ribbon around a child's neck, such as hood strings or pacifier cords.
- * DO NOT suspend strings over a TODDLER BED for any reason.
- * Any mattress used must be at least 27-1/4 inches by 51-5/8 inches (69cm by 131cm) with a minimum thickness of 4 inches (10cm) and not exceeding 6 inches (15cm).

NOTES

- * Ensure all parts and components are present before beginning assembly.
- * Phillips head screwdriver is not included.
- * Assembly will require 2 people.
- * Estimated assembly time: 45 minutes.
- * DO NOT use power tools.
- * **Caution:** Adult assembly required.
- * DO NOT lift bed from side rails when moving. Raise from headboard and footboard when moving bed.

CARE AND CLEANING

Dust regularly with a soft, lint-free cloth to prevent soil build-up. A damp cloth may be used occasionally to clean surface. Dry immediately. Do not use any abrasives that may damage finish. Excessive exposure to sunlight and extreme changes in temperature and moisture can damage wood furniture.

MAINTENANCE

Check bolts periodically and tighten if necessary.

LIMITED WARRANTY

Dorel Asia warrants its product to be free from defects in material and workmanship and agrees to remedy any such defect. This warranty covers 1 year from the date of original purchase. This warranty is valid only upon presentation of proof of purchase. This is solely limited to the repair or replacement of defective furniture components and no assembly labor is included. This warranty does not apply to any product which has been improperly assembled, subjected to misuse or abuse or which has been altered or repaired in any way. This warranty gives you specific legal rights and you may also have other rights which vary from State to State.









WARNING: Should this product become damaged, and/or components are broken or missing, DO NOT USE.

TODDLER BED

DA6919W / DA6919GR / DA6919BL



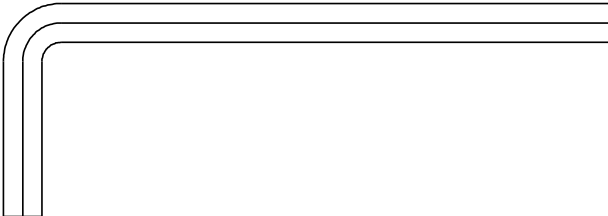










HARDWARE LIST

1	 <p>Ø1/4" x 2-1/2"</p> <p>BOLT 18PCS</p>	2	 <p>Ø1/4" x 1-3/4"</p> <p>BOLT 6PCS</p>
3	 <p>Ø1/4" x 1/2"</p> <p>BARREL NUT 10PCS</p>	4	 <p>4MM</p> <p>ALLEN KEY 1PC</p>
5	 <p>Ø10mm x 40mm</p> <p>WOOD DOWEL 24PCS</p>	6	 <p>Ø8mm x 30mm</p> <p>WOOD DOWEL 20PCS</p>

TODDLER BED

DA6919W / DA6919GR / DA6919BL

PARTS LIST
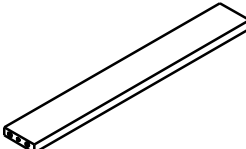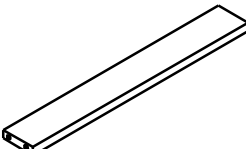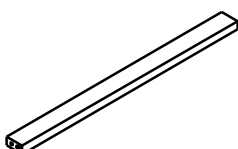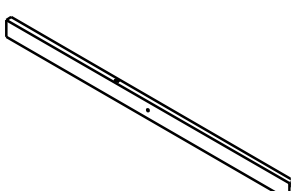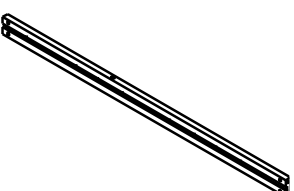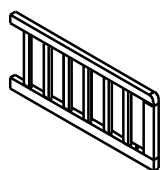
<div data-bbox="159 258 207 300">A</div> 	<div data-bbox="613 258 662 300">B</div> 	<div data-bbox="1066 258 1115 300">C</div> 
<div data-bbox="175 531 555 594">LEFT HEADBOARD POST 1PC</div>	<div data-bbox="621 531 1018 594">RIGHT HEADBOARD POST 1PC</div>	<div data-bbox="1084 531 1464 594">LEFT FOOTBOARD POST 1PC</div>
<div data-bbox="159 615 207 657">D</div> 	<div data-bbox="613 615 662 657">E</div> 	<div data-bbox="1066 615 1115 657">F</div> 
<div data-bbox="167 888 563 951">RIGHT FOOTBOARD POST 1PC</div>	<div data-bbox="768 888 945 951">TOP PANEL 2PCS</div>	<div data-bbox="1157 888 1386 951">MIDDLE PANEL 3PCS</div>
<div data-bbox="159 972 207 1014">G</div> 	<div data-bbox="613 972 662 1014">H</div> 	<div data-bbox="1066 972 1115 1014">I</div> 
<div data-bbox="240 1245 487 1308">BOTTOM PANEL 2PCS</div>	<div data-bbox="698 1245 937 1308">LEFT SIDE RAIL 1PC</div>	<div data-bbox="1141 1245 1399 1308">RIGHT SIDE RAIL 1PC</div>
<div data-bbox="159 1329 207 1371">J</div> 	<div data-bbox="613 1329 662 1371">K</div> 	<div data-bbox="1066 1329 1115 1371">L</div> 
<div data-bbox="272 1602 457 1665">GUARDRAIL 2PCS</div>	<div data-bbox="630 1602 1010 1665">CENTER SUPPORT SLAT 1PC</div>	<div data-bbox="1104 1602 1432 1665">WIDE SUPPORT SLAT 4PCS</div>
<div data-bbox="159 1686 207 1728">M</div>  <div data-bbox="167 1959 563 2022">NARROW SUPPORT SLAT 6PCS</div>		




TODDLER BED

DA6919W / DA6919GR / DA6919BL

STEP 1

Insert the dowels (5) into top panel (E), middle panels (F) and bottom panel (G). Attach panel (E, F & G) to the left and right headboard posts (A & B) as shown below and using bolts (1) and Allen key (4).

NOTE: Do not fully tighten the bolts. Leaving the bolts loose will facilitate assembly in the following steps.

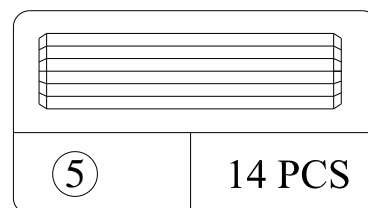
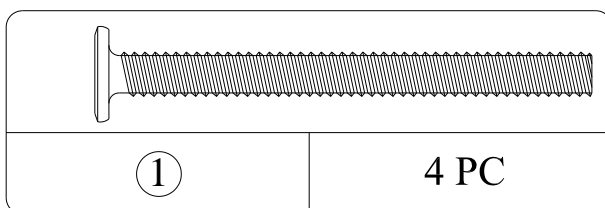
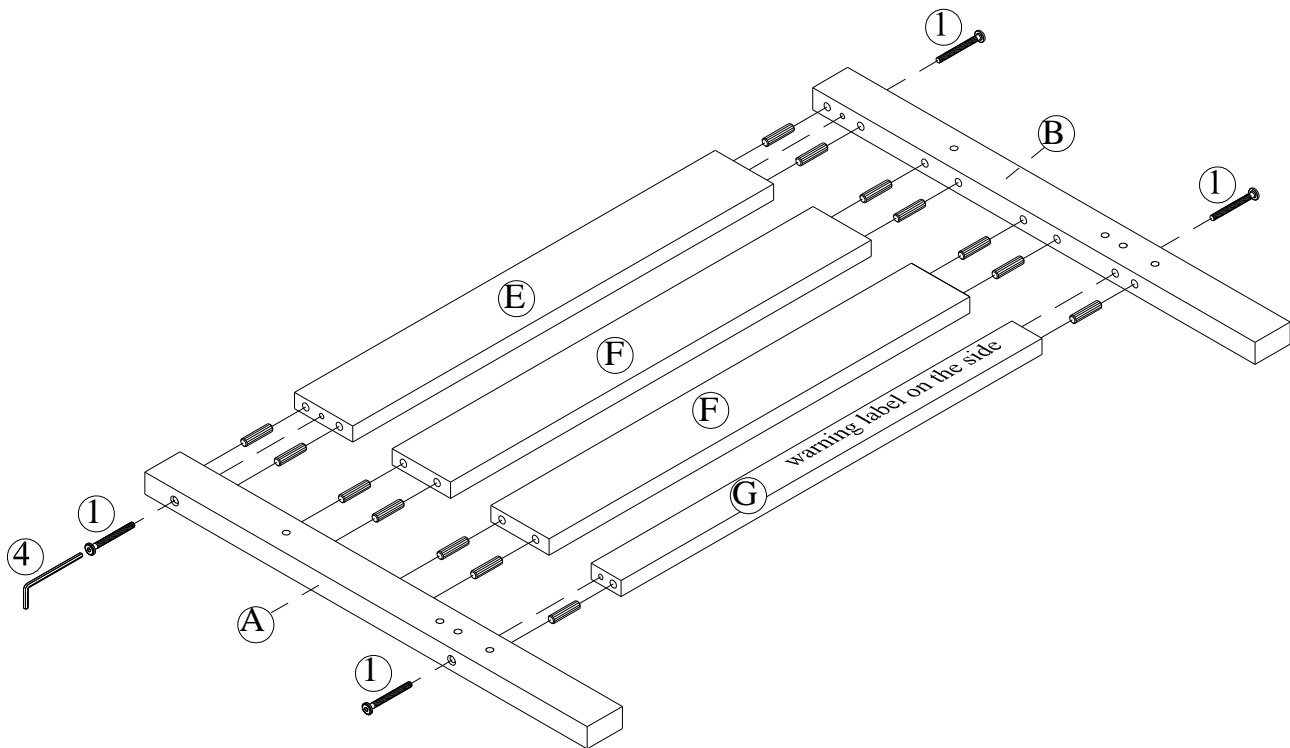


TODDLER BED

DA6919W / DA6919GR / DA6919BL

STEP 2

Insert the dowels (5) into top panel (E), middle panel (F) and bottom panel (G).
Attach panel (E, F & G) to the left and right footboard posts (C & D) as shown below and using bolts (1) and Allen key (4).

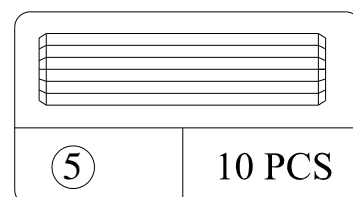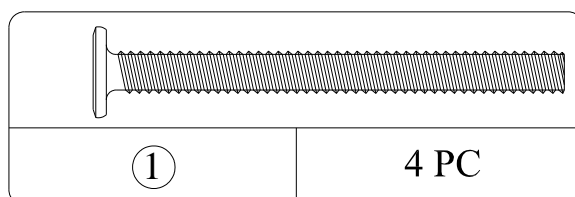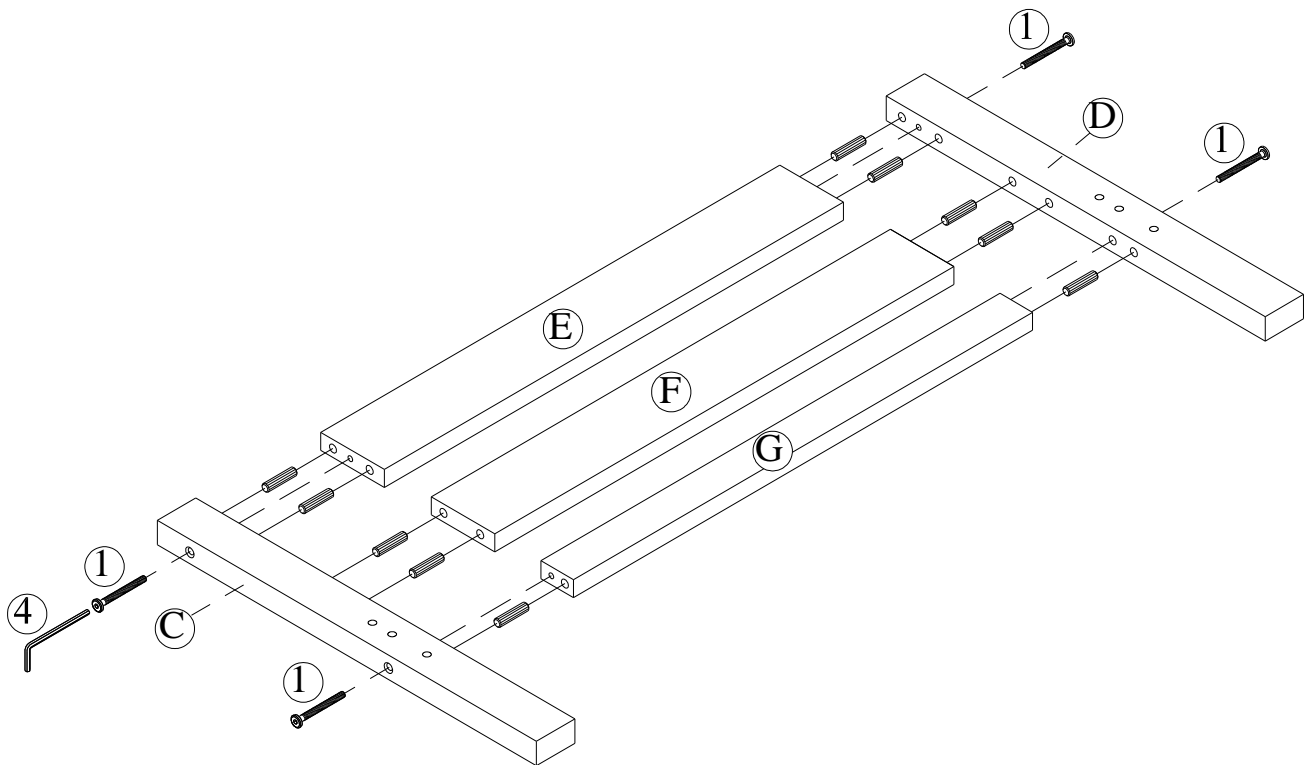

TODDLER BED

DA6919W / DA6919GR / DA6919BL



STEP 3

Insert wood dowels (6) into both ends of wide support slats (L) and narrow support slats (M). Connect slats (L & M) to right side rail (I).

Insert barrel nut (3) into the hole center support slat (K). Ensure the barrel nut (3) is flush with center support slat (K).

Attach the center support slat (K) to the right side rail (I) using bolt (1) and Allen key (4).

NOTE: Barrel nut (3) can be rotated using a screwdriver (not included) to properly align with the bolt coming through side rail (I).

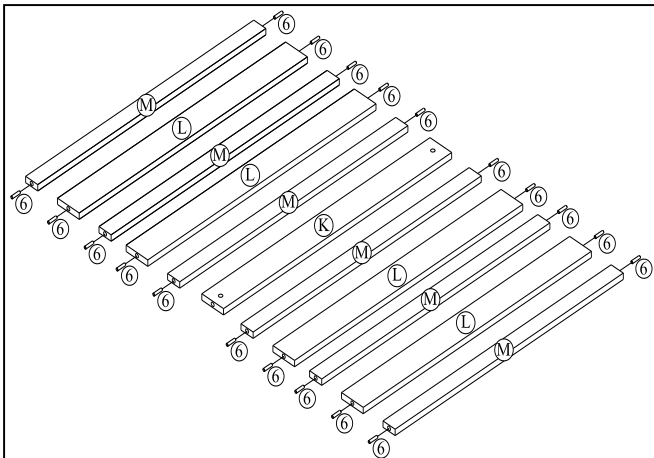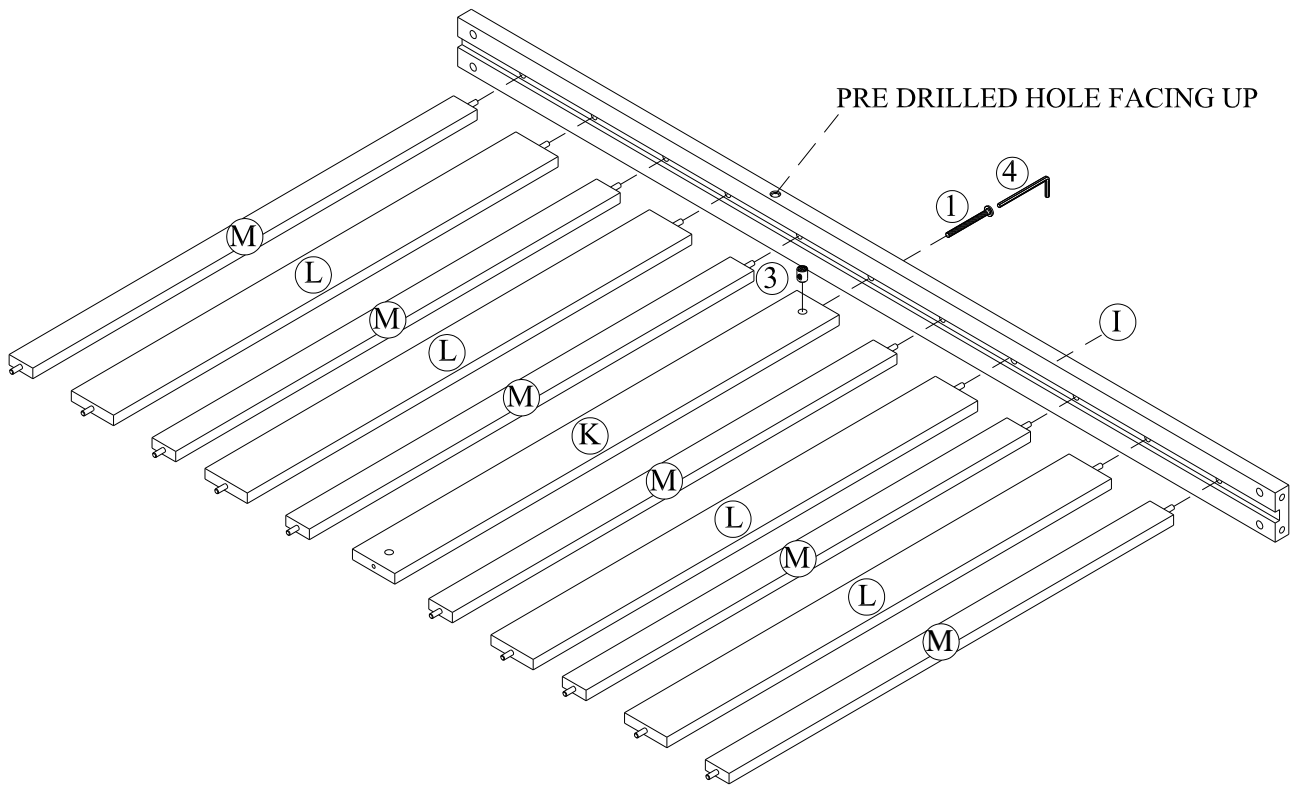

①	1 PC
⑥	20 PCS
③	1 PC

TODDLER BED




DA6919W / DA6919GR / DA6919BL

STEP 4

Insert barrel nut (3) into the other end of center support slat (K). Ensure the barrel nut (3) is flush with center support slat (K).

Attach the left side rail (H) to slats (M, L & K). Secure center support slat (K) to left side rail (H) with bolts (1) and Allen key (4).

NOTE: The barrel nut (3) can be rotated using a screwdriver (not included) to properly align with the bolt coming through side rail (H).

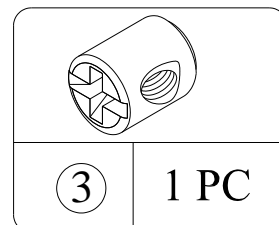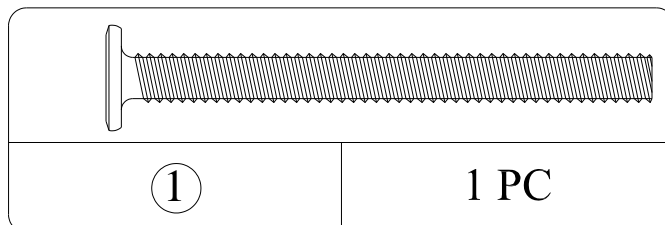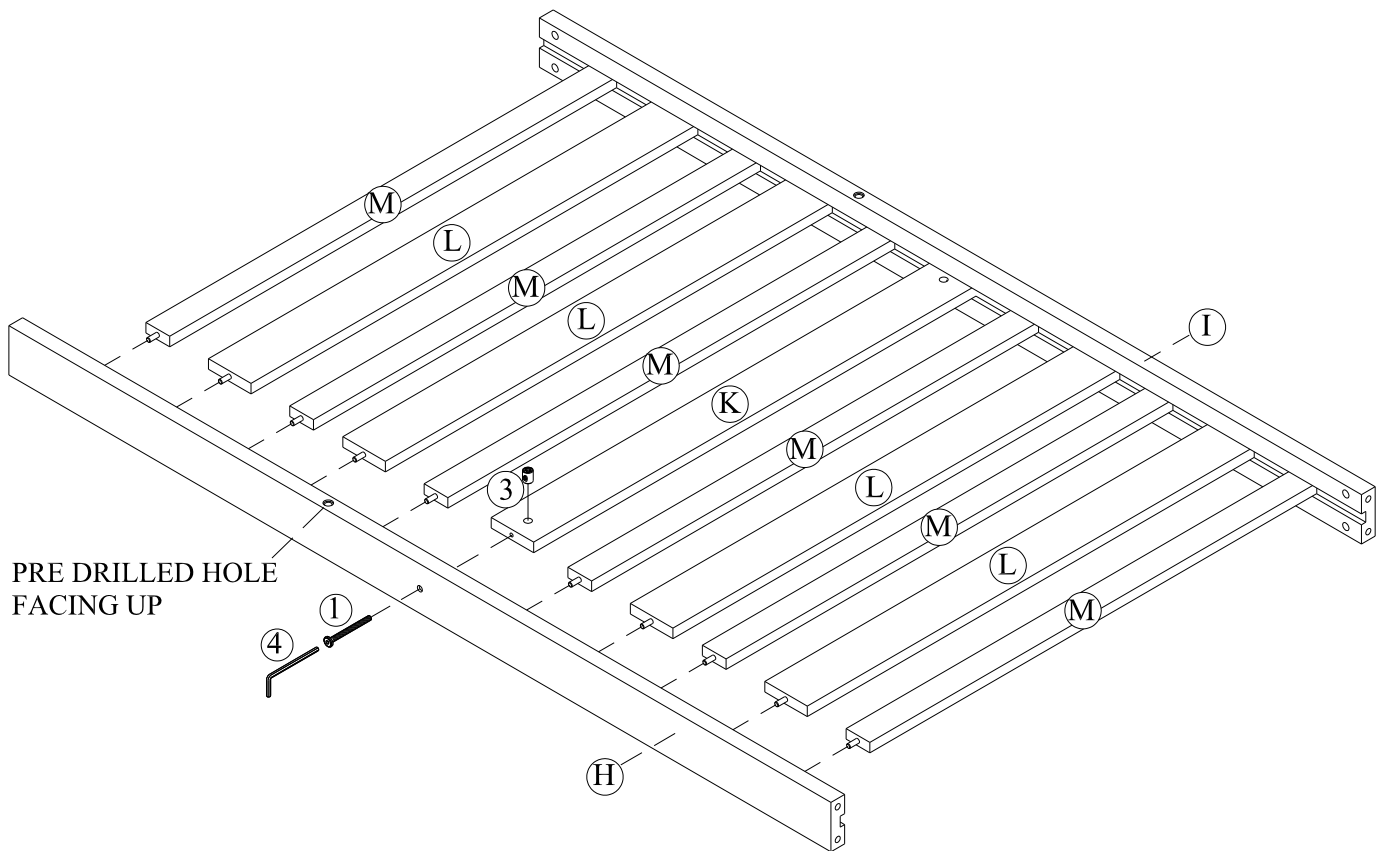

TODDLER BED




DA6919W / DA6919GR / DA6919BL

STEP 5

Insert barrel nuts (3) into both ends of the left and right side rail (H & I).

Attach the headboard and footboard to the left and right side rail (H & I) by threading hex socket head bolts (1) through the headboard posts (A & B) and footboard posts (C & D). Use Allen key (4) to tighten bolts.

NOTE: Do not fully tighten bolts. This will facilitate assembly in the following steps.

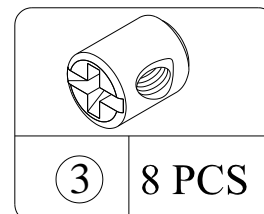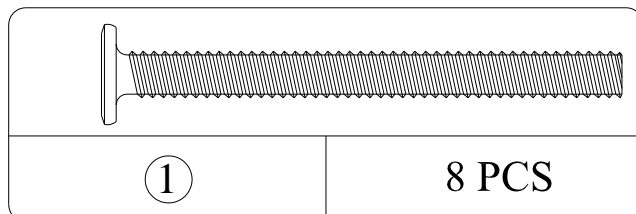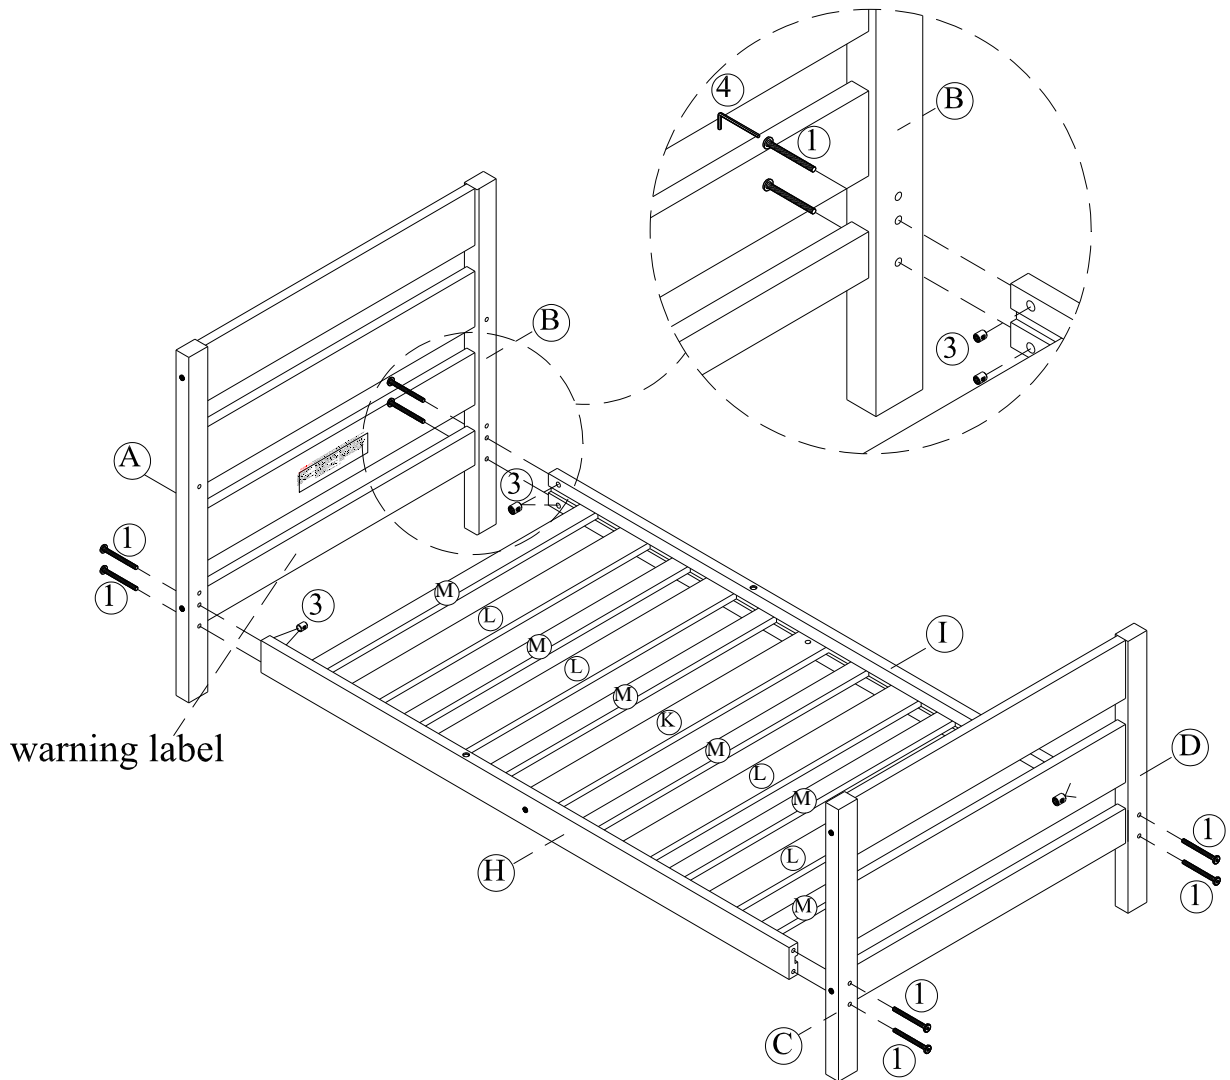


TODDLER BED

DA6919W / DA6919GR / DA6919BL

STEP 6


Attach guardrails (J) to headboard posts (A & B) with hex socket head bolts (2). Attach the guardrails (J) to the left and right side rails (H & I) with hex socket head bolts (2) as shown. Use Allen key (4) to tighten bolts.

NOTE: Fully tighten all bolts installed in previous steps..

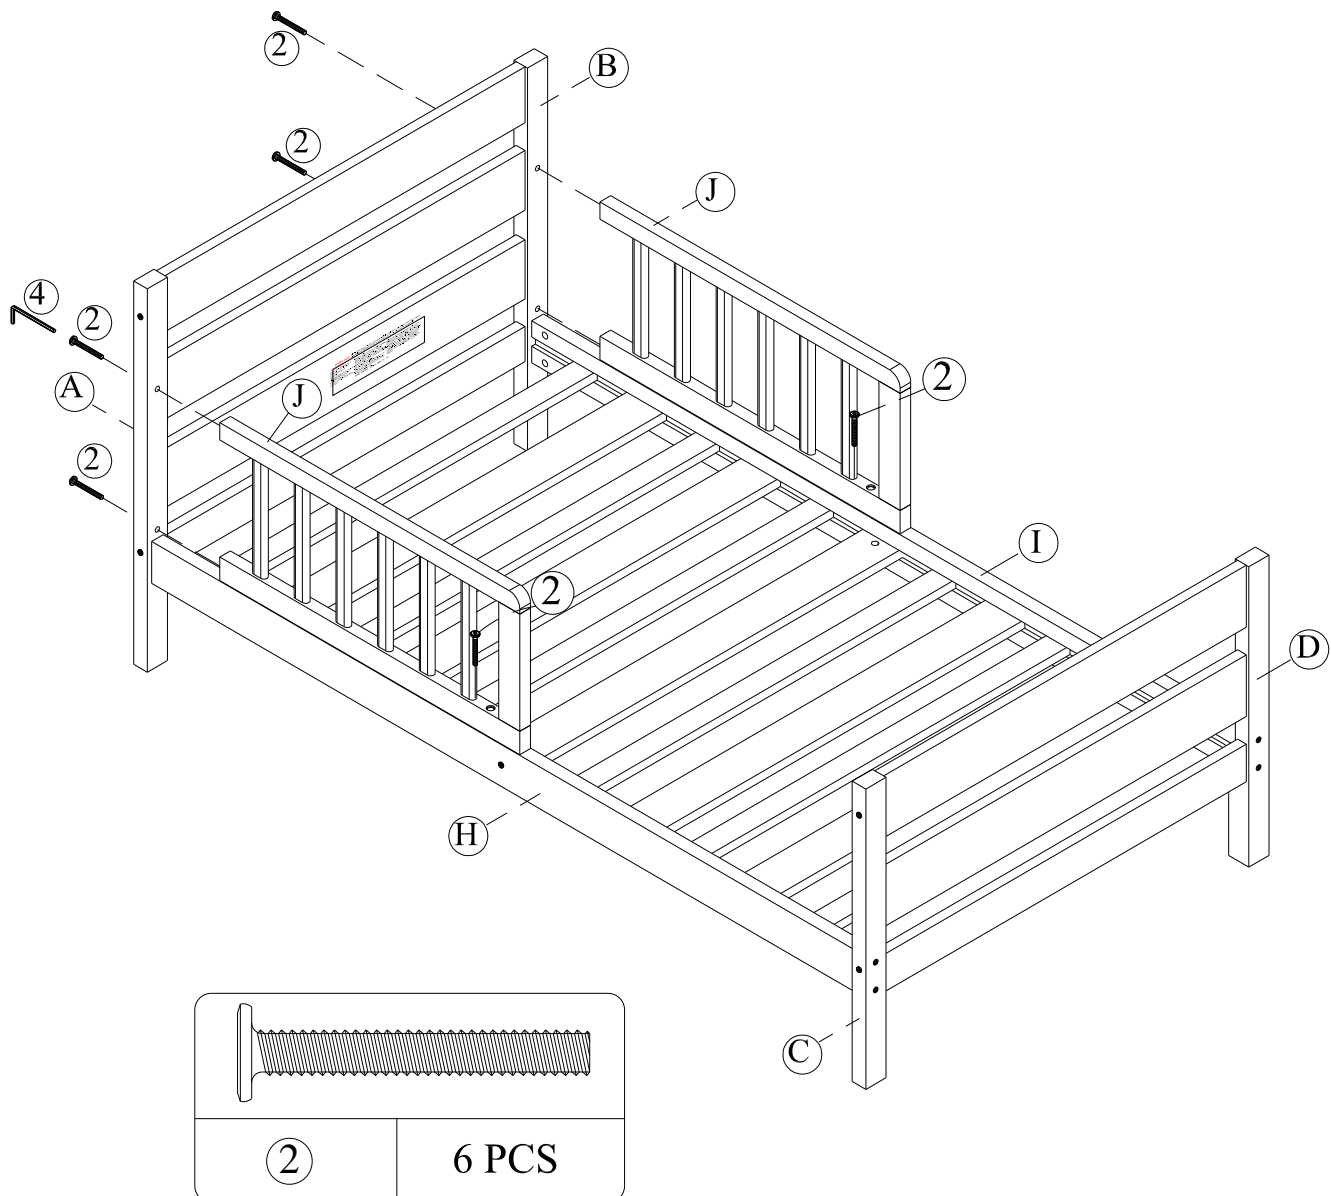


TODDLER BED

DA6919W / DA6919GR / DA6919BL

 **CAUTION:** This unit is intended for use only with the products and/or maximum weights indicated. Use with other products and/or products heavier than the maximum weights indicated may result in instability or cause possible injury.

NEVER use bed with
children under 15
months or weighing
more than 50 lbs (22.7kg)

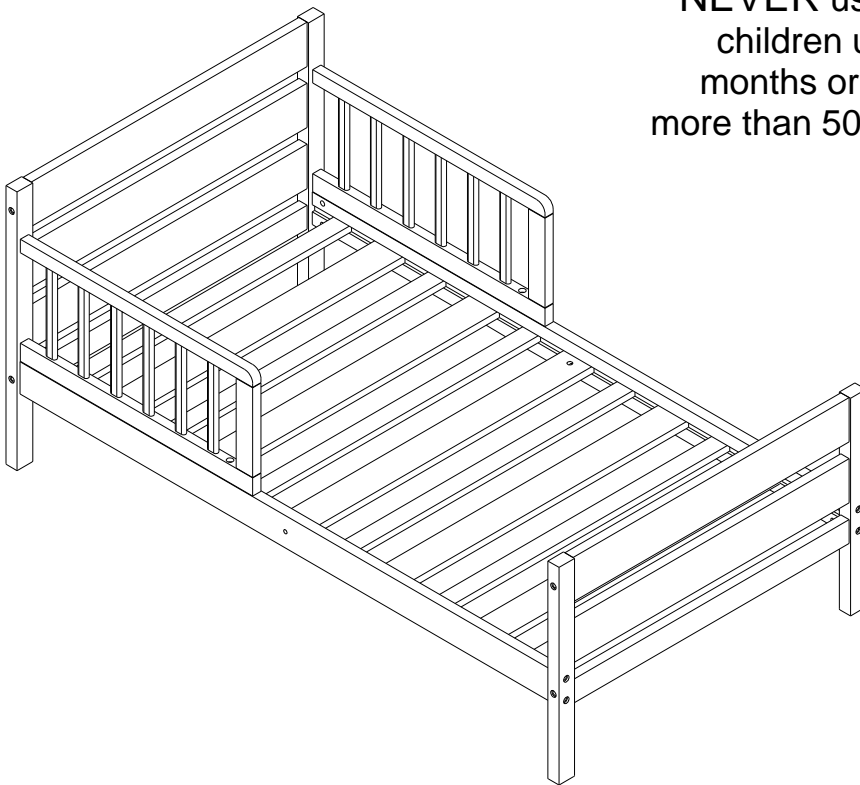

That's it ! You've finished assembling your toddler bed.

DO NOT RETURN PRODUCT TO THE STORE.

If a part is missing or damaged, Contact our customer service department. We will replace the part **FREE** of charge.



Tel # : 1-800-295-1980
E-Mail: das@dorel.com
Fax #: 514-353-7819

Customer Service

PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE

PLEASE CONTACT CUSTOMER SERVICE REPRESENTATIVES AT THE FOLLOWING NUMBERS SHOULD THERE BE ANY MISSING OR DEFECTIVE PART(S).

Customer Service Phone Number 1-800-295-1980

Email: das@dorel.com

Customer Service Fax Number 514-353-7819

Request Date:

Name:

Shipping Address:

Street & Number:

City & State:

Zip Code:

Day Time Phone Number:
(including area code)

Date & Place of Purchase:

Part(s) description and quantity: (Please be sure to list model number or SKN number)

Customer Service Representative Mailing Address:
Customer Service Department No. 413, 12345 Albert-Hudon Boulevard, Suite 100, Montreal, QC, Canada, H1G 3L1