




**STEP 9** Attach the panel no. 11 in right position & lock with Mini Fix 15mm (F2) at side & center panel.

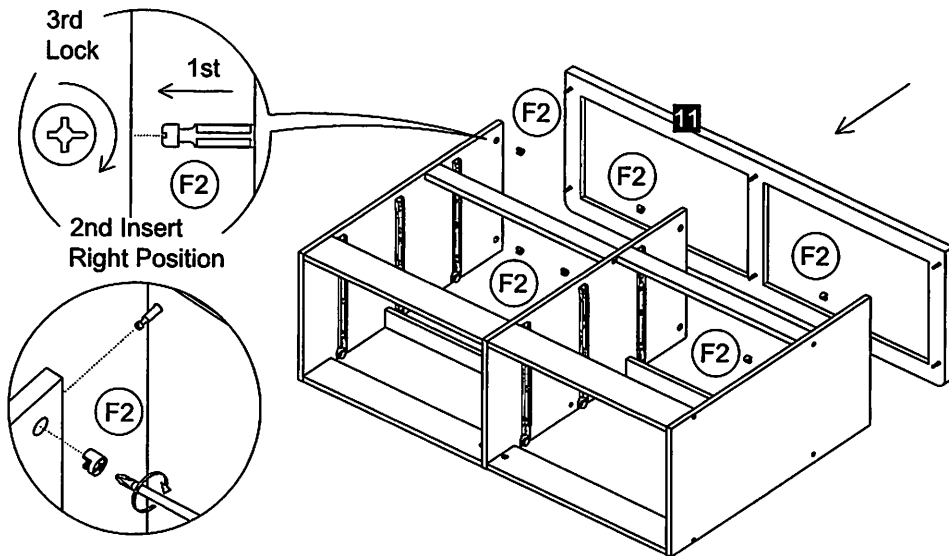


**STEP 10** Screw the Plastic Leg L Shape (L2) at between panel no. 12, 13 & side panel. Assemble the back panel no. 19 with secure by Nail (N3). Use Screw (A2) to secure bottom panel no. 19.

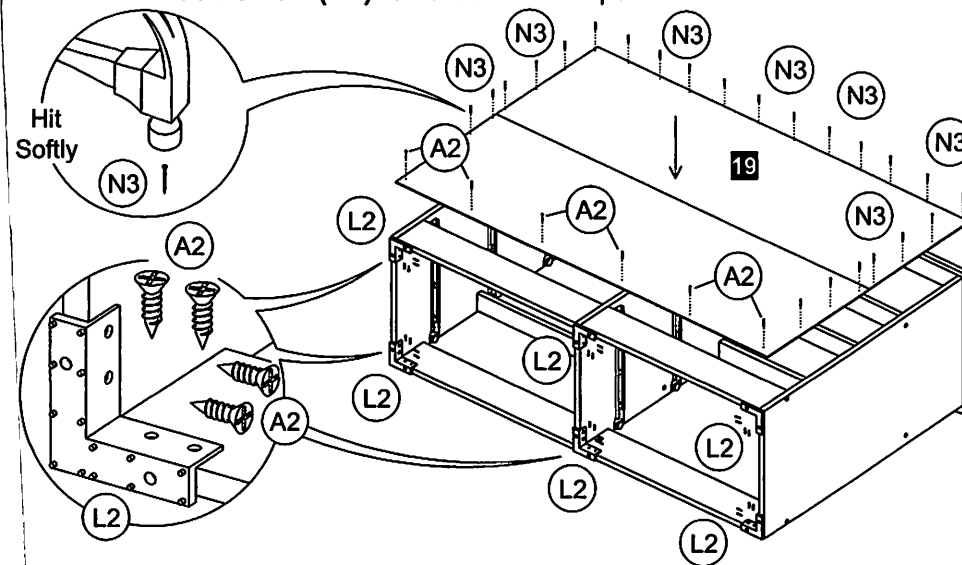

**STEP 11** Insert those 6 drawers.

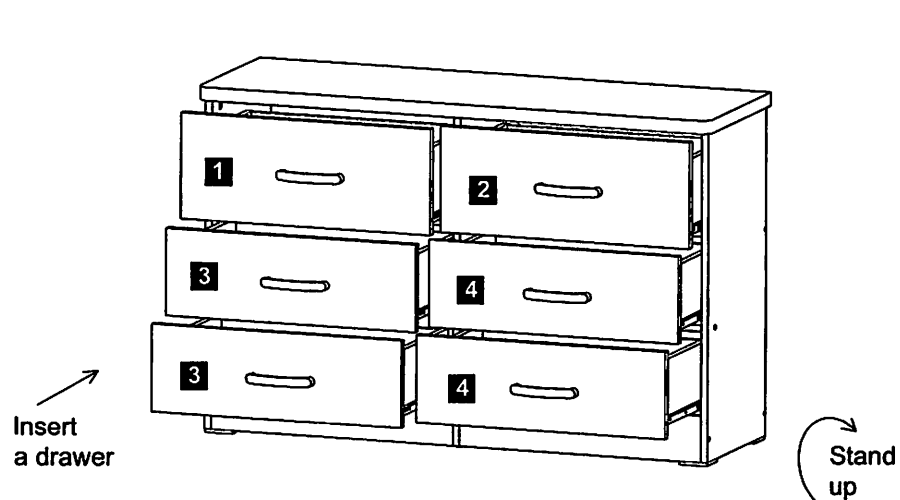


**COMPLETE**

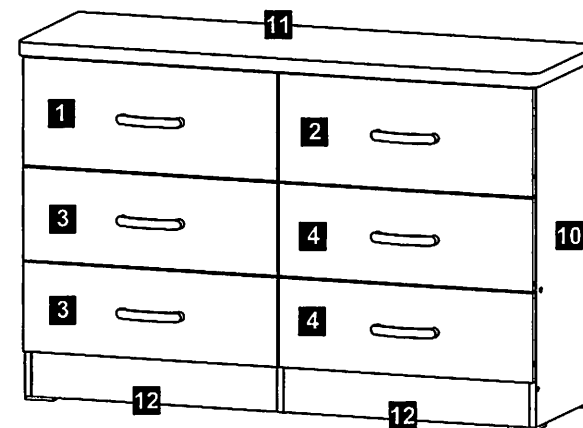


## STEP 5

Use Euro Screw (A34) to assemble the Drawer Metal Slide 350mm (M6) at marking hole panel no. 9, 10 & 13. Assemble Drawer Metal Slide 350mm (M6) at both side panel no. 13.

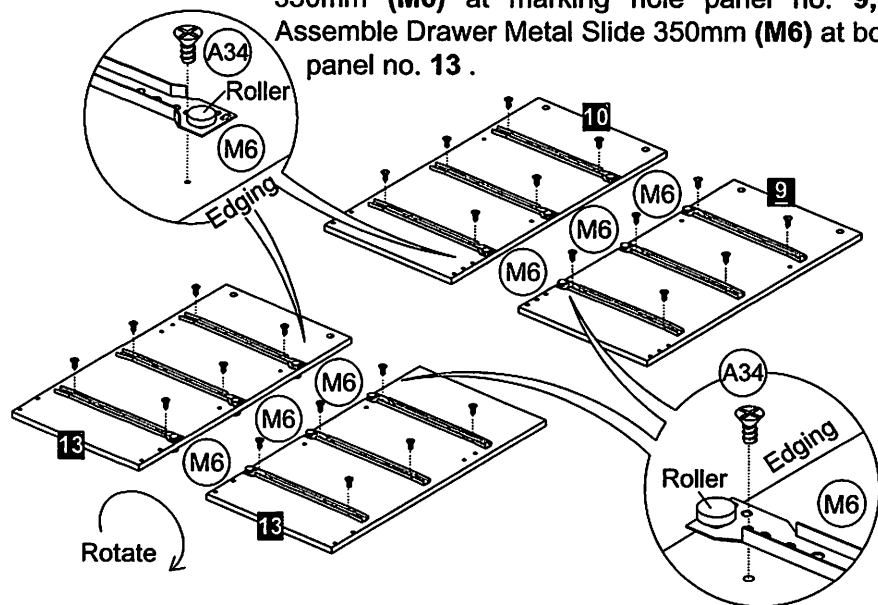


## STEP 6

Screw the Mini Fix Bolt (F2) at marking hole panel no. 11. Then insert the Wood Dowel 6 x 25mm (D4) at panel no. 12.

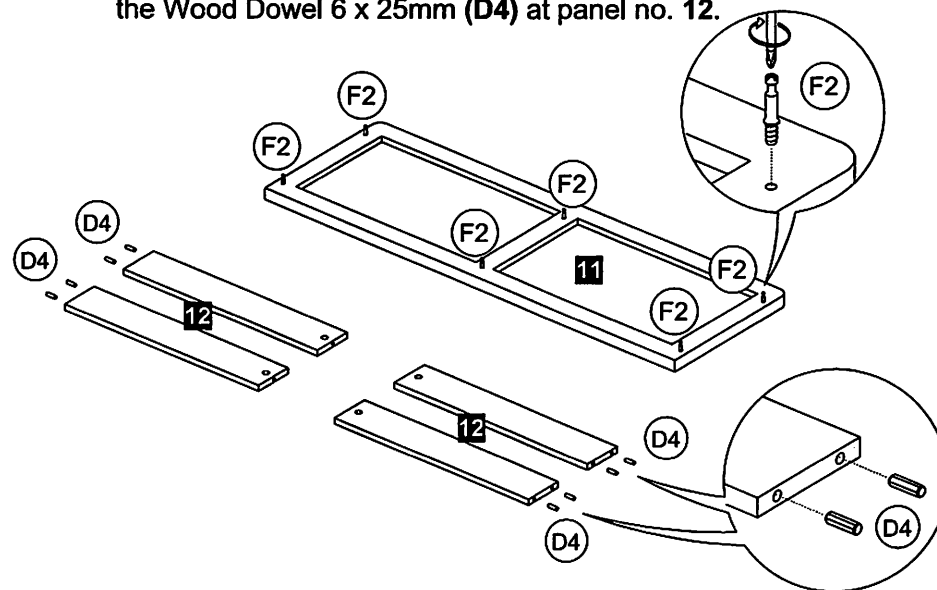


## STEP 7

Use Allen Key (N1) to tighten the Crosshead Screw 6.3 x 40mm (A17) & button the screw head with Crosshead Cover (Y) except crosshead screw at panel no. 13.

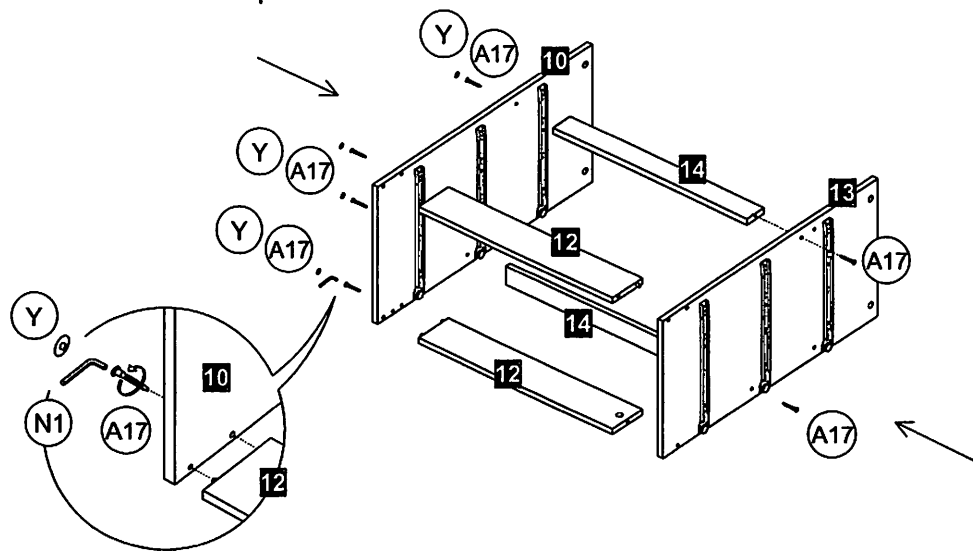


## STEP 8

Insert the Mini Fix Double Ended Bolt (F3) at below holes at panel no. 13 & lock with Mini Fix Cam (F3) at both side panel no. 12. Use Allen Key (N1) to tighten the Crosshead Screw 6.3 x 40mm (A17) & button the screw head with Crosshead Cover (Y) except Crosshead Screw (A17) at panel no. 13.

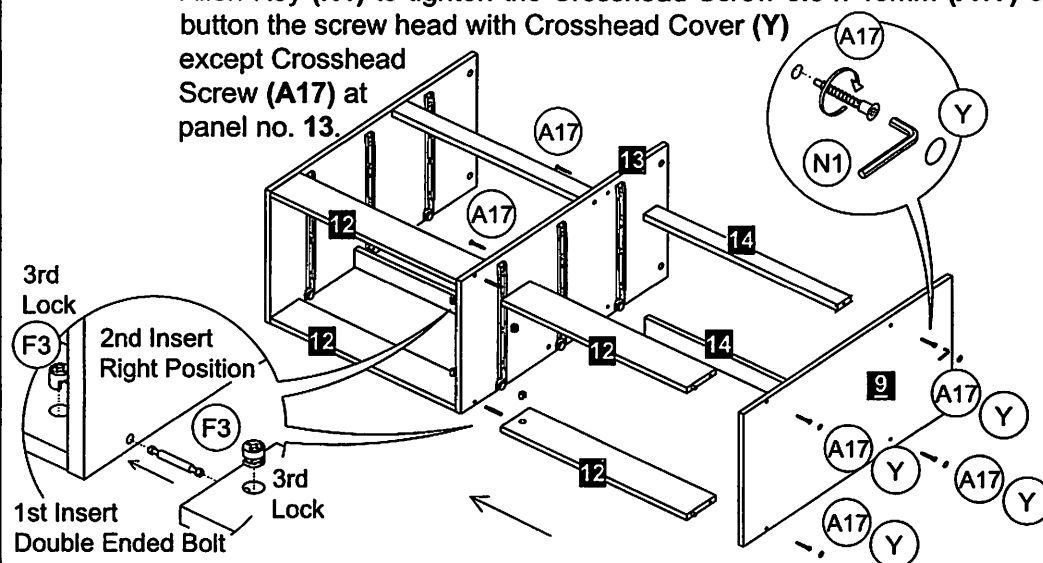


### STEP 1

Assemble the Handle (H6) & screw the Mini Fix Bolt (F2) at panel no. 1, 2, 3 & 4. Insert the Wood Dowel 6 x 25mm (D4) at 6 pcs panel no. 17.

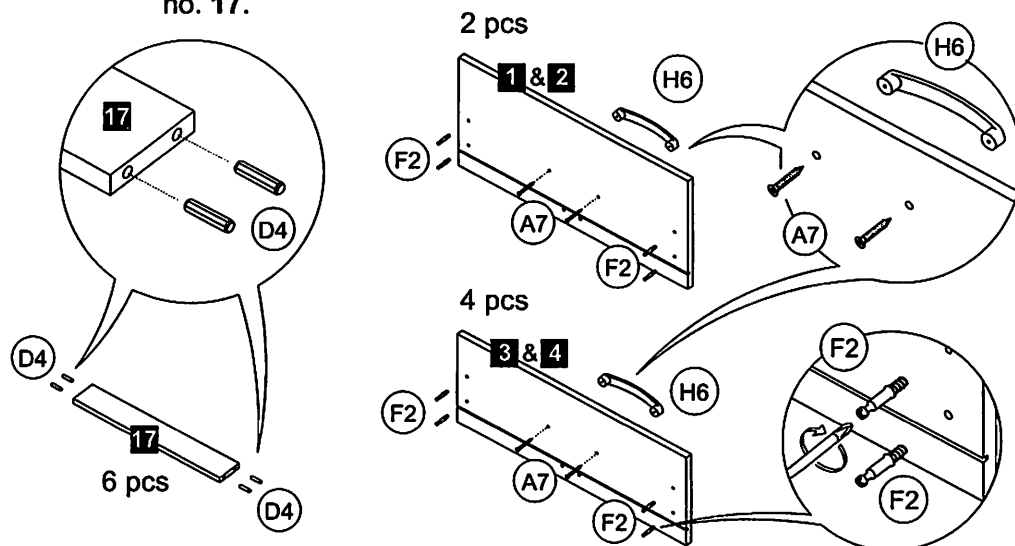


### STEP 2

Assemble 6 sets of drawer in repeated at step 2.

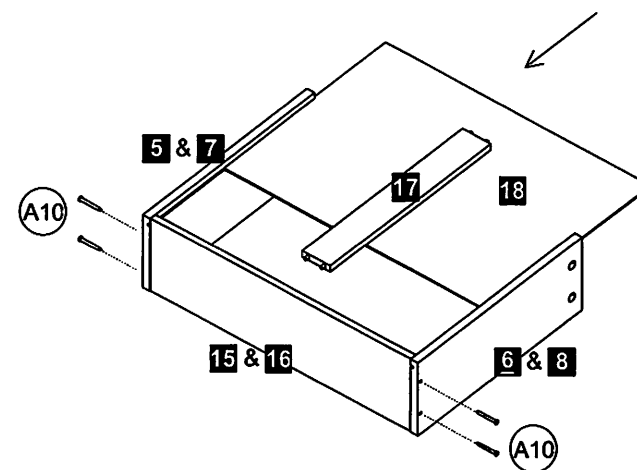


### STEP 3

Assemble 6 sets drawer head panel by using Mini Fix 15mm (F2).

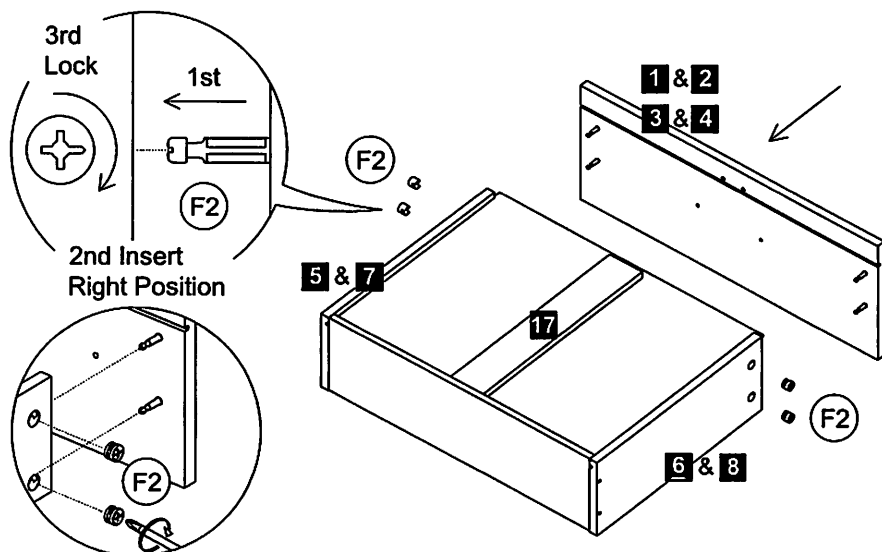


### STEP 4

Use Screw (A2) to assemble the Drawer Metal Slide 350mm (M6) & Single Plastic Cap (R2). Assemble 6 sets of drawer in repeated at step 4.


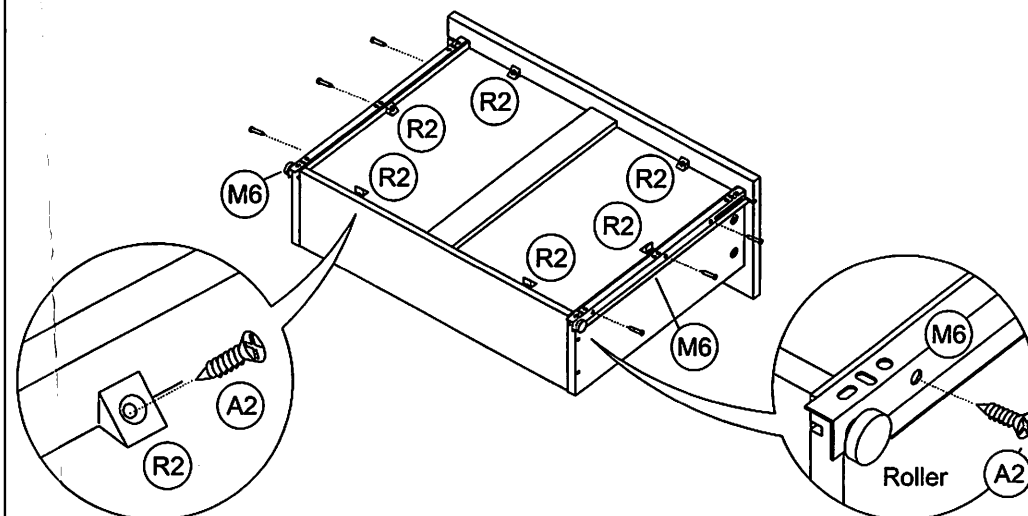


Reference Screw Size.



Place your screw on top to identify the size

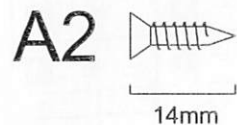



Screw  
m3.5 x 14mm

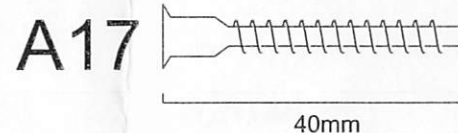



Crosshead Screw  
6.3 x 40mm

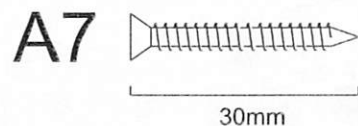


Screw  
m4 x 30mm

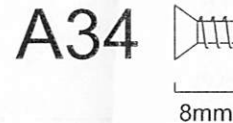

Euro Screw  
m5 x 8mm

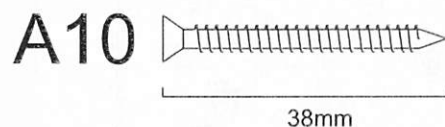

Screw  
m4 x 38mm


















**Before you begin, please follow assembly instruction carefully, then follow step by step.**

Read instruction carefully. See furniture Parts List and Hardware List for guidance. Be sure you have all parts before you start assembling. Place and assemble furniture on a clean flat soft surface, such as carpet, rug or carton to prevent being scratched.

### Reminder :

Please ensure that all surface and edges with colours / laminations are facing forward / outward.

HARDWARE LIST			QTY
A2		Screw m3.5 x 14mm	102
A7		Screw m4 x 30mm	12
A10		Screw m4 x 38mm	24
A17		Crosshead Screw 6.3 x 40mm	12
A34		Euro Screw m5 x 8mm	24
D4		Wood Dowel 6 x 25mm	32
F2		Mini Fix 15mm	30 Sets
F3		Mini Fix 64mm (Double Ended Bolt)	2 Sets
H6		Handle 128mm (Silver)	6
L2		Plastic Leg L Shape	6
N1		Allen Key	1
N3		Nail	40 (+-3)
R2		Single Plastic Cap	36
M6		Drawer Metal Slide 350mm	6 Sets
Y		Crosshead Cover	8

Each pack have contain different type hardware and size of screw for easy assemble. Please refer to page 2, check a screw size.

### CAUTION

MATERIAL USE LAMINATED PARTICLE BOARD, TO CLEAN USE SOFT, DRY CLOTH. DO NOT USE DETERGENT OR CHEMICAL. AVOID CONTACT WITH WATER AND DIRECT SUNLIGHT. TO BE ASSEMBLED ON A SOFT, DRY, CLEAN SMOOTH SURFACE.



USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.

