


# INSTRUCTIONS FOR ULTIMATE TWIN, FULL, QUEEN, KING BED FRAME


## PART NUMBER U3456RG WITH ROLLERS AND GLIDES

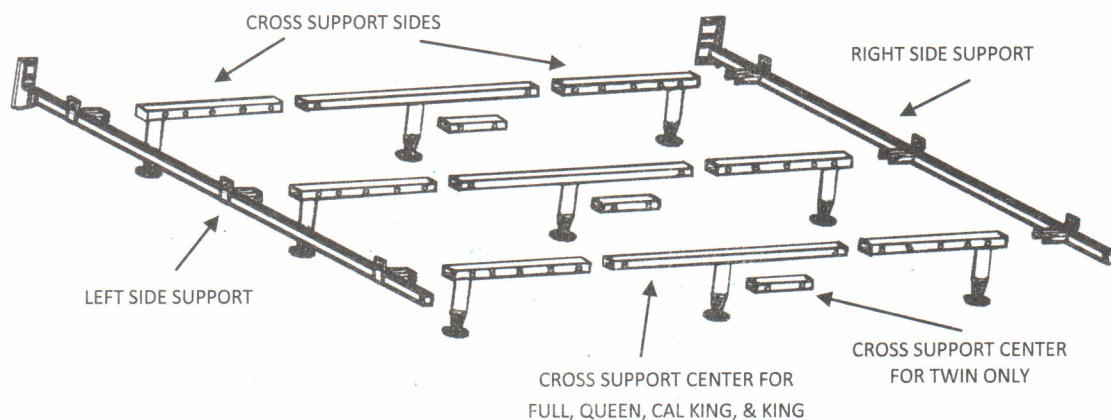


CONTENTS	
QTY	DESCRIPTION
1	LEFT SIDE SUPPORT
1	RIGHT SIDE SUPPORT
3	CROSS SUPPORT CENTER FOR FULL, QUEEN, CAL KING & KING
3	CROSS SUPPORT CENTER FOR TWIN ONLY
6	CROSS SUPPORT SIDE
9	GLIDES
5	WHEELS WITHOUT LOCKS
4	WHEELS WITH LOCKS

- 1) Lay out frame parts as shown above.
- 2) If setting up in full, queen, Cal king or king use the long cross support center with the leg. If setting up in twin use the short cross support center for twin (no leg). Store the unused parts for future use.
- 3) Insert the glides or rollers in the legs. If using the rollers, the rollers with locks should be at the four corners.
- 4) Assemble the three cross supports by inserting the cross support centers into the cross support sides and stop at the settings shown in FIGURE A. The first hole is for twin and king depending on the cross support center you are using. The second hole for Cal king, the third for queen and the fourth for full.
- 5) Attach all three assembled cross supports to the left side support.
- 6) Insert the right side support into the three cross supports **ONLY UP TO THE PUSH BUTTON**. Do not insert the push button into the tube. See FIGURE B.
- 7) When all three cross supports are in this position, depress the push buttons and insert the side support brackets into the tubes approximately one-half inch. Only enough to get all of the push buttons slightly inside the cross supports. See FIGURE C
- 8) Finally, gently tap the side support into the cross supports from the middle of the side rail.


STEP 4—FIGURE A—CROSS SUPPORT SIDES

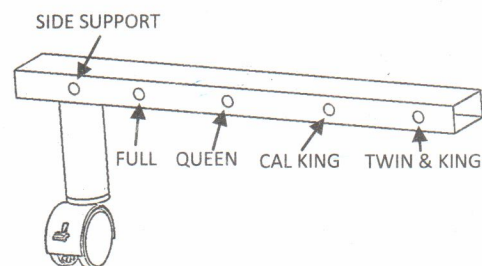

STEP 6—FIGURE B

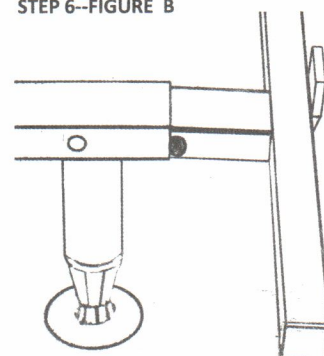

STEP 7—FIGURE C

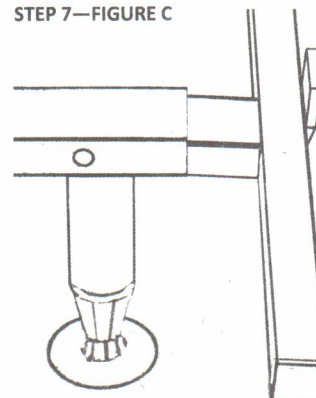

UNITED STATES PATENT PENDING

MADE IN CHINA

©MANTUA MANUFACTURING 2012

FR6436GW