




Assembly Instruction

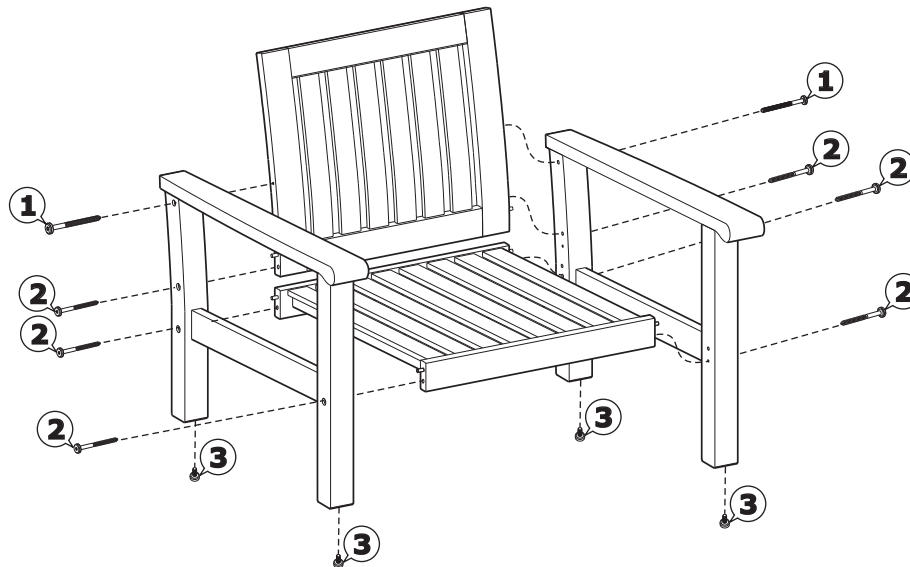


1  **F-bolt M6x70x13-T30, GS x 2 PCS
SEM201419**

2  **F-screw 6x80-T30, GS x 6 PCS
SEM201429**

3  **Bench foot black, P x 4 PCS
SEM201254**

4  **Torx key T30, GS x 1 PCS
SEM201430**

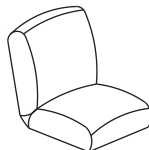5  **DKEZ-Gili deepseating armchair, 20/145/20,
w/ back csh T=28kg, Sunbrella 5488 x 1 PCS
SEM701151**

GILI DEEPSEATING ARMCHAIR, W/ CSH (SUNBRELLA), TEA
SEM102302