



## Freestanding Range

FFEF3043L S

30" Electric



### Product Dimensions

|                          |         |
|--------------------------|---------|
| Height (Max.)            | 47-1/2" |
| Width                    | 29-7/8" |
| Depth (Including Handle) | 28-1/2" |

### More Easy-To-Use Features

#### Hi/Lo Broil Option

Offers two-position broiling and variable temperature control for more control.

#### Smoothtop Cooking Surface

#### Timed Cook Option

#### Electronic Kitchen Timer

#### Bright Lighting

Our bright lighting makes it easy to see what's inside.

#### Manual Clean Oven

#### Attractive Stainless Steel Exterior

Available in:



Stainless  
(S)

## Signature Features

### Ready-Select® Controls

Select options or control cooking temperature with our easy-to-use controls.

### SpaceWise® Expandable Element

Flexible element expands to your cooking needs.

### Store-More™ Storage Drawer


Our convenient drawer gives you extra storage space in your kitchen.

### Extra-Large Window

Our extra-large oven window lets you easily see what's inside.

| Elements    | Size               | Watts         |
|-------------|--------------------|---------------|
| Right Front | 6" / 9" Expandable | 1,200 / 2,500 |
| Right Rear  | 6"                 | 1,200         |
| Left Front  | 9"                 | 2,500         |
| Left Rear   | 6"                 | 1,200         |

| Features                                   |  |
|--|--|
| Oven Control/Timing System                 | Ready-Select® Controls                       |
| Surface Type                               | Black Ceramic Glass                          |
| Window                                     | Extra-Large                                  |
| Exterior Door Finish                       | Stainless Steel                              |
| Handle Design                              | Stainless Steel                              |
| Exterior Finish (Side Panels)              | Black  |
| Convection System                          |  |
| Oven Cleaning System                       | Manual Clean                                 |
| Drawer Functionality                       | Storage                                      |
| Oven Controls                              |  |
| Bake                                       | Yes  |
| Broil                                      | Low and High                                 |
| Add-a-Minute                               |  |
| Delay Bake                                 |  |
| Self-Clean                                 |  |
| Quick Clean Option                         |  |
| Delay Clean                                |  |
| Kitchen Timer                              | Yes  |
| Timed Cook Option                          | Yes  |
| Auto Oven Shut-Off                         |  |
| Cooktop Features                           |  |
| Right Front Element (Watts)                | SpaceWise® Expandable<br>6"/9" - 1,200/2,500 |
| Right Rear Element (Watts)                 | 6" - 1,200                                   |
| Left Front Element (Watts)                 | 9" - 2,500                                   |
| Left Rear Element (Watts)                  | 6" - 1,200                                   |
| Center Element (Watts)                     |  |
| Hot Surface Indicator Light                |  |
| Coil Cooktop/Drip Bowls                    |  |
| Oven Features                              |  |
| Capacity (Cu.Ft.)                          | 4.8  |
| Oven Light                                 | 1  |
| Hidden Bake Element                        |  |
| Rack Configuration                         | 2 Standard                                   |
| Even Baking System                         |  |
| Broiling System                            | Vari-Broil™ Hi/Lo                            |
| Bake Element/Broil Element (Watts)         | 2,600/3,000                                  |
| Specifications                             |  |
| Oven Interior (H x W x D)                  | 21" x 24-3/8" x 19-1/8"                      |
| Power Supply Connection Location           | Middle Bottom Rear                           |
| Voltage Rating                             | 240V/208V/60Hz                               |
| Connected Load (kW Rating) @ 240/208 Volts | 11.5/8.5                                     |
| Minimum Circuit Required (Amps)            | 40   |
| Shipping Weight (Approx.)                  | 138 Lbs.                                     |

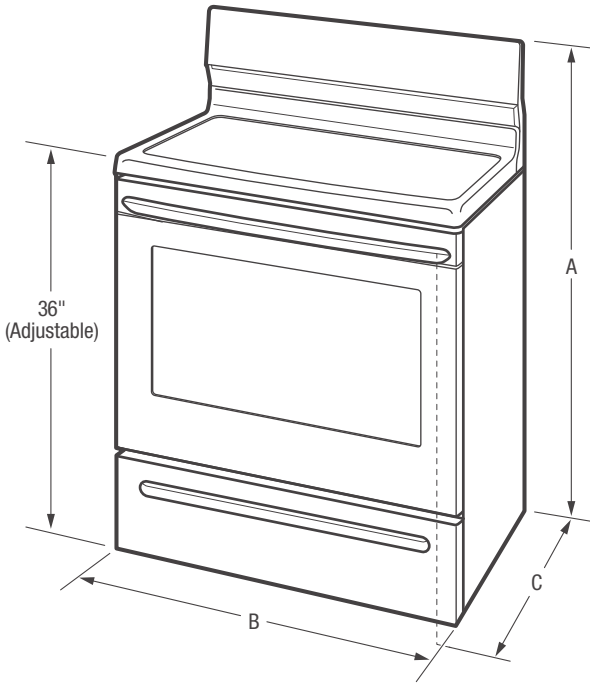


NOTE: For planning purposes only. Always consult local and national electric codes. Refer to Product Installation Guide for detailed installation instructions on the web at [frigidaire.com](http://frigidaire.com).



| Product Dimensions           |         |
|------------------------------|---------|
| A - Height (Max.)            | 47-1/2" |
| B - Width                    | 29-7/8" |
| C - Depth (Including Handle) | 28-1/2" |
| Depth with Door Open 90°     | 48-3/8" |

| Cabinet Cutout Dimensions |     |
|---------------------------|-----|
| Height (Standard)         | 36" |
| Width (Min.)              | 30" |
| Depth (Min.)              | 24" |

Accessories information available on the web at [frigidaire.com](http://frigidaire.com)

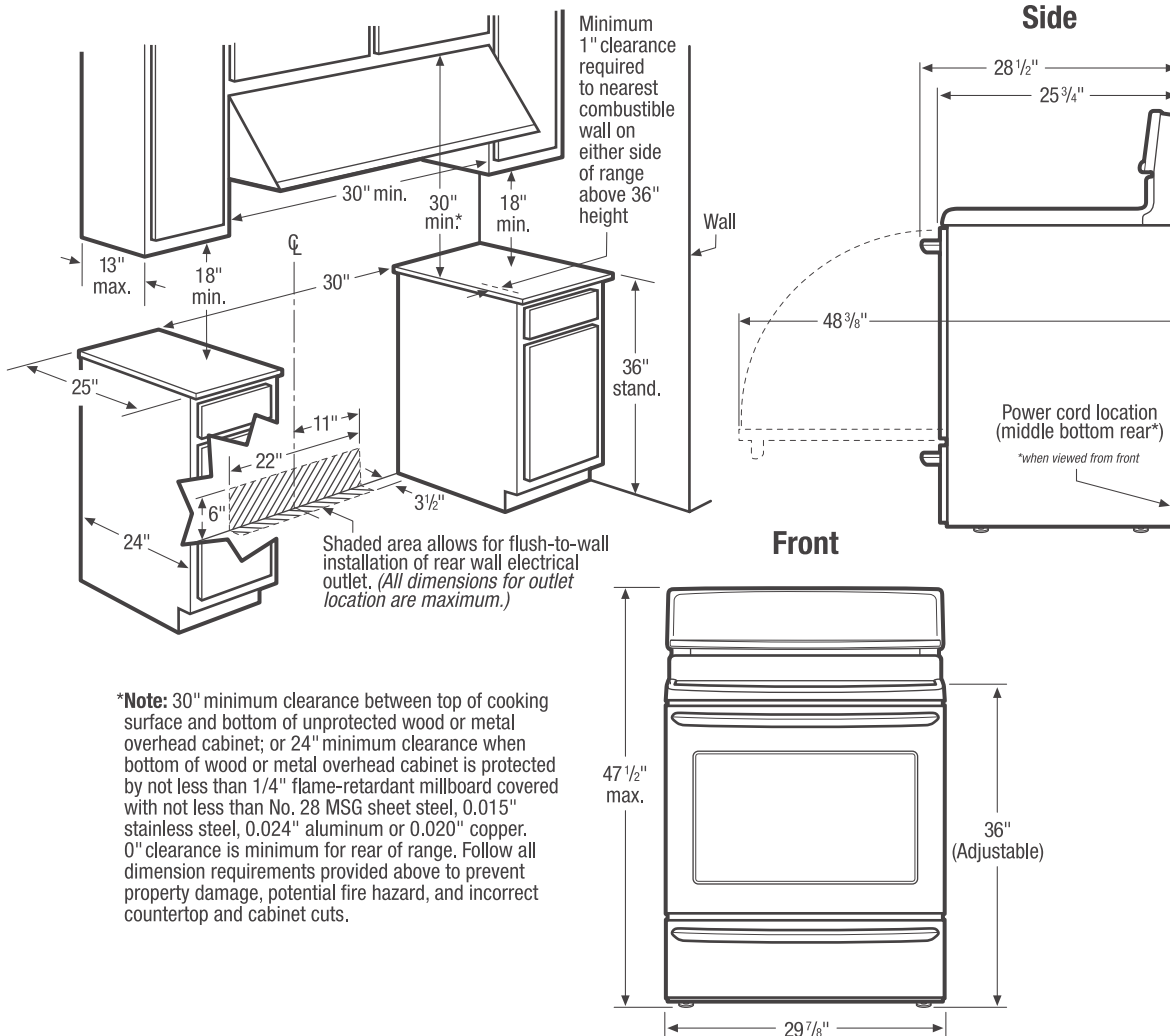

## Freestanding Range Specifications


- Product Shipping Weight (approx.) – 138 Lbs.
- Single phase 3- or 4-wire cable, 120/240 or 120/208 Volt, 60 Hertz, fused on both sides of line with ground.
- Connected Load (kW Rating) @ 240/208 Volts = 11.5/8.5kW
- Recommended Circuit Breaker – 40 Amps
- Always consult local and national electric codes.
- Make sure wall coverings around range can withstand heat generated by range.
- Floor beneath range MUST be solid and level.
- Overhead cabinetry should not exceed a 13" maximum depth.
- Absolute minimum horizontal distance between overhead cabinets installed to either side of appliance must be no less than maximum width of appliance.
- Range can be installed flush to wall with 0" minimum rear clearance.
- Minimum 1" clearance required from edge of rangetop to nearest combustible wall on either side of range above 36" height.

- Allow 30" minimum clearance between top of cooking surface and bottom of unprotected wood or metal overhead cabinet; or 24" minimum clearance when bottom of wood or metal overhead cabinet is protected by not less than 1/4" flame retardant millboard covered with not less than No. 28 MSG sheet steel, 0.015" stainless steel, 0.024" aluminum or 0.020" copper.
- To reduce risk of fire when using overhead cabinetry, install range hood that projects horizontally a recommended minimum of 5" beyond bottom of cabinets.
- Follow all dimension requirements provided to prevent property damage, potential fire hazard, and incorrect countertop and cabinet cuts.

*Note: For planning purposes only. Refer to Product Installation Guide on the web at [frigidaire.com](http://frigidaire.com) for detailed instructions.*

Use these dimensions and clearance instructions for planning purposes only. For detailed installation instructions, refer to installation guide, packed with product, or on the web at [frigidaire.com](http://frigidaire.com).


Front

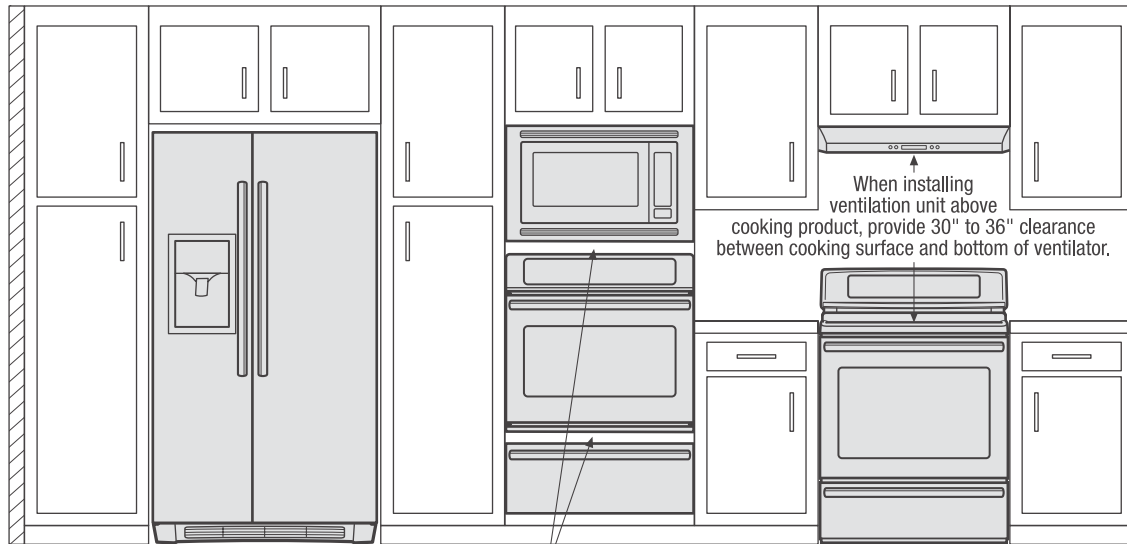

When installing built-in cooking appliances in combination, 2"-high minimum visible gap between appliance faceplates required.

Clearance information for cooking appliances, provided in specific product's installation guide.


Top

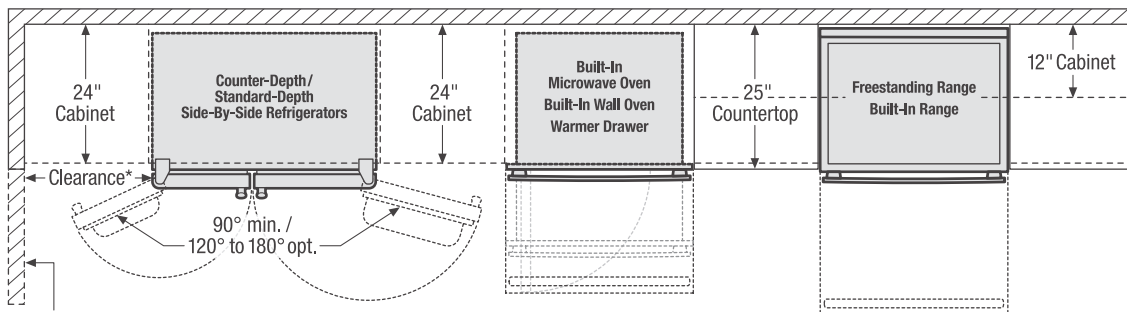

\*When installing side-by-side refrigerator adjacent to wall, cabinet or another appliance that extends beyond front edge of unit, 20" minimum clearance recommended to allow for optimum 120° to 180° door swing, providing complete drawer/crisper access and removal. (Absolute 4-1/2" minimum clearance will ONLY allow for 90° door swing which will provide limited drawer/crisper access with restricted removal.)


When installing appliance with sliding drawer, swinging or drop-down door directly across from obstructions, provide sufficient clearance for drawer extension or door swings.

Top

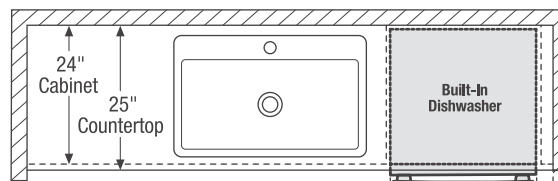

When installing appliance with sliding drawer or drop-down door adjacent to wall, cabinet, or other obstruction that extends beyond front edge of appliance, allow 2" minimum clearance between drawer or door and obstruction.


Front

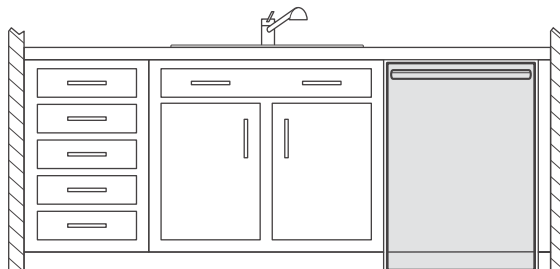

When installing appliance with sliding drawer or drop-down door directly across from obstructions, provide sufficient clearance for drawer extension or door swing.

Use these dimensions and clearance instructions for planning purposes only. For detailed installation instructions, refer to installation guide, packed with product, or on the web at [frigidaire.com](http://frigidaire.com).


Front

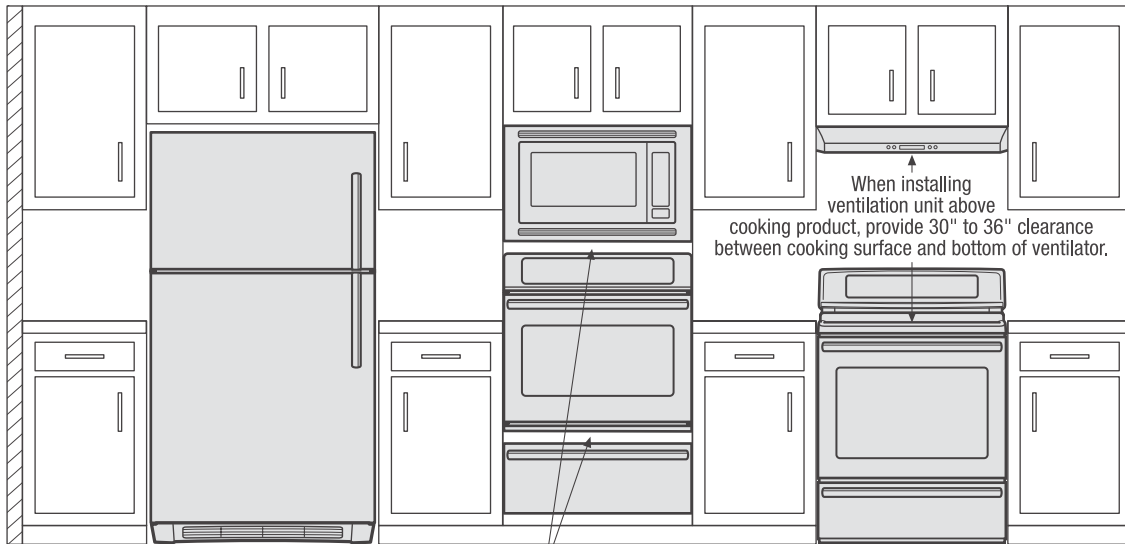

When installing built-in cooking appliances in combination, 2"-high minimum visible gap between appliance faceplates required.

Clearance information for cooking appliances, provided in specific product's installation guide.


Top

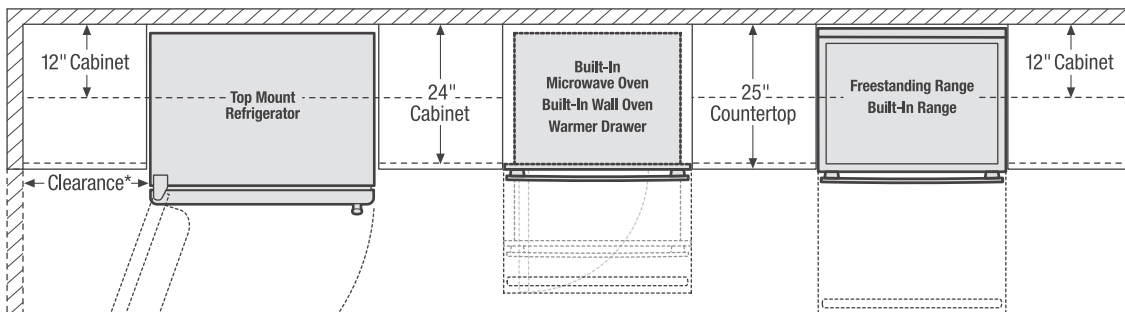

When installing appliance with sliding drawer, swinging or drop-down door directly across from obstructions, provide sufficient clearance for drawer extension or door swings.


\*When installing top mount refrigerator adjacent to wall, cabinet or other appliance that extends beyond front edge of unit, 20" minimum clearance recommended to allow for optimum 140° door swing, providing complete crisper access and removal. (Absolute 3" minimum clearance will ONLY allow for 90° door swing which will provide limited crisper access with restricted removal.)

Top

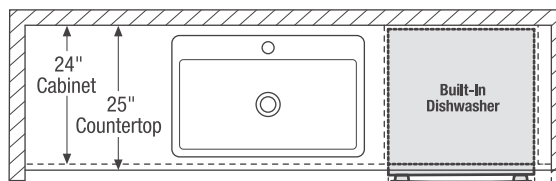

When installing appliance with sliding drawer or drop-down door adjacent to wall, cabinet, or other obstruction that extends beyond front edge of appliance, allow 2" minimum clearance between drawer or door and obstruction.


Front

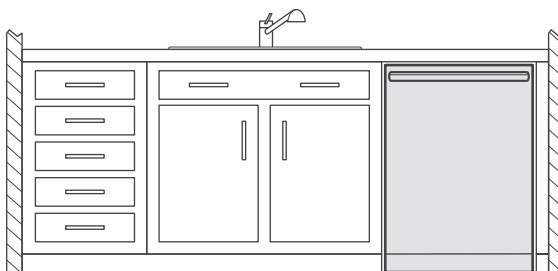

When installing appliance with sliding drawer or drop-down door directly across from obstructions, provide sufficient clearance for drawer extension or door swing.

Use these dimensions and clearance instructions for planning purposes only. For detailed installation instructions, refer to installation guide, packed with product, or on the web at [frigidaire.com](http://frigidaire.com).


Front

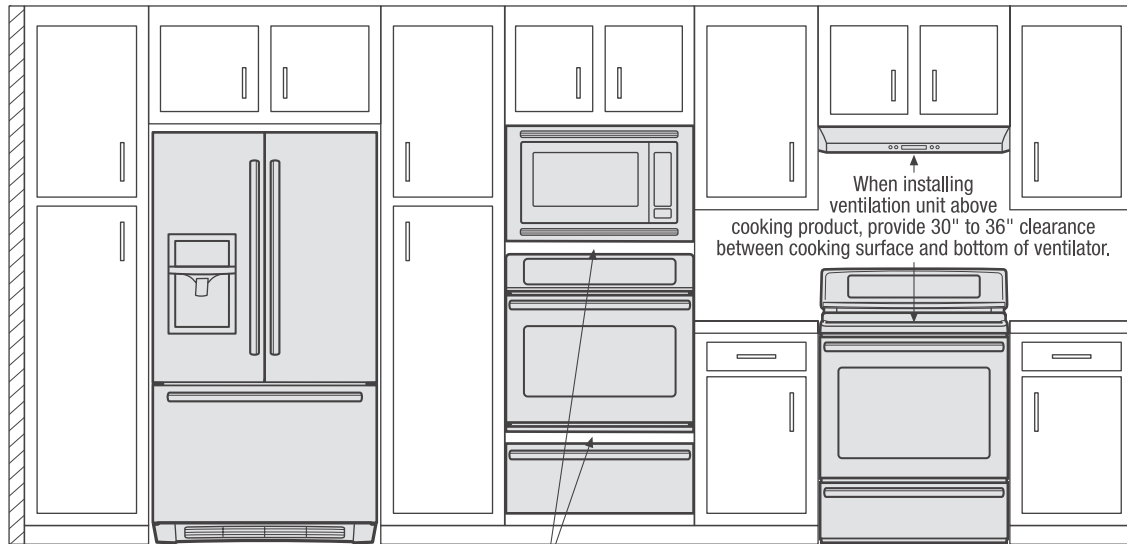

When installing built-in cooking appliances in combination, 2"-high minimum visible gap between appliance faceplates required.

Clearance information for cooking appliances, provided in specific product's installation guide.


Top

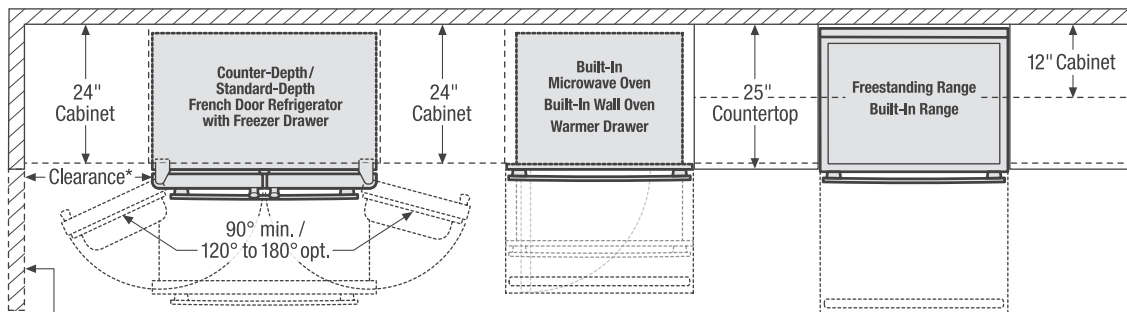

\*When installing French door refrigerator adjacent to wall, cabinet or another appliance that extends beyond front edge of unit, 20" minimum clearance recommended to allow for optimum 120° to 180° door swing, providing complete drawer/crisper access and removal. (Absolute 4-1/2" minimum clearance will ONLY allow for 90° door swing which will provide limited drawer/crisper access with restricted removal.)


When installing appliance with sliding drawer, swinging or drop-down door directly across from obstructions, provide sufficient clearance for drawer extension or door swings.

Top

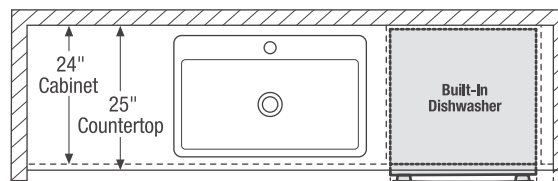

When installing appliance with sliding drawer or drop-down door adjacent to wall, cabinet, or other obstruction that extends beyond front edge of appliance, allow 2" minimum clearance between drawer or door and obstruction.

Front

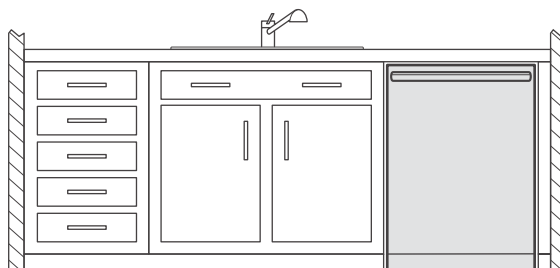

When installing appliance with sliding drawer or drop-down door directly across from obstructions, provide sufficient clearance for drawer extension or door swing.

Use these dimensions and clearance instructions for planning purposes only. For detailed installation instructions, refer to installation guide, packed with product, or on the web at [frigidaire.com](http://frigidaire.com).

