

Para instrucciones en Español, llamar al: 1-800-233-5921

evenflo®

Best for Baby™

OWNER'S MANUAL

Keep for future use.

Chase Select™ / LX™

Child Restraint System

**Exclusive RightFit
Belt Path**

Child Requirements

Weight: 10 – 49.8 kg (22 – 110 lbs)

Height: 71 – 145 cm (28 – 57 in.)

! WARNING

To reduce the
risk of **SERIOUS INJURY**
or **DEATH**, read this
owner's manual prior to
installing and using this
child restraint.

More children are killed every year as passengers in car crashes than by any other type of injury.

To reduce the risk of **SERIOUS INJURY** or **DEATH**, read this owner's manual and your vehicle owner's manual before installing and using this child restraint. Using a child restraint makes a big difference. By properly using this child restraint and following these instructions (and the instructions that accompany your vehicle), you will greatly reduce the risk of serious injury or death to the child from a crash. Do not be misled by the commonly used term "safety seat"; no restraint system can prevent all injuries in all crashes. Many properly restrained adults and children are injured in motor vehicle crashes, including relatively minor crashes. A properly used child restraint is the best way to minimize injuries to the child and to increase the chances for the child's survival in most crashes.

U.S. REGULATORY NOTICE

This child restraint meets all applicable requirements of Federal Motor Vehicle Safety Standard 213.

For Canadian Models CANADIAN REGULATORY NOTICE

This child restraint meets all applicable requirements of Canadian Motor Vehicle Safety Standards CMVSS 213 and 213.2.

Child Requirements

- No restraint can guarantee absolute protection from injury in every crash.
- This child restraint is designed for use by children in forward-facing and booster modes.
- To use this child restraint properly, children **MUST** meet weight/size specifications as follows:

For 5-pt Harness Use

- The child weighs 10 – 18 kg (22 – 40 lbs).
- The child is between 71 – 127 cm (28 – 50 inches) tall **AND** the tops of his/her ears are at, or below, the child restraint headrest.
- Child is one year old or older.

For Booster Use

- The child weighs 18 – 49.8 kg (40 – 110 lbs).
- The child is between 110 – 145 cm (43.3 – 57 inches) tall **AND** the tops of his/her ears are at, or below, the child restraint headrest.
- Child is four years old or older.

Table of Contents

Important Information

Warnings.....	2
Safe Practices	8
Airplane Usage	8
Recall Information for U.S. Customers	9
Public Notice for Canadian Customers	9
LATCH Information	9
Care and Cleaning	10
Visual Glossary	12


Internal 5-pt Harness Use

Installation Checklist	15
Installation with LATCH	16
Installation with Seat Belt	19
Securing the Child	22
Removing the Child	24
Positioning the Harness Strap ...	25
Positioning the Crotch Strap	27



Booster Use

When to Put Your Child in a Booster Seat	28
Booster Installation Checklist	31
Converting into a Booster Seat..	32

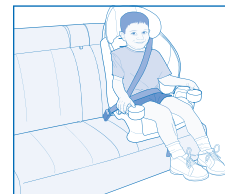

General Information

Leveling the Booster Seat	36
Installing the Cup Holders	36
Removing Seat Pad	37
Installing the Locking Clip	37
Replacement Parts.....	39
Limited Warranty.....	41

Symbol Legend



Airbag Symbol – Alerts you to important information about airbag safety.



LATCH Symbol – Alerts you to important information about LATCH safety.



Tether Anchor Symbol – Alerts you to important information about tether anchor safety.

⚠️WARNING

Air Bag Warnings

- **DO NOT** use this restraint in the front seat of a vehicle equipped with an air bag. Air bags may cause serious injury or death to children 12 and under. If your vehicle has an air bag, refer to your vehicle owner's manual for child restraint installation.
- If the rear seat of your vehicle is equipped with side air bags, refer to the following information for proper usage.

Vehicles built prior to the 2002 model year:


DO NOT use this restraint in a vehicle seating position equipped with a side air bag unless authorized by the vehicle manufacturer.

Model year 2002 and newer vehicles:

Refer to your vehicle owner's manual before placing this restraint in a seating position equipped with a side air bag.

- **DO NOT** place any objects between the restraint and the side air bag, as an expanding air bag may cause the items to strike the child.

The back seat is the safest place for children 12 and under.

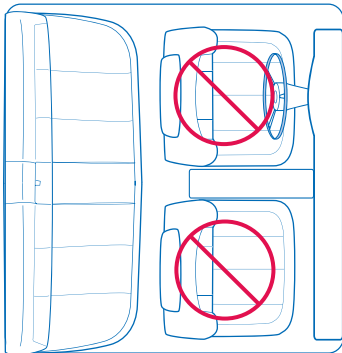

⚠️WARNING

General Warnings

- Failure to follow installation instructions can result in the child striking the vehicle's interior during a sudden stop or crash. Serious injury or death may result. These instructions and the instructions in your vehicle owner's manual must be followed carefully. If there is a conflict between the two, the vehicle owner's manual regarding child restraint installation must be followed.
- **NEVER** leave child unattended.
- **DO NOT** use child restraint if it is damaged, broken, or missing parts.
- **DO NOT** use this restraint if it has been involved in a crash. It must be replaced.
- **NEVER** use this child restraint without the headrest installed.
- **NEVER** use this child restraint rear-facing.

Location Warnings

- **ALWAYS** read and follow exactly the instructions that accompany your vehicle and child restraint.
- According to statistics, children are safer when properly restrained in a rear seating position than in the front seating position. Generally, the center rear position is safest and should be used, if available.
- Some child restraints do not fit all vehicles or all seating locations. There are many thousands of combinations of vehicle makes, models, child restraint configurations, seat belt designs, and seat cushion shapes. The easiest way to determine whether the child restraint is suitable for a particular seating position is to check for a tight installation. If the child restraint cannot be properly installed, **DO NOT** use the child restraint. Consult vehicle owner's manual, try a different seating location, or call Evenflo.
- **ONLY** use this child restraint on **forward-facing vehicle seats**. **DO NOT** use this restraint with vehicle seats that face the rear or side.
- **ONLY** use this child restraint on vehicle seats with backs that lock into place.

WARNING

Forward-facing Position Warnings

- If the child weighs more than 18 kg (40 lbs) or their shoulders are above the highest harness level, you **MUST** use this child restraint as a booster (p. 28).
- Adjust, or remove, the **vehicle** headrest, **in the seat where the child restraint is to be fastened**, so that the back of the child restraint rests against the vehicle seat back.
- The headrest on the vehicle seat in front of the child should be put in its lowest position. The vehicle seat back that the child faces must be fully padded and free of any hard objects.

Seat Belt Warnings

For 5-point Harness Use Only

- **DO NOT** use this child restraint if it moves more than 25 mm (1 inch) forward or side-to-side at the vehicle belt path. Serious injury or death may result from poor installation. If you cannot tightly secure the child restraint, try again or move it to another location.

For Both 5-point Harness and Booster Use

- **DO NOT** use this child restraint in a vehicle with door-mounted seat belts.
- **DO NOT** use this child restraint in a vehicle with seat belts that automatically move along the vehicle frame when the door is opened. These seat belts will not hold a child restraint properly.
- If the vehicle seat belts are not routed and fastened correctly, the child restraint may not protect the child in a crash.
- **DO NOT** allow the seat belt release button to touch the child restraint. Accidental contact may cause the seat belt to release. If necessary, turn the seat belt release button away from the child restraint or move the child restraint to a different location.
- Failure to adjust the harness or vehicle seat belts snugly around the child may result in the child striking the vehicle's interior during a sudden stop or crash. Serious injury or death may occur.

WARNING

- Remove locking clip from vehicle seat belt when not used with a child restraint, or the vehicle seat belt will not properly restrain an adult or child. Serious injury or death may occur.

For Booster Use Only

- When using this booster seat, **NEVER** use a lap belt only. You **MUST** use vehicle seat belts that have a lap/shoulder combination.
- **DO NOT** use the locking clip when using this child restraint as a booster seat.
- The shoulder belt **MUST** be threaded through the shoulder belt guide (p. 30).
- **DO NOT** use this booster seat if the child's ears are above the back of the booster seat headrest.
- The shoulder belt **MUST NOT** cross the child's neck **or** fall off the child's shoulder. If you cannot adjust the shoulder belt to **properly lay midway between the child's shoulder and neck AND at or above the shoulder**, try another seating location or do not use the booster seat.

LATCH Warnings

For 5-point Harness Use Only

- This LATCH system is intended to be used **ONLY** as described in these instructions. Serious injury or death may result from misuse.
- In addition to these instructions, read and follow your vehicle owner's manual regarding installation of the child restraint and LATCH. If there is a discrepancy, follow your vehicle owner's manual.
- **ONLY** use for securing child restraint to lower LATCH anchor points.
- **NEVER** attach two LATCH connectors to one vehicle lower anchor point.
- **NEVER** use the vehicle seat belts when using the LATCH straps. Using both together can cause slack in a sudden stop or crash.
- When not in use, the LATCH harness and connectors should be securely stored on child restraint. Keep out of reach of children.

WARNING

LATCH Warnings – cont.

For 5-point Harness Use Only

- **ALWAYS** be sure that the LATCH connectors are fully engaged onto the LATCH anchor points by pulling hard on the LATCH harness. If they are not totally engaged, the LATCH system will not secure the child restraint. Serious injury or death may result.
- **DO NOT** use this child restraint if it moves more than 25 mm (1 inch) forward or side-to-side at the vehicle belt path on the child restraint. Serious injury or death may result from poor installation. If you cannot tightly secure the child restraint, try again or move it to another location.

Tether Strap Warnings

- To avoid a strangulation hazard, you **MUST** tightly roll or fold excess or unused tether strap and secure with a rubber band. Attach the tether hooks to the storage clips when not in use (p. 13). This will keep an unused tether from hitting someone during a crash.

Additional Warnings

- In hot or sunny weather, **ALWAYS** check the seat, the buckle and LATCH hooks, and adjuster for hot areas before placing a child into the child restraint. The child could be burned. Cover the child restraint with a light colored blanket when you leave the vehicle.
- In cold weather, **DO NOT** dress the child in bulky clothing like snowsuits if the child is riding in a child restraint. Bulky coats/snowsuits make it difficult to properly tighten the harness to the child, which may allow the child to be ejected from the restraint during a crash. If necessary, place a blanket over the harnessed child without interfering with the child restraint harness system.
- This child restraint must be securely fastened to the vehicle, **even when unoccupied**, using the vehicle seat belts or LATCH connectors. An unsecured child restraint may injure someone if a crash occurs.
- **DO NOT** use the cup holder to store cans or hard cups. Only for use with soft cups (such as styrofoam or paper).

WARNING

- **DO NOT** place any cups that contain hot liquids (such as coffee or tea) in the cup holder.
- **DO NOT** attach additional items to this child restraint that are not approved by Evenflo. Items not tested with the child restraint could injure the child.
- Failure to follow installation instructions could result in serious injury or death. These instructions and the instructions in your vehicle owner's manual must be followed carefully. If there is a conflict between the two, the vehicle owner's manual regarding child restraint installation must be followed.

Safe Practices

- **Everyone rides buckled up or the vehicle does not go.** Make no exceptions for adults or children. If someone unbuckles, stop the vehicle. Being firm and consistent from the start will mean fewer discipline problems as children get older. An unrestrained person can be thrown into and injure other passengers.
- **NEVER** try to tend to a crying baby's needs while driving. **NEVER** take a baby out of a child restraint for comforting while the vehicle is moving.
- **DO NOT** allow a child in a vehicle to have objects such as lollipops or ice cream on a stick. The object can injure the child if the vehicle swerves or hits a bump.
- **DO NOT** feed an infant who is riding in a child restraint.
- Put sharp or heavy items in the trunk. Anything loose can be deadly in a crash.

Airplane Usage

When used WITH the 5-point harness system:

This restraint is certified for use in motor vehicles and aircraft.

When used WITHOUT the 5-point harness as a Booster:

This booster seat is **NOT** certified for aircraft use. A belt-positioning booster seat requires the use of a lap/shoulder belt system, which is not available on aircraft.



Recall Information for U.S. Customers

- Child restraints could be recalled for safety reasons. You must register this restraint to be reached in a recall. Send your name, address, the restraint's model number, and manufacturing date to

**Evenflo Company, Inc.,
1801 Commerce Dr.,
Piqua, OH 45356**

or call 1-800-233-5921.

You may also register on-line at:

www.evenflo.com/registercarseat

- For recall information, call the U.S. Government's Vehicle Safety Hotline at 1-888-327-4236 (TTY:1-800-424-9153), or go to:

<http://www.NHTSA.gov>

Public Notice for Canadian Customers

- To register your child restraint, return your registration card, call 1-937-773-3971, or on-line at **www.evenflo.com/registercarseatcanada**
- For recall information, call Transport Canada at 1-800-333-0510 (1-613-993-9851 in Ottawa)

LATCH Information

"**LATCH**" (Lower Anchorage and Tether for **C**hildren) is a system for attaching the child restraint to your vehicle seat. It can be used in place of the seat belts in vehicles with **LATCH** anchors. Refer to your vehicle owner's manual for the locations of **LATCH** anchors.


Note: Your vehicle owner's manual may refer to this system as "**ISOFIX**."

Care and Cleaning

- **DO NOT** lubricate or immerse the LATCH connectors, the buckle, or any part of this child restraint.
- Plastic and metal parts may be wiped clean with mild soap and water and dried with a soft cloth. Do not use abrasive cleaners or solvents.
- Take care not to damage any labels.
- The harness can be wiped clean with mild soap and water. Allow harness to air dry. **DO NOT** immerse buckle in water.
- The seat pad can be machine washed separately in cold water, delicate cycle, tumble dry 10 – 15 minutes on low heat.
- **NEVER** use child restraint without the seat pad.

Tip!

To help protect the vehicle upholstery, place a towel beneath and behind the child restraint.

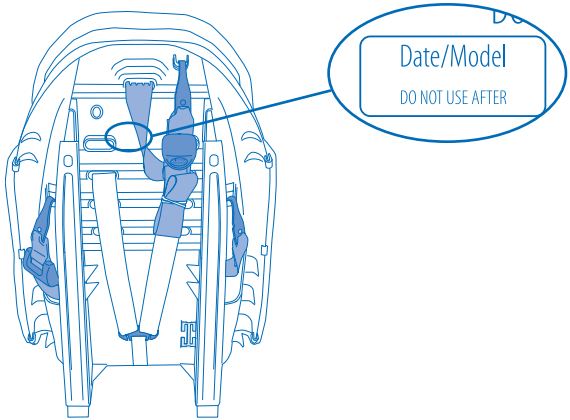

For future reference, record the **model number** of your child restraint AND the **date of manufacture** below (p. 13).

Model Number: _____

Date of Manufacture: _____

This page has been left blank intentionally.

Visual Glossary

Your vehicle components may be significantly different than pictured. Consult your owner's manual to help you identify your vehicle components.



Tether Anchors
Forward-facing
ONLY

Rear
Headrests

Fold-down Armrest
Consult your vehicle's
owners manual.

Back Seat
Belt Buckles

Center Lap
Belt

Back Seat
Belt Retractor


Lap/Shoulder
Belt





LATCH
Lower
Anchors

Seat Crease

IMPORTANT: If your vehicle has **side air bags**, please refer to the warnings on page 2.

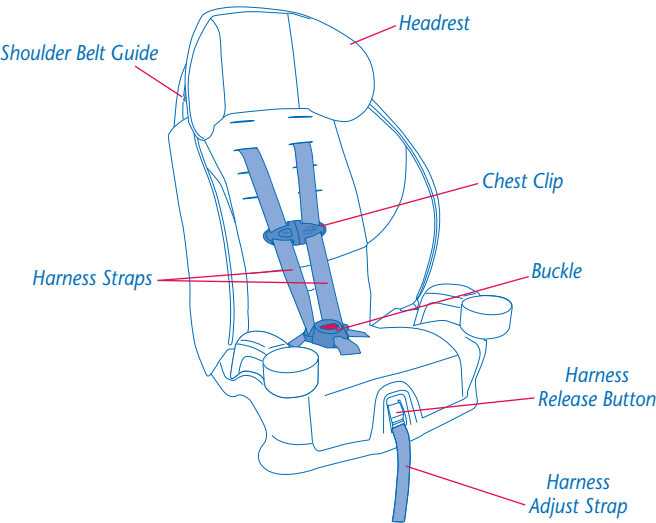

Visual Glossary

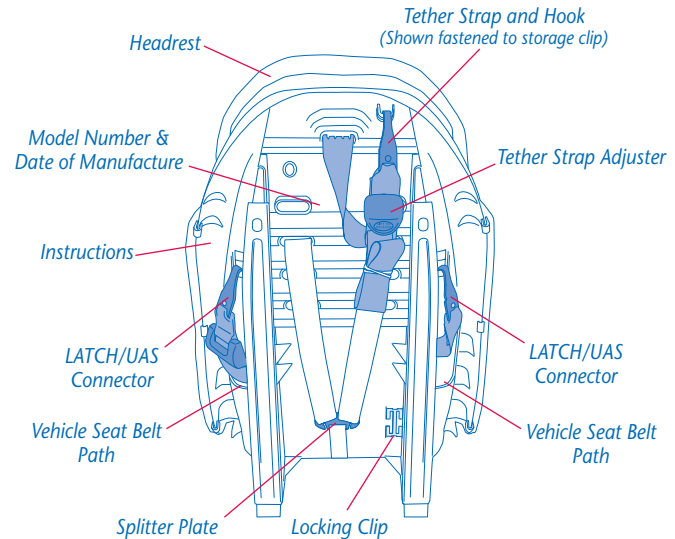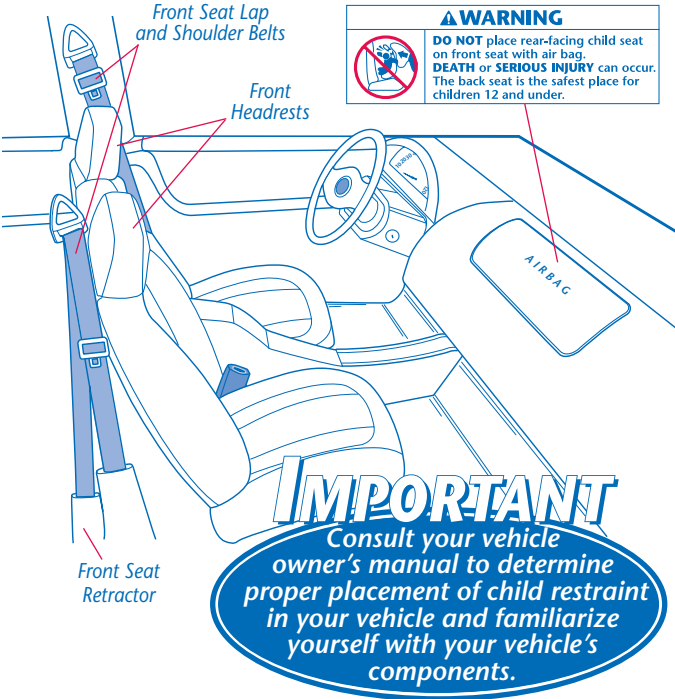


Using Chase Select/LX with the Internal 5-pt Harness

Child Requirements

Weight: 10 – 18 kg (22 – 40 lbs)


Height: 71 – 127 cm (28 – 50 inches) tall, or less, **AND** the tops of the child's ears are at, or below, the top of the child restraint headrest.

Age: At least one year old

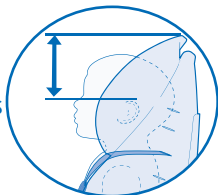

IMPORTANT

Evenflo strongly recommends using the top anchorage (tether) strap when using this seat with the internal harness. Using the tether strap will improve the stability of the child restraint and may reduce the risk of injury.

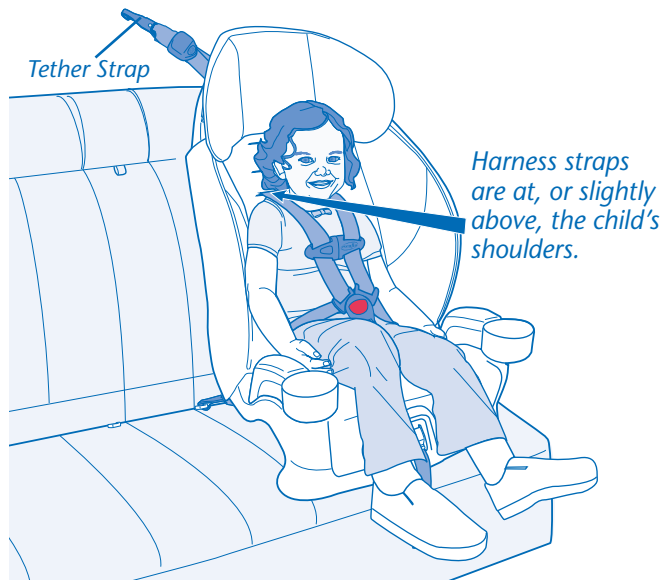

⚠ WARNING

If the child weighs more than 18 kg (40 lbs) or their shoulders are above the highest harness level, you **MUST** use this child restraint as a Booster.

Installation Checklist

1. Secure child restraint to the vehicle seat.

- ✓ Locking clip is installed, if necessary (p. 37).
- ✓ Child restraint is securely installed with LATCH system (shown at left) through **belt path** (p. 16)

OR

Child restraint is securely installed with vehicle seat belt through **belt path** (p. 19)

- ✓ Tether strap is attached and tightened (p. 18/21).

2. Place the child in the child restraint.

- ✓ The child's back and bottom are flat against the back and bottom surfaces of the child restraint.
- ✓ The top of the child's ears **MUST** be at, or below, the top of the child restraint headrest.

3. Make necessary adjustments.

- ✓ Harness is **no more than** two-finger widths from child (p. 23).
- ✓ Crotch strap is properly positioned (p. 27).

4. Fasten both buckle tongues. Refer to page 22.

5. Position and connect chest clip.

- ✓ Chest clip **MUST** be at armpit level (p. 23).

6. Check your work.


- ✓ To properly protect the child, the child restraint **MUST NOT** move more than 25 mm (1 inch) from **side-to-side** or from **front-to-back** at the belt path.

Tip!


To make installation easier, watch the installation video of this child restraint at www.evenflo.com.

Installation with LATCH

IMPORTANT: If you are using the vehicle seat belt to secure the child restraint, **DO NOT** use the LATCH straps.

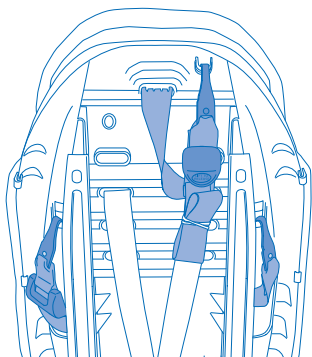


1. Disconnect tether hook and LATCH connectors from the back of the child restraint.

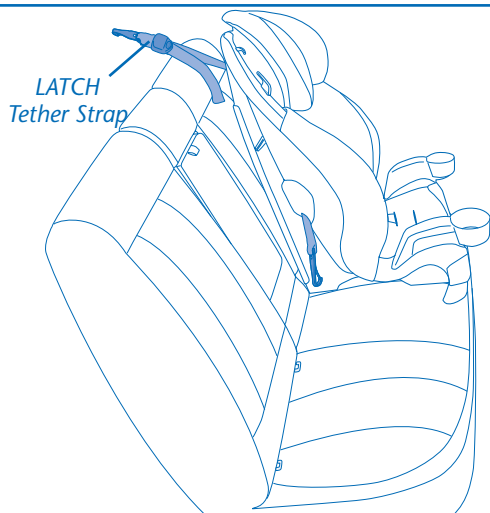

2. Place the child restraint in position.

Set child restraint on vehicle seat in forward-facing position.
Lay the tether strap over the back of the vehicle seat.


Installation with LATCH

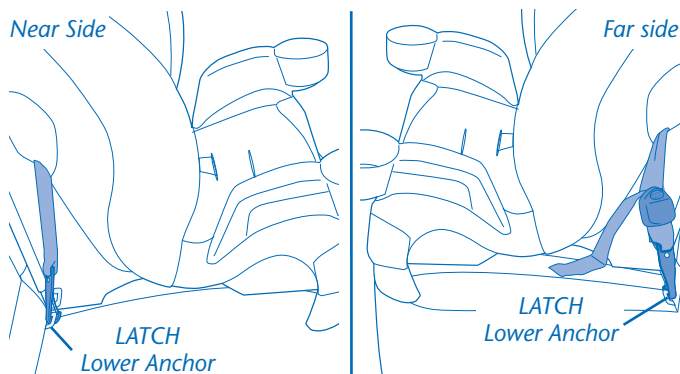

3. Attach LATCH Connectors.

Attach a LATCH connector onto **each** seat anchor.

IMPORTANT: Make sure both LATCH connectors are facing upward and the harness straps are not twisted.

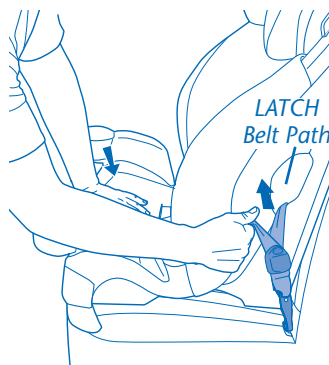


4. Secure the child restraint.

Using your full weight, push the child restraint firmly into the vehicle seat while pulling up on the LATCH strap to tighten.

IMPORTANT: To properly protect the child, the child restraint **MUST NOT** move more than 25 mm (1 inch) from side-to-side or from front-to-back **at the LATCH belt path**. If you cannot tightly secure the child restraint, try again or move it to another location.

Installation with LATCH

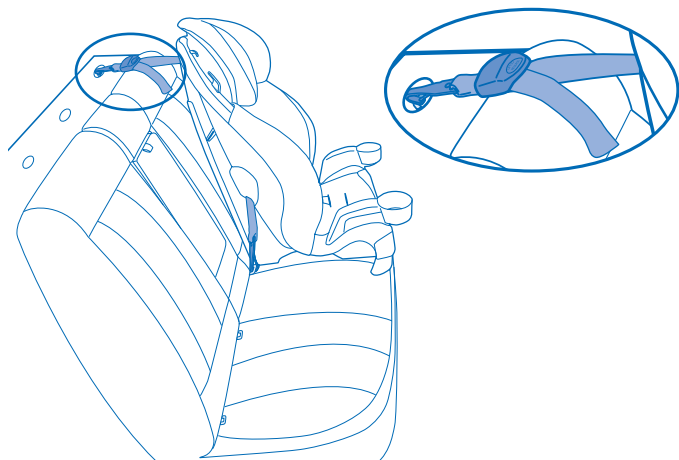

5. Connect and tighten tether strap.


Connect the tether hook to the anchor behind the vehicle seat, as shown.

Pull the strap and tighten the tether securely.


IMPORTANT: If your tether strap is too short to reach from the child restraint to your vehicle tether anchor, you will need a Tether Extender. Please call ParentLink at 1-800-233-5921 (U.S.), 1-937-773-3971 (Canada), or 01-800-706-12-00 (Mexico).

Installation with Seat Belt

IMPORTANT: If you are using the vehicle seat belt to secure the child restraint, **DO NOT** use the LATCH straps.

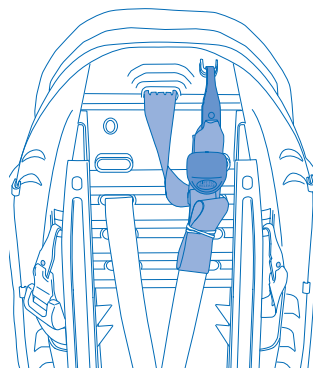


1. Disconnect tether hook from the back of the child restraint.

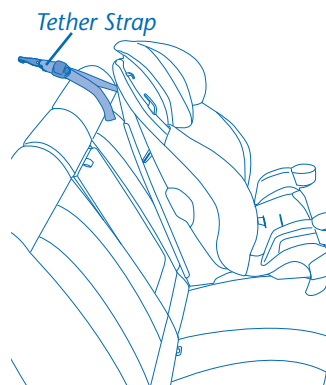


2. Place the child restraint in position.

Set child restraint on vehicle seat in forward-facing position.


Lay the tether strap over the back of the vehicle seat.

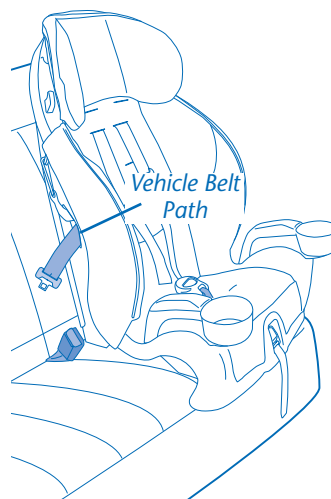

3. Route vehicle seat belt through belt path and buckle it, as shown.

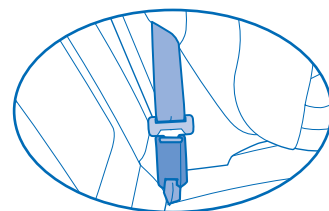

Installation with Seat Belt

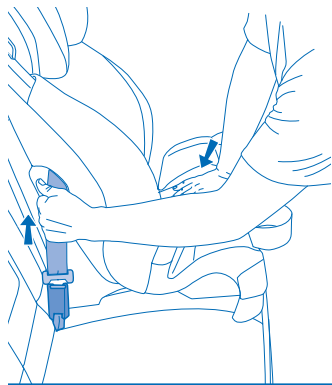


- 4. Remove all slack from the seat belt.**
Push downward on child restraint while tightening seat belt to remove excess slack.

5. Install locking clip, if necessary.

You **MUST** use a locking clip if your vehicle has: Lap/shoulder seat belt combination that has a buckle tongue that slides **freely** along the belt **without locking** into place, **OR** seat belts equipped with an emergency locking retractor (ELR).

Locking Clip installed properly.

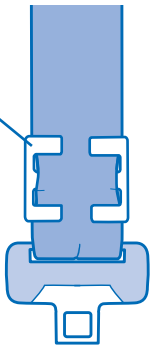


Some ELR vehicle belts can be switched so that they lock when tightened. It may not be necessary to use a locking clip in these situations.

Consult your vehicle owner's manual before installing the locking clip.


To see an example of seat belt types and to properly install a locking clip, go to p. 37.

Installation with Seat Belt

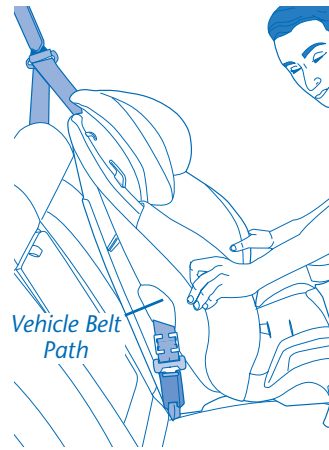

- 6. Ensure child restraint is secure.**
Try to move the child restraint in all directions.

IMPORTANT: To properly protect the child, the child restraint **MUST NOT** move more than 25 mm (1 inch) from side-to-side or from front-to-back **at the vehicle belt path**. If you cannot tightly secure the child restraint, try again or move it to another location.

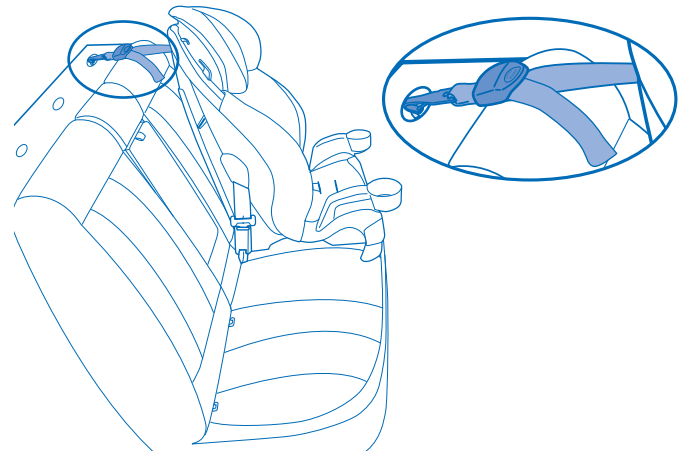


7. Connect and tighten tether strap.

Connect the tether hook to the anchor behind the vehicle seat, as shown.

Pull the strap and tighten the tether securely.


IMPORTANT: If your tether strap is too short to reach from the child restraint to your vehicle tether anchor, you will need a Tether Extender. Please call ParentLink at 1-800-233-5921 (U.S.), 1-937-773-3971 (Canada), or 01-800-706-12-00 (Mexico).

Securing the Child

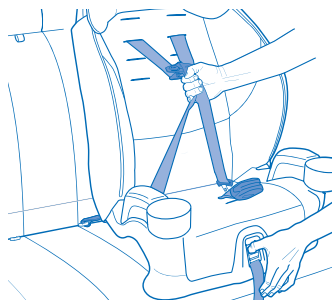

1. Loosen harness.


Press the harness release button on the front of the seat while pulling the harness straps.

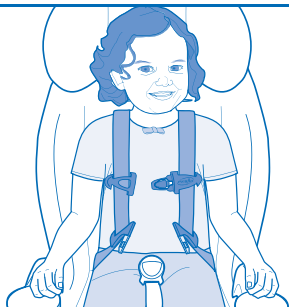

2. Position harness straps.

Unfasten chest clip and place the child in the child restraint. Bring each harness strap over the child's shoulders.


IMPORTANT: The child's back and bottom should be flat against the restraint. If there is a gap, the child will not be comfortable.

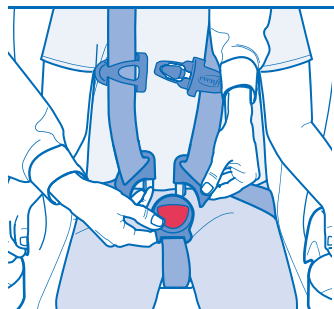

3. Buckle the harness.


Insert both buckle tongues into the buckle.
Note: Pull up on the harness straps to ensure that the buckle tongues are fastened securely.

Securing the Child

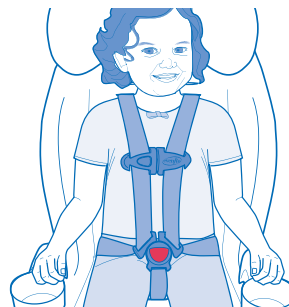

4. Fasten and adjust chest clip.

Snap the two halves of the chest clip together, as shown, and slide to armpit level.

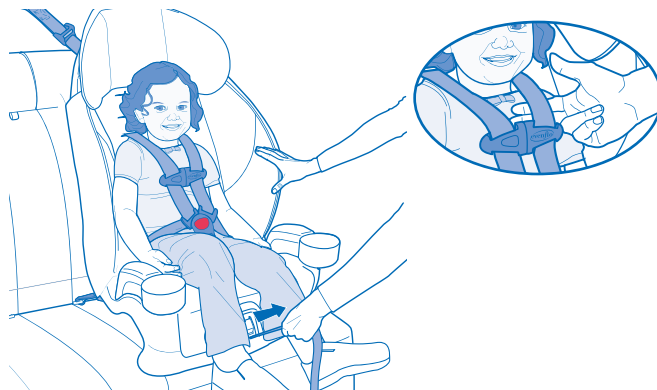


5. Tighten harness.

Pull the harness adjuster strap to tighten the harness.

Note: Make sure the harness straps are snug against the child with **no more** than two finger-widths between the child and straps.

IMPORTANT: A snug strap should not allow any slack. It lies in a relatively straight line without sagging. It does not press on the child's flesh or push the child's body into an unnatural position.
Check the harness straps near the shoulders for slack and adjust as needed.

Removing the Child

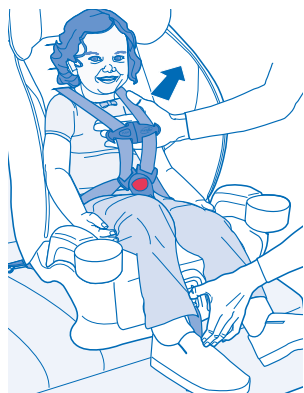



1. Loosen harness straps.

Press the harness release button on the front of the seat while pulling the harness strap outward behind the fastened chest clip.



2. Disconnect chest clip.

Push the release button and pull the chest clip apart.

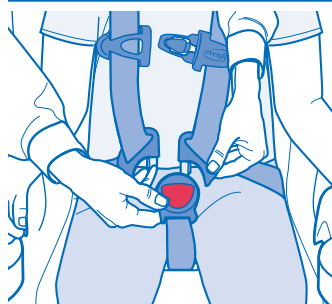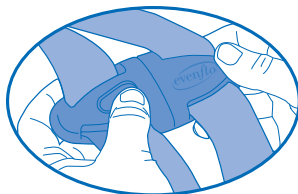


3. Unbuckle harness.

Press the red button on the buckle and release both buckle tongues.


You may now remove the child.

Positioning the Harness Strap

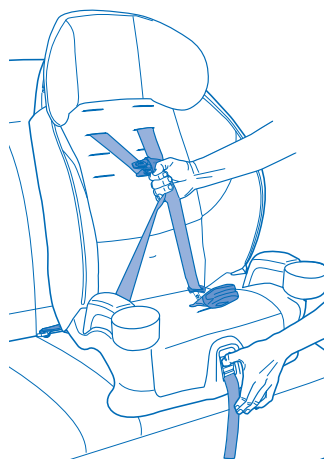


1. Loosen harness straps.

Press the harness release button on the front of the seat while pulling the harness straps.

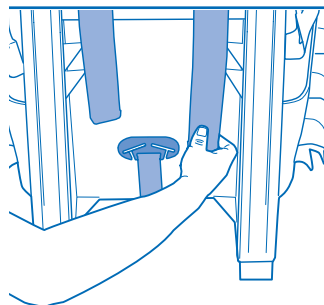

2. Remove both Harness Straps from the Splitter Plate.

Positioning the Harness Strap

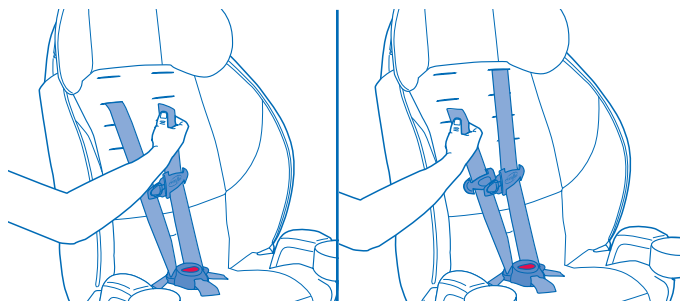


3. Move harness strap.

Remove both harness straps from the slots and feed them into the new slot, as shown. Pull the harness strap to the back of the child restraint.

Note: Straps must be positioned at the child's shoulder level or in the closest position slightly above.


IMPORTANT: When inserting harness straps through the slots in the seat pad, make sure you route them correctly through their corresponding slots in the seat shell.

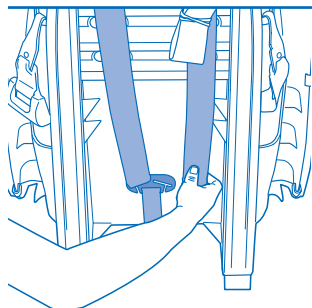

4. Attach Harness Straps to Splitter Plate.


Attach the loop at the end of each harness strap onto the splitter plate.

IMPORTANT: Make sure both harness straps are installed completely on the splitter plate, as shown.

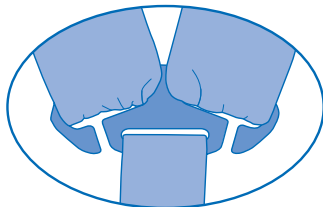

Positioning the Crotch Strap

As your child grows, you will need to change the crotch strap position so that it is in the slot closest to your child. The crotch strap should **ALWAYS** be as close as possible to, but **NEVER** under, the child's bottom.

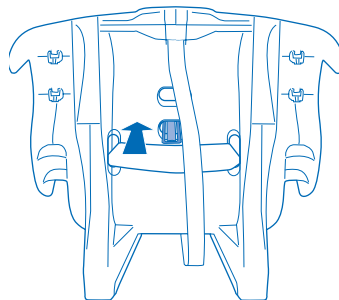

1. Remove Crotch Strap.

Loosen the harness straps and move them out of the way. Push the anchor up through the slot to the top of the seat.



2. Insert Crotch Strap into new slot.

Insert the crotch strap anchor into the slot that is the closest to the child **AND** the most comfortable for the child. Pull the crotch strap to make sure it is secure.

When to Put Your Child in a Booster Seat

Booster seats raise the child up and help to position the vehicle lap and shoulder belt correctly. When the child is **properly restrained** in a booster seat, their risk of injury in all types of crashes is reduced, as the lap and shoulder belt provides excellent restraint of both the upper and lower torsos.

It is important for the child to sit properly within the vehicle seat belts. When the vehicle seat belt is buckled, the lap belt should be low on the hips, just touching the thighs, and the shoulder belt should lie across the middle of the shoulder. If the child leans out or moves the belt behind the back or places it under the arm, **it will not provide the intended restraint.**

There are a number of things to consider when deciding whether the child is ready to sit in a booster seat, including: the weight and height rating on their current child seat, the child's own weight and height, their maturity, and the seating positions available in your vehicle.

How is a booster seat used?


Using a booster seat is very similar to buckling yourself into the vehicle:

- Read the instruction manuals for both the booster seat and the vehicle before you start.
- Put the booster in the back seat in a location with a lap and shoulder belt. **Never use a booster with only a lap belt**, as this could cause serious injuries.
- After the child is in the booster, pull the lap and shoulder belt across him/her and buckle it.
- Check that the shoulder belt lies across the middle of the shoulder and that the lap belt is low on the hips, just touching the thighs.

How can you tell if your child is ready to transition to a booster seat?

You should consider using a booster seat if the following conditions apply:

- The child is mature enough to sit in the booster seat and not put the belts under their arm or behind their back.
- The child is approaching the weight or height limit of the child restraint they are currently using.
- If you have a vehicle that does not have a tether anchor-age but has lap/shoulder belts available in the back seat, a booster seat may provide better protection than an internal harness seat without the tether.

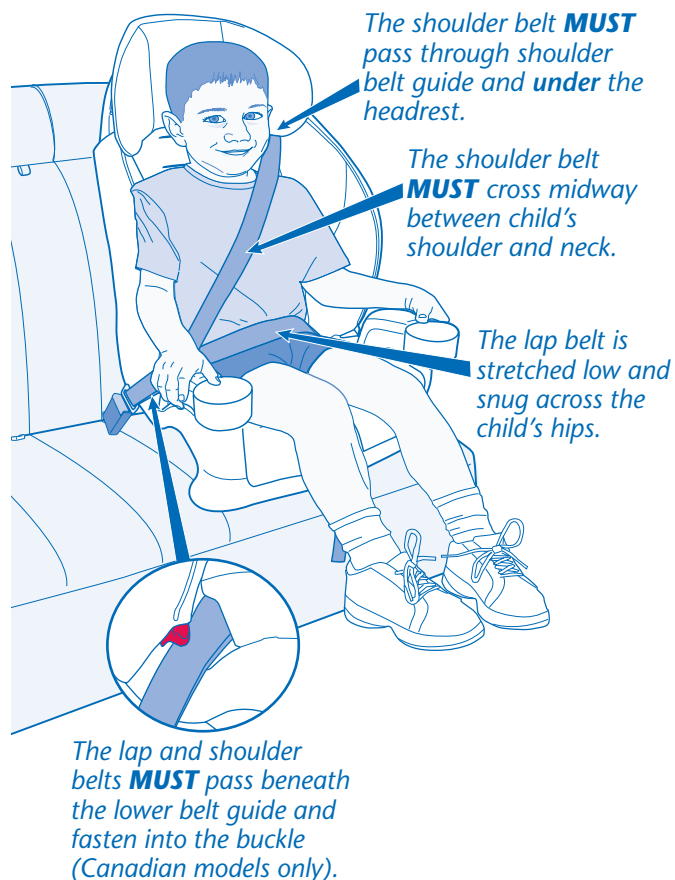



Using as a Booster Seat

Child Requirements

Weight: 18 – 49.8 kg (40 – 110 lbs)

Height: 110 – 145 cm (43.3 – 57 inches)
tall **AND** the tops of the child's ears
are at, or below, the top of the child
restraint headrest.

Age: At least four years old

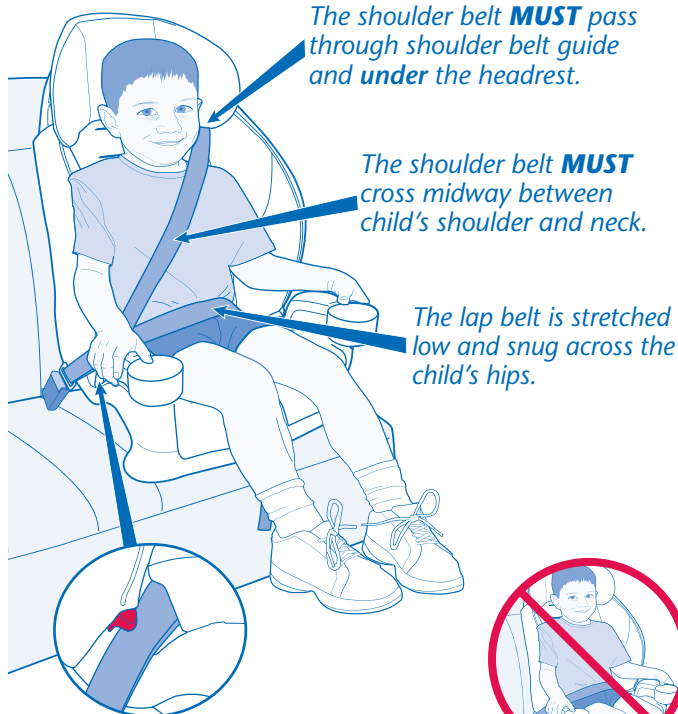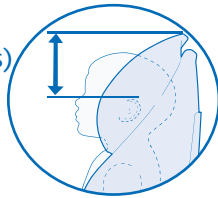

The lap and shoulder
belts **MUST** pass beneath
the lower belt guide and
fasten into the buckle
(Canadian models only).



IMPORTANT

Always secure the booster seat with the LATCH connectors or vehicle seat belt when not occupied. An unsecured booster seat can fly into and injure other occupants in the event of a crash.

Booster Installation Checklist

1. Convert child restraint to booster seat.

See "Converting into a Booster Seat," p. 32.

2. Secure booster seat to the vehicle seat.

- ✓ Make sure the bottom and back of the booster seat are touching vehicle seat and back.
- ✓ Level the booster seat (Canadian models only), p. 36.
- ✓ If your vehicle has LATCH, you may secure the booster seat to the vehicle with the LATCH connectors, p. 17.

3. Place the child in the booster seat.

Make sure the child's back and bottom are flat against the back and bottom surfaces of the booster seat.

4. Secure child and booster seat to vehicle seat.

- ✓ Stretch the lap/shoulder belt across the child and fasten the buckle.
- ✓ Make sure the shoulder belt is threaded through the shoulder belt guide.
- ✓ Make sure the shoulder and lap belts are threaded under the red lap belt guide (Canadian models only).

5. Check your work.

Make sure the lap belt is stretched low and snug across the child's hips, within the belt guides, and fastened into the buckle. The shoulder belt must cross the child midway between his/her shoulder and neck.


⚠ WARNING

- The shoulder belt **MUST NOT** cross the child's neck or fall off the child's shoulder. If you cannot adjust the shoulder belt to properly lay midway between the child's shoulder and neck **AND** at or above the shoulder, try another seating location, or do not use the booster seat.
- **DO NOT** use the locking clip in booster mode.




Tip! To make installation easier, watch the installation video of this booster seat at www.evenflo.com.


Converting into a Booster Seat

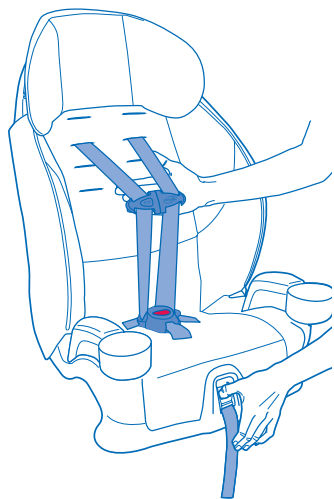

- 1. Loosen harness.**
Press the harness release button while pulling outward on the harness straps, as shown. Disconnect the chest clip.

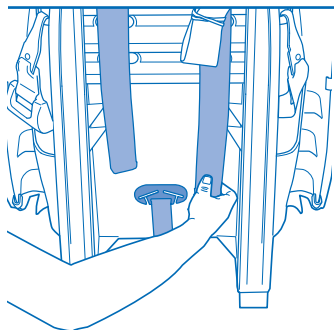


- 2. Remove both Harness Straps from the Splitter Plate and pull them through to the front of the seat.**

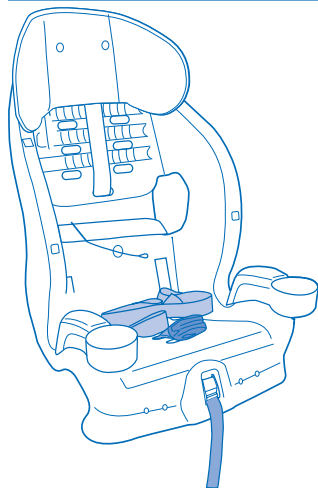


- 3. Disconnect all J-clips and all Retaining Strips, then remove the Seat Pad.**


Converting into a Booster Seat

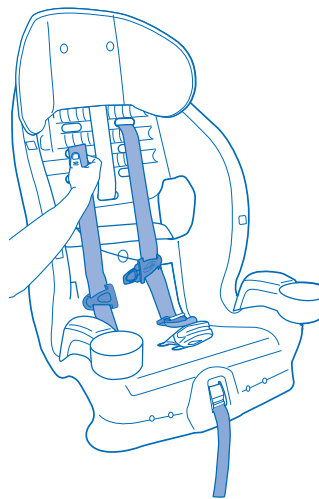


- 4. Route the Harness Straps through Adjustment Slots, then attach to Splitter Plate.**

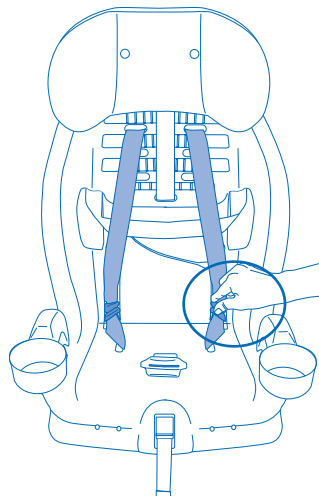

- 5. Tuck the Chest Clip and Buckle Tongues into the recesses on either side of the seat shell.**



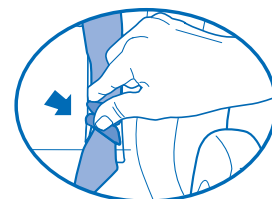


Converting into a Booster Seat

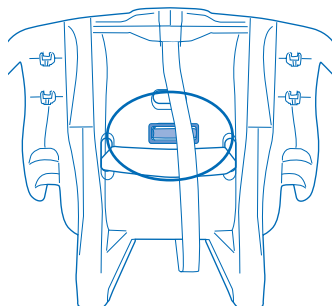


6. Remove the Crotch Strap.

Locate the crotch strap anchor on the bottom. Turn the anchor sideways and push it through the seat shell to remove, as shown.

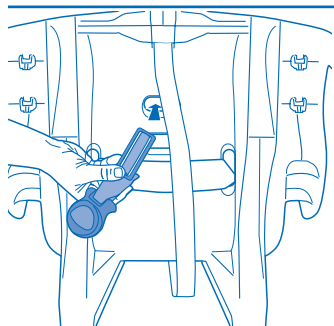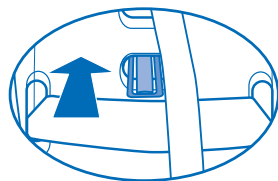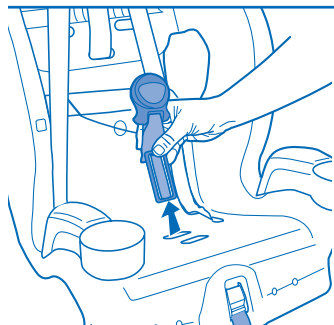


Insert the crotch strap anchor back into the opening **from the bottom of the child restraint**.

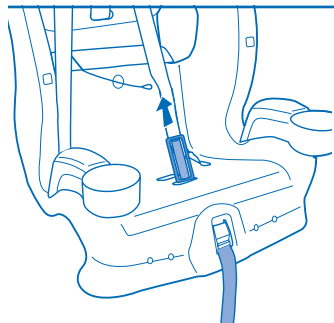

Pull the anchor through the seat and adjust so it lies flat.

Converting into a Booster Seat

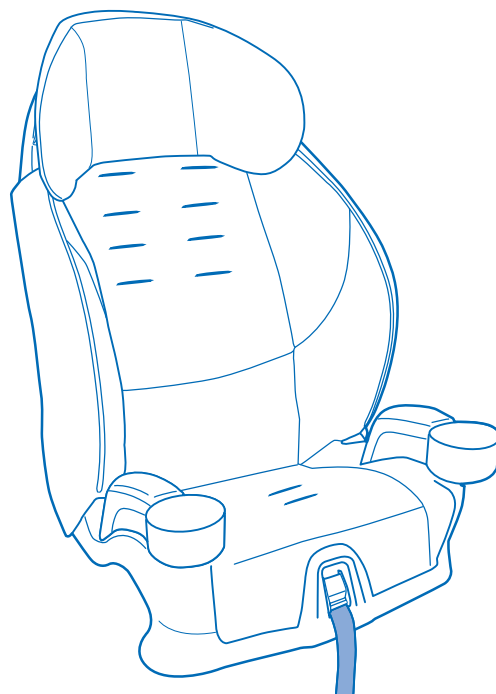


7. Install the Seat Pad.

Your child restraint is now in Booster Mode and ready for a child who weighs 18 – 49.8 kg (40 – 110 lbs), is 110 – 145 cm (43.3 – 57 inches) tall, and is at least four years old. Make sure the tops of their ears are below the top of the child restraint headrest.


General Information

Leveling the Booster Seat


Canadian Models Only

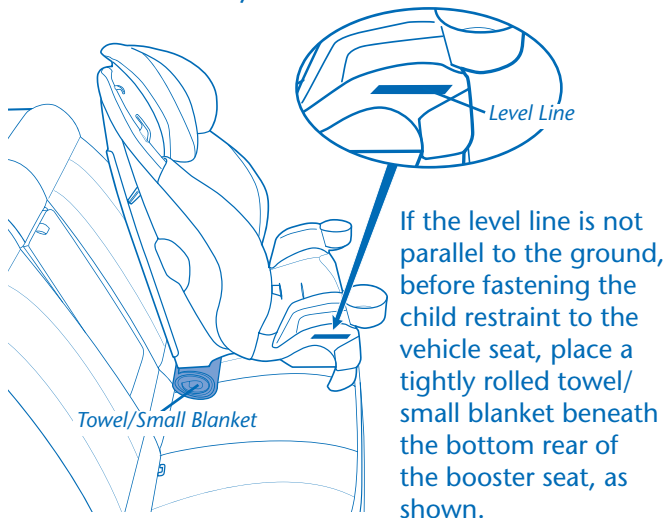

Installing the Cup Holders

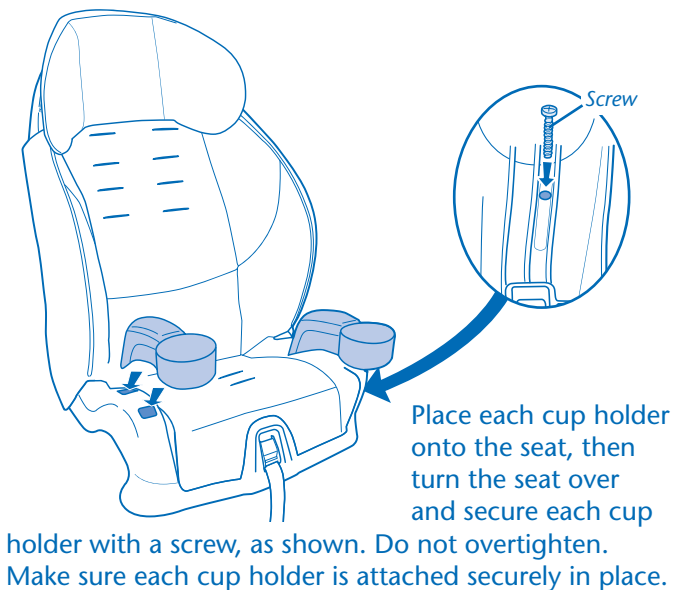

Removing Seat Pad

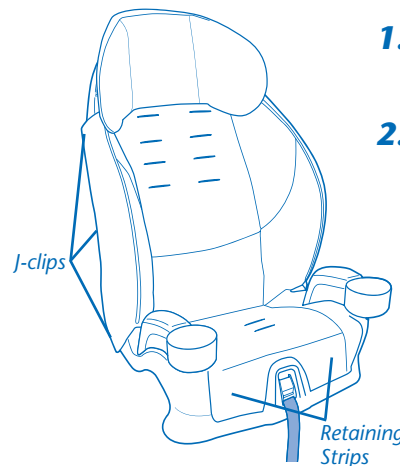


1. Disconnect the harness straps from the splitter plate.
2. Disconnect six J-clips and two retaining strips. Remove the seat pad.

Installing the Locking Clip

To view a video about installing a locking clip, go to www.evenflo.com.

Use the locking clip with:

- Lap/shoulder seat belt combinations that have a buckle tongue that slides freely along the belt without locking into place; **OR**

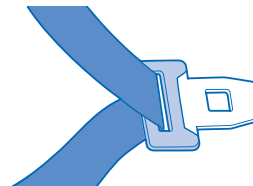

- Seat belts equipped with an emergency locking retractor (ELR). Some ELR vehicle belts can be switched so that they lock when tightened. *It may not be necessary to use a locking clip in these situations.*

Locking Clip




Consult your vehicle owner's manual before installing the locking clip.


⚠ WARNING

- Remove locking clip from vehicle seat belt when not used with a child restraint or the vehicle seat belt will not properly restrain an adult or child. Serious injury could occur.
- **DO NOT** use the locking clip in booster mode.


Installing the Locking Clip

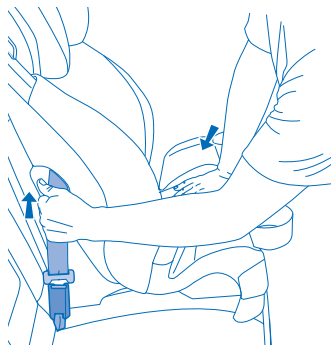

1. Using your full weight, press down on the child restraint as you tighten the seat belt.

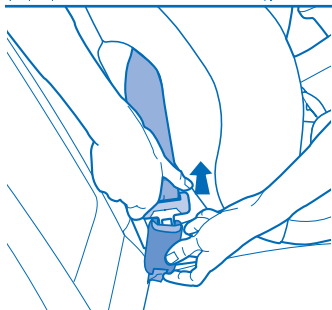


2. Hold the lap/shoulder belts together just behind the free sliding buckle tongue while you unfasten the seat belt.

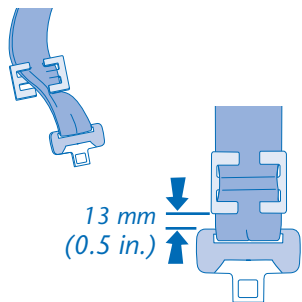

3. While holding the belts and buckle tongue, thread the locking clip onto the seat belt and slide it into place.

Note: Locking clip must be placed within 13 mm (0.5 in.) of seat belt buckle.

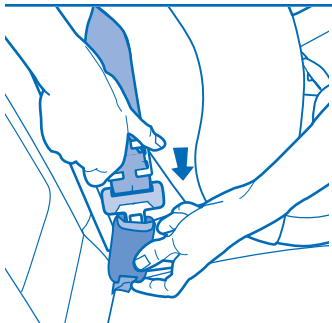

4. Buckle the seat belt with the locking clip in place.

Return to "Installation with Seat Belt," step 6, page 21.


Replacement Parts

Not available on all models.


You can order replacement parts on-line at www.evenflo.com or contact Evenflo. When you contact us, please have the product model number and date of manufacture (found on the back of the child restraint).




Locking Clip




Cup Holder/Armrest

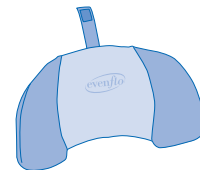


Head Pillow

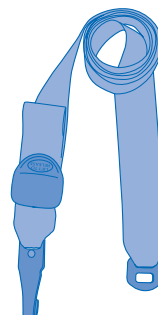

Tether Extender

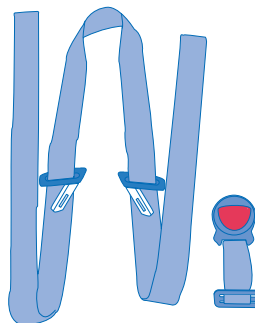


Harness System

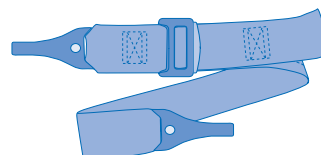

LATCH Harness



Seat Pad

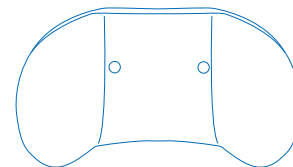

Head Foam

Proper Disposal of this Child Restraint


At the end of this child restraint's useful life, Evenflo encourages you to dispose of it properly. Most of the components in this child restraint are recyclable.

1. Remove all fabric and padding.
2. Remove all screws and disassemble the restraint.
3. Recycle all plastic/foam parts and discard the rest.

If your local recycling center won't accept the padding, you may dispose of it in the landfill.

Note: Evenflo uses recycled materials in the manufacturing process whenever possible but never for components that are critical for safety.

*To prevent injury due to hidden damage, lost instructions, outdated technology, etc., discontinue use of this restraint after date on the Date/Model label (below), **OR** if it has been involved in a crash.*

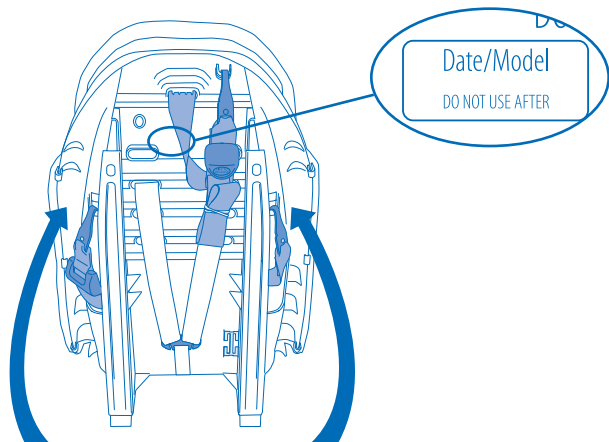

After thoroughly reading and following these instructions, store them in the slots on either side of the child restraint.

Limited Warranty

For a period of 90 days from the original purchase of this Product, Evenflo warrants to the original end user ("Purchaser") this Product (including any accessories) against defects in material or workmanship. Evenflo's sole obligation under this express limited warranty shall be, at Evenflo's option, to repair or replace any Product that is determined to be defective by Evenflo and determined to be covered by this warranty.


Repair or replacement as provided under this warranty is the exclusive remedy of the Purchaser. Proof of purchase in the form of a receipted invoice or bill of sale evidencing that the Product is within the warranty period must be presented to obtain warranty service. This express limited warranty is extended by Evenflo ONLY to the original Purchaser of the Product and is not assignable or transferable to subsequent purchasers or end users of the Product. For warranty service, contact Evenflo's ParentLink Consumer Resource Center.

EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS HEREBY DISCLAIMED. EVENFLO SHALL NOT BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, SPECIAL OR PUNITIVE DAMAGES OF ANY KIND FOR BREACH OF THE EXPRESS LIMITED WARRANTY ON THIS PRODUCT, OR ANY WARRANTY IMPLIED BY OPERATION OF LAW. OTHER THAN THE EXPRESS LIMITED WARRANTY SET FORTH ABOVE, THERE ARE NO OTHER WARRANTIES THAT ACCOMPANY THIS PRODUCT AND ANY ORAL, WRITTEN OR ANY OTHER EXPRESS REPRESENTATION OF ANY KIND IS HEREBY DISCLAIMED.

ParentLink®

answers. advice. affirmation.™

- www.evenflo.com
- **USA:** 1-800-233-5921, 8 AM to 5 PM E.T.
- **Canada:** 1-937-773-3971
- **Mexico:** 01-800-706-12-00

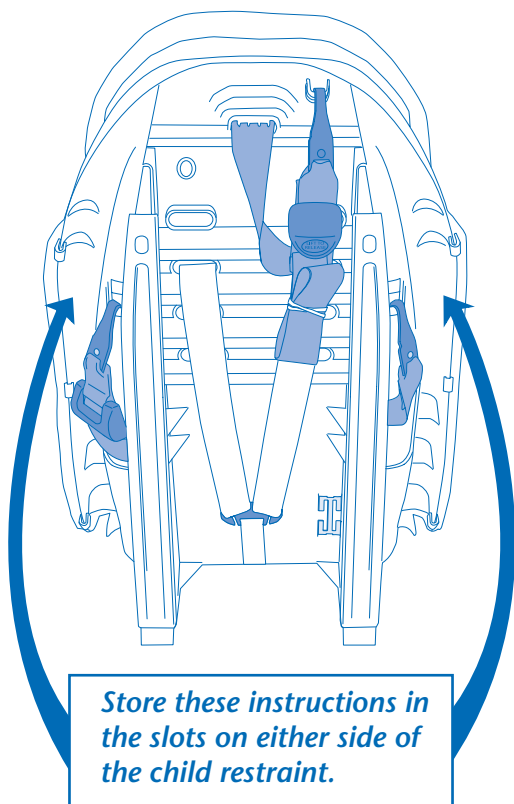

ParentLink®

answers. advice. affirmation.™

- **www.evenflo.com**
- **USA: 1-800-233-5921, 8 AM to 5 PM E.T.**
- **Canada: 1-937-773-3971**
- **Mexico: 01-800-706-12-00**