



SPA·DYNAMIX[®]



REJUVIO[™]
MASSAGE CHAIR



TABLE OF CONTENTS

Important Safeguards	1
Introduction	5
Operating Your Massage Chair	6
Understanding Your Chair	7
Using the Remote Controller	9
Preparation	11
Cleaning and Maintenance/Troubleshooting	13
Warranty and Technical Specifications	15

◆ Important Safeguards ◆

Welcome to your new Spa Dynamix™ Rejuvio™ Massage Chair! Before using, please review the following instructions for safety and the best operating experience. Throughout this guide, we'll use several symbols that contain important information. To reduce risk of personal injury, fire, and shock, please review all these items carefully. Save this booklet for future use and reference.



If you see this symbol, the following language will describe risk of death or serious bodily injury



This denotes that something may cause bodily injury and/or property damage.



This represents prohibited actions that might affect your chair's safe operation.



If you notice this symbol, the language that follows will prohibit disassembly of parts.



This indicates important information regarding your chair's effective functioning.



This icon represents safe and effective use of the chair's electrical components.



The chair is not waterproof, avoid contact with any liquids



This symbol denotes any fire or environmental hazards.



WARNING



The following individuals should not use the Spa Dynamix™ Rejuvio™ Massage Chair

- Those with a history of blood clots or thromboembolism
- People with infectious skin diseases or lesions
- Young children under the age of 12
- Those under the influence of alcohol or drugs
- Never use your chair while wet or operate the remote controller with wet hands
- Those with any medical concerns or issues must check with their healthcare professional prior to using the chair.



Additionally, the following people should consult a physician or medical provider before using this massage chair

- Patients with implantable medical devices that might be affected by electromagnetic activity (i.e. pacemakers)
- Pregnant women
- Patients with diabetes or any peripheral neurological damage
- Those with fractures or muscle injuries
- Anyone suffering from a serious illness or physical weakness
- Paralyzed or disabled individuals
- People who experience routine dizziness or vertigo
- Those with scarring over the massage area



Accident and Injury Warnings

- Your massage chair is intended for indoor use only.
- To prevent injury, only use your chair on a flat surface.
- Do not wear loose clothing or dangling jewelry while using this chair.
- Do not allow children or pets in proximity to the chair while it's in operation.
- Discourage children from playing on armrests, even while not in use.
- Discontinue use and consult a physician if you experience vertigo or any changes in perception during use.
- Monitor all users closely, especially if they are not independently mobile. Children over the age of 12 may use the chair under close adult supervision.
- Do not allow children to play with the remote controller.
- Do not put hands or feet into the gaps between the cushion and chair frame.
- Avoid massaging head or belly.
- Do not use on bare skin.
- If leather material on the chair sustains damage, discontinue use, consult a qualified repair professional, or email support at service@SpaDynamix.com.
- Check the power switch before plugging your chair into an outlet. It should be in the "OFF" position before unplugging or plugging in.
- Turn OFF all chair controls before unplugging your chair.
- Do not stand on the chair during operation or while in the "OFF" position.
- Never move the chair while in operation. To move, find help and pick up the chair before moving it to a new location. Do not drag it, which could cause damage to the floor and your property.

- Ensure the chair is fully plugged into an appropriate outlet before turning into the "ON" position.
- To prevent skin injury, do not use the chair on bare skin or while wearing sheer fabrics.
- Never fall asleep while using this chair, or allow a sleeping person to use your massage chair.



Fire and Shock Warnings

- When not in use or extended periods, turn OFF and unplug chair from outlet.
- Only plug your chair into an appropriate outlet during use.
- Never leave a chair partially plugged in.
- Never use this chair with an electric heating blanket.
- Always use in a well-ventilated area devoid of flammable materials.
- Keep your massage chair and remote dry at all times. In case of water damage, contact service@SpaDynamix.com.
- Never use a plug adapter.
- When cleaning your chair, make sure it's unplugged and in the "OFF" position.
- Do not plug this chair into a power strip.
- Discontinue use if you notice a poor electrical contact or broken power cord.
- Only use in an outlet with the recommended voltage.
- Never use if a power cord is damaged, twisted, or constricted.
- To avoid overheating and injury from excessive use, do not run for long periods of time (more than one consecutive session). If you notice signs of overheating, such as a burning smell or the chair becomes hot to the touch, discontinue use immediately and contact support.



Disassembly and Maintenance

- Do not attempt repairs of a damaged power cord or plug. Contact us at service@SpaDynamix.com for a replacement.
- Do not remove chair parts for any reason, there are no user-serviceable parts inside.
- Contact a repair professional if you experience issues with your chair. Don't attempt maintenance.



Avoiding Damage to Your Chair:

- This chair is for indoor use only. Never use outdoors.
- Keep chair away from excessive heat sources.
- Avoid placing chair near stove or other heated objects.
- Never clean with corrosive chemicals.

FCC Statement

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

◆ Introduction ◆

Welcome to your new Spa Dynamix® Rejuvio™ Massage Recliner! You now have your own very own personal massage therapist in the comfort and convenience of your own home.

Your Rejuvio™ has the following features

- 3 different massage cycles: Stretch, Fatigue Relief, and Relax.
- 3 different shiatsu massage modes: Kneading, tapping, and kneading/tapping.
- S-track roller system.
- Adjustable reclining seat with built-in leg rest.
- Vibration massagers on the seat and leg rest.



As you begin to familiarize yourself with your massage chair, keep in mind

- The image of your chair is a guide, not an exact replica of the chair. Always refer to your own model as you follow these instructions.
- Store this instruction manual in a convenient place for future reference.
- Please read all warnings, cautions, and prohibited actions before using this chair.

Spa Dynamix® reserves the right to change the design specifications of the Rejuvio™ without notice.

◆ Operating Your Massage Chair ◆

Please read all the following instructions to ensure safe and effective operation of your Rejuvio™ massage chair.

Turning On Your Chair:

1. Insert the power cord into an approved socket.
2. Ensure the power switch is in the “ON” position (located on the lower right side of the chair.)
3. Use the ON/OFF button located at the top of the remote controller to begin operation and cycle through available programs.

Starting and Ending a Massage Session:

1. To begin a massage session, use the remote controller to navigate to your desired settings, vibration, and speed. Learn more about these options in the Remote Controller Usage Guide.
2. When a massage session ends, the chair will automatically turn off.

Warnings and Attention About Operation

- If you notice damage to the synthetic surface, please discontinue use and contact service@SpaDynamix.com.
- To reduce risk of injury, only use in a socket with approved voltage.
- Do not stand while using this massage chair. If you want to stand, turn the massage program “OFF” using your remote controller.
- Before using your massage chair, ensure there are no personal belongings trapped between the gaps of the arm rests, leg rests, and seat frame.

◆ Understanding Your Chair ◆


Take the time to review the graphics available below and familiarize yourself with the distinctive parts of your new massage recliner. As soon as you unbox your chair, use the components listing to verify that you have all necessary parts. Contact Spa Dynamix® at service@SpaDynamix.com if you are missing any pieces.




Roller Massage Area
(Along the Backrest)



Vibration Massage Areas
(Seat and Leg Rest)

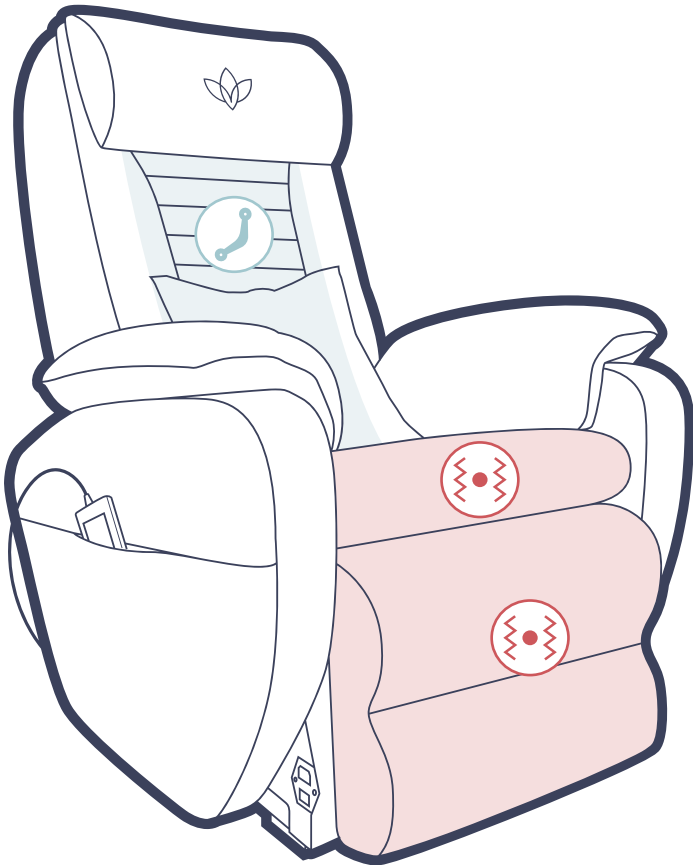


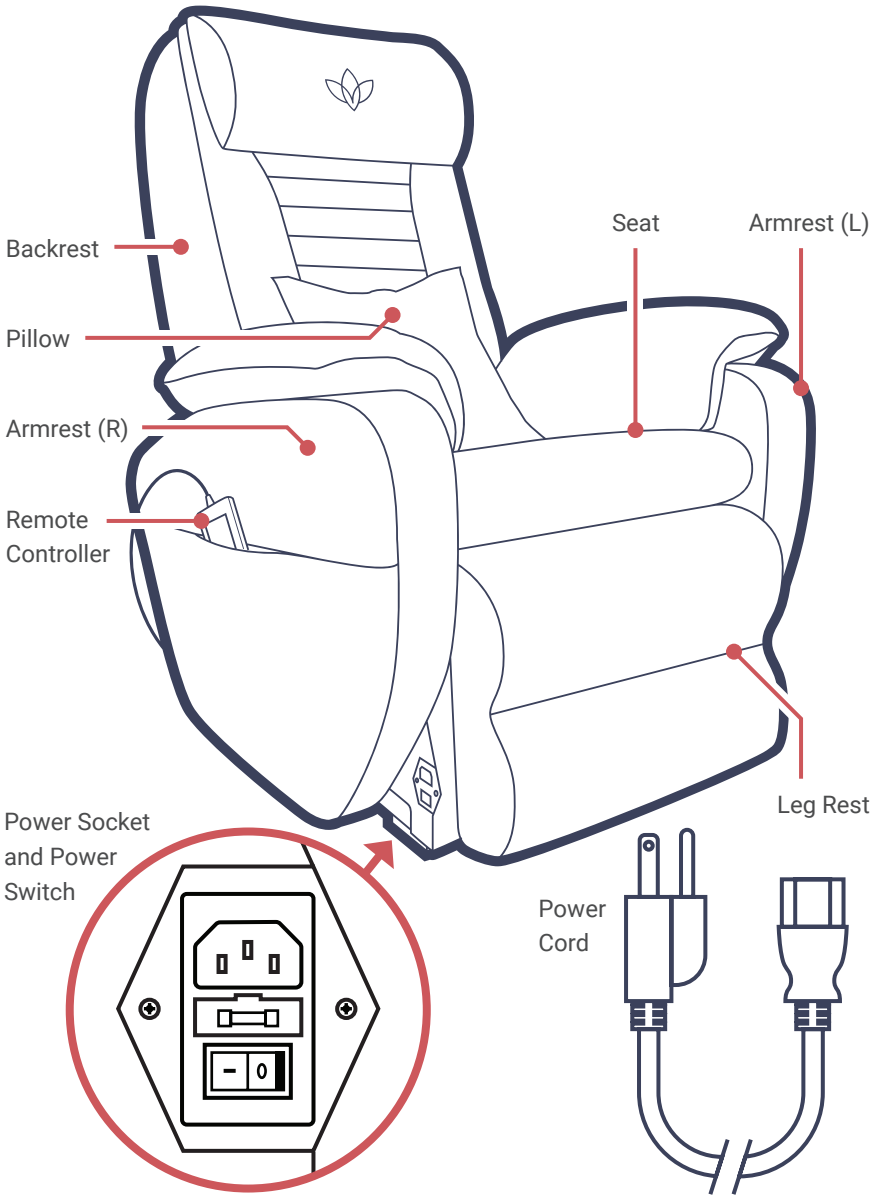

◆ Using the Remote Controller ◆

Special Notes

1. To ensure effective operation, do not press two or more keys at the same time.
2. Seat yourself comfortably in the chair before turning on or selecting any massage program.
3. Do not spill liquids onto the remote controller. If the remote controller encounters liquids, please turn the chair off using the switch on the lower right side of the chair and unplug immediately.
4. To prevent malfunction, do not place heavy objects in the chair or allow children to play in it.

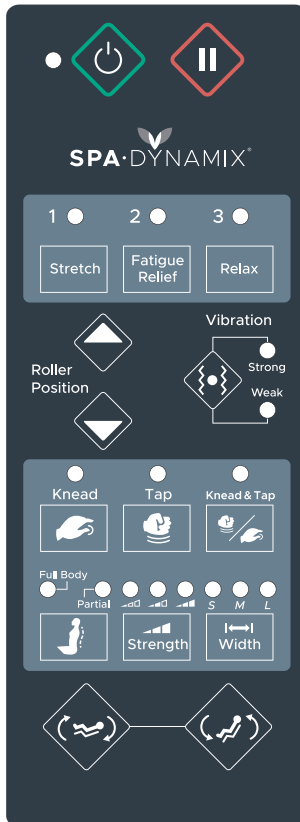



ON/OFF: Toggles power on and off, returning the rollers back to their initial position.



Stop/Pause: Pauses your massage cycle, ceasing all massage chair functions at once.



Massage Cycle Selection: Toggle between 3 different massage cycles: Stretch, Fatigue Relief, and Relax.



Roller Position Adjustment: Manually adjusts the rollers to target specific areas on the backrest.




Seat Vibration: Toggle between high and low seat vibration level.



Massage Mode Settings: Toggle between 3 different shiatsu massage modes: Kneading, tapping, and kneading/tapping.



Massage Adjustment: Adjust the location of your massage, the strength of the massage, and the width of the massage rollers on the backrest



Adjustable Recline: Adjust the angle of recline.

◆ Adjusting Your Rejuvio™ ◆



CAUTION



Do not place your chair near any areas that may suffer from moisture or wetness.



Avoid placing your chair in direct sunlight or near heating appliances.




Always place your chair on an even and supported surface to avoid accidents and injuries.

Placing Your Massage Chair

What to Do Before Using Your Chair:

- Check the clearance by fully extending your chair in all directions. Make sure there are no obstacles in your way such as pets, children or side tables.
- Monitor the power plug and source. Clean the plug and cord routinely to avoid dust buildup. Make sure the plug rests comfortably and protected between the power source and the chair. The cord should never sit under a heavy object or appear to have kinks, stretching or knots.
- Place the chair away from walls. The chair should sit out at least 20 inches from the wall starting from the backrest and at least 20 inches from the front of the leg rest.

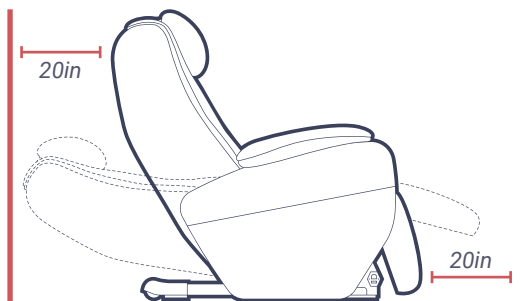

Distance from Wall (Front and Back)



Do not move your chair when the power is ON or the chair is plugged in. Never allow the chair to fall down to the floor on the backrest, as this may result in damage


Tips for moving your massage chair

Moving Your Chair to the Right Place Easily and Successfully

- Wrap and place all cables in the seat of your chair to keep them out of the way and free from damage.
- Do not slide the chair on its base, it may damage your floor. Instead lift the chair onto its rear wheels and/or ask someone to help you.
- Keep the power off and the plug/power cord away from the floor until you are ready to plug the chair back into an outlet. Leave the chair standing in a safe position to prevent the back from falling to the floor.


Moving With 1 Person

Lift the chair from the leg rest and move using the rear wheels.

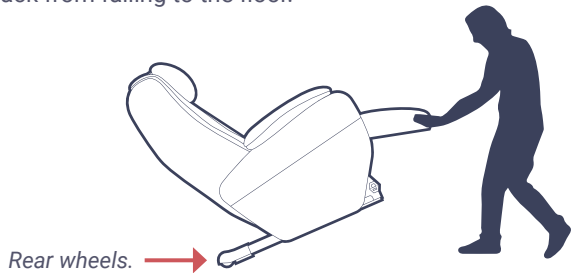

Moving With 2 People

One person lifts by holding the leg rest while the other person lifts while holding the fully-reclined backrest.

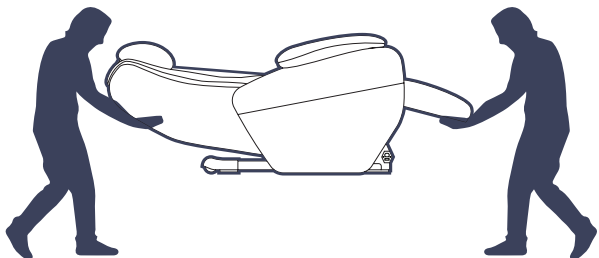

◆ Cleaning and Maintenance ◆

Cleaning Your Massage Chair

Your massage chair contains synthetic, plastic, and metal components. Routine cleaning with a dry microfiber cloth can help your massage chair look clean and shiny.

Only use a dry cloth to clean the product's remote controller.

Cleaning the Synthetic Surfaces:

Your Rejuvio™ has synthetic upholstery. You can clean these surfaces with a damp cloth and neutral detergent if necessary.

Special Notes:

- Before cleaning your massage chair, confirm that your chair is in the "OFF" position and unplug from the wall socket.
- Never use a damp cloth to clean the remote controller.
- Keep your chair away from heat, fire, or exposure to direct sunlight.
- Never clean your chair with organic solvent or bleach. Only use a neutral detergent solution on the components of the Rejuvio™.
- Never submerge your chair in water or saturate it with liquid. This poses a risk of electrocution or fire.

◆ Troubleshooting ◆

The Problem: My massage chair isn't operating when I select a program.

Possible solutions

- Ensure the chair is fully plugged in.
- Check to make sure the power switch is in the "ON" position on the back of the chair.
- Choose a mode on the remote controller.
- The problem lies within an inner circuit. Contact a professional electrician or email service@SpaDynamix.com.

The Problem: My massage chair makes a lot of noise during operation.

Possible solution: You are likely hearing the noise from the motor and other mechanical parts. Some noise is normal.

The Problem: The sound within the chair became much louder.

Possible solutions: You may have been using the chair continuously for too long. Turn off the chair for at least 30 minutes, then check to see if you still notice the difference.

With consistent use, the internal parts of your chair can wear over time. This is normal. Contact an authorized maintenance professional for repairs.

The Problem: My massage stopped unexpectedly during a session.

Possible solutions:

- The massage cycle may have ended.
- You may have been using your chair for too long. Wait 30 minutes before selecting another cycle.
- There is a mechanical problem. Contact service@SpaDynamix.com for further assistance.

The Problem: I cannot use the backrest or leg rest as intended.

Possible solutions: Check the surrounding area for clearance and other obstacles.

The Problem: I cannot get my chair to return to a default position.

Possible solutions: This may occur when you use the chair continuously for too long or when the massage period ends. Wait 30 minutes and try again. If the problem persists, contact an authorized maintenance professional for repairs.

The Problem: The electrical wire is hot to the touch.

This may occur from overuse. Allow your chair to rest for 30 minutes and try again.

**Caution**

If you notice any signs of overheating, turn off your unit and unplug immediately. Contact an authorized maintenance professional for more information.

This troubleshooting guide provides examples of common issues but is not a comprehensive resource. Should you experience issues with your chair, discontinue use and contact Spa Dynamix™ at 888-243-5772 or service@SpaDynamix.com.

NOTE:

- For repairs, please contact the distributor or after sales service. For more information, refer to your enclosed warranty card.
- Any questions directed to customer service may be recorded for training purposes.
- The instructions of specifications of this product may change without notice.
- Should your chair need repair, customer service can help you find a qualified repair center.

Warranty and Technical Specifications

TWO (2) YEAR LIMITED WARRANTY

Spa Dynamix™ warrants this Spa Dynamix™ Rejuvio™ Massage Chair against defects in materials and/or workmanship under normal use for a period of TWO (2) YEARS from the date of purchase by the original purchaser ("Warranty Period"). Normal use is defined as use by an end-user in a residential location. If a defect arises and a valid claim is received within the Warranty Period, at its option, Spa Dynamix™ will either 1) repair the defect at no charge, using new or refurbished replacement parts, or 2) replace the Spa Dynamix™ Massage Chair with a new or refurbished Spa Dynamix™ Massage Chair OR 3) provide a credit in the amount of the purchase price of the original product. A replacement product or part, including a user-installable part installed in accordance with instructions provided by Spa Dynamix™, will be covered for the remaining warranty period of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Spa Dynamix™ property. When a credit is given, the original product must be returned to Spa Dynamix™ and becomes Spa Dynamix™ property.

Obtaining Service: To obtain warranty service, call the Spa Dynamix™ Warranty Service at 888-243-5772 or contact the company via email at service@SpaDynamix.com. Please be prepared to describe the Spa Dynamix™ Massage Chair model that needs service and the nature of the problem. Proof of purchase is required. All repairs and replacements must be authorized in advance. Service options, parts availability and response times will vary.

Limits and Exclusions: Coverage under this Warranty is limited to the United States of America, excluding the U.S. Territories of Guam, Puerto Rico, and the U.S. Virgin Islands and including Canada. This Warranty applies only to products manufactured by Spa Dynamix™ that can be identified by the "Spa Dynamix™" trademark, trade name, or logo affixed to them or their packaging. The Warranty does not apply to any non-Spa Dynamix™ products. Spa Dynamix™, in so far as permitted by law, provides these products "as is." This warranty does not apply to: a) damage caused by failure to follow instructions relating to product's use or the installation of components; b) damage caused by accident, abuse, misuse, fire, floods, earthquake or other external causes; c) damage caused by service performed by anyone who is not a representative of Spa Dynamix™; d) accessories used in conjunction with a covered product; e) a product or part that has been modified to alter functionality or capability; f) items intended to be periodically replaced by the purchaser during the normal life of the product including, without limitation, batteries or light bulbs; g) any product sold "as is" including, without limitation, floor demonstration models and refurbished items; or h) a product that is used commercially or for a commercial purpose.

SPA DYNAMIX™ SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL

DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, SPA DYNAMIX™ DISCLAIMS ANY AND ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS. IF SPA DYNAMIX™ CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY. Some states disallow the exclusion or limitation of incidental or consequential damages or how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Technical Specifications

Name:	Rejuvio™ Massage Recliner
Rated Voltage:	AC 120V - 50Hz
Power:	105w
Rated Time:	15 minutes
Weight:	Approx. 110 lbs
Chair Size (L×W×H):	40 × 28 × 42.5 in (61 × 28 × 23.6 in Reclined)
Packing Size (L×W×H):	61.8 × 29.5 × 25 in
Kneading Speed:	Approx. 11 to 30 times per minute (3 levels)
Tapping/Knocking Speed:	Approx. 280 to 490 times per minute (3 levels)
Roller Speed:	33 second cycle (approx 1 in/sec)
Reclining Angle:	Approx. 115° – 160° against flat ground
Outer Material Cover:	Artificial Leather
Recommended User Weight:	220 lbs



TRUCORE DISTRIBUTORS, INC.

LOCATION 252 Indian Head Rd. Kings Park, NY 11754

TEL (888) 243-5772

E-MAIL service@SpaDynamix.com

WEBSITE www.SpaDynamix.com

REJUVIO-US 1.0