

FOR 800 SERIES BARCODE SCANNERS

## DURACASE - USER GUIDE

Follow these instructions for connecting the Socket Mobile 800 Series barcode scanner and the Apple® iPod 5<sup>th</sup>/6<sup>th</sup> generation into the DuraCase.

### PACKAGE CONTENTS



DuraCase  
for iPod touch 5<sup>th</sup>/6<sup>th</sup> Generation



Charging Dock



USB Cable

### STEP 1: INSERT THE SOCKET MOBILE SCANNER



A) Place Socket Mobile Scanner upside down. Bend the DuraCase slightly to align the USB connector.



B) Bend the flexible bottom of the DuraCase slightly to align the scanner with the USB connector.



C) Snap barcode scanner into the DuraCase.

**Caution\***


*\*Slide the connectors in or slide off.*

*DO NOT PULL the iPod or barcode scanner forward.*

## STEP 2: INSERT THE APPLE® IPOD TOUCH



A) Insert Apple iPod into DuraCase.

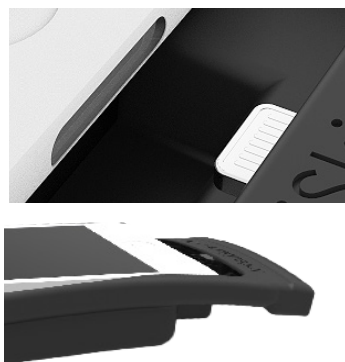

B) Hold the DuraCase with one hand bending the flexible bottom of case, and with other hand, align lightning connector into iPod.



C) Connect lightning connector into iPod, securing into the DuraCase.



D) Press top corners of iPod into DuraCase.

\*Make sure lightning connector is secure in iPod touch.

## STEP 3: CHARGE YOUR DEVICES



A) Connect charging cable into the charging dock and plug into a power supply. Place DuraCase onto the charging dock.



To remove DuraScan from the charging dock, tilt the DuraScan forward, then sideways to break strong magnetic pull.

### **Caution\***

\*Never pull the DuraScan straight up from the charging dock

Now you are ready to use your devices.



Warranty: 1 Year Limited Warranty

6430-00368A

sales@socketmobile.com

UK/Ireland/South Africa: +44 7787 112109

France: +33 970 462 241

Technical Support:

Send us a support ticket at [support.socketmobile.com](http://support.socketmobile.com) or call us at 1 800 279 1390 between the hours of 7:00 AM- 7:00 PM PST.

Toll-Free: +1 800 552 3300 (USA/Canada)

Switzerland: +41 62 834 07 80

Germany: +49 9401 5299 052

EMEA & Russia: +41 62 834 0780

Asia Pacific: +1 510 933 3122

Latin America: +1 510 933 3153