


 nuband-i

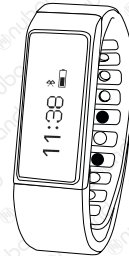

NUBAND-i APP



Model: NU-G0018

[www.nutechdesign.com](http://www.nutechdesign.com)

## FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## COMPATIBILITY

The Nuband-i smart wristband only supports the following selected mobile devices:

**iOS version (iOS 8.0 upwards):** iPhone 5 onwards, iPod touch 5th Gen onwards, iPad mini 2 onwards, iPad Air onward

**Android Phones (Android 4.4 upwards):** Samsung Galaxy S4 onwards, Samsung Note 3 onwards or other smartphone

Time: 00:00

Calories: 

Move Alert: 


Bluetooth: 

Phone Finding: 

Steps: 

Alarm clock: 

Call ID Display: 

Remote camera controller: 

Distance: 

Sleep monitor: 

Message notification: 

Bluetooth broadcast: 

## QUICK START GUIDE

1. You should charge your Nuband for 1-2 hours prior to use. Remove module as diagram shown below and plug into USB charge socket in either a computer or a USB plug.



**2. Install free APP:** Go to App store or play store, download this APP: "Nuband i" and install it. To use Nuband i APP, make sure your mobile device connected with internet via Wi-Fi or 3G/4G.


**3. Account set-up:** Open the "Nuband i" App. Setting your personal information to start.

**4. Bracelet Operation Instruction.**

You can use the bracelet by "wrist gesture" or "touch screen".

It is convenient to check the time by "wrist gesture".

You need to turn on "Palming gestures" on the Nuband-i App under setting screen.


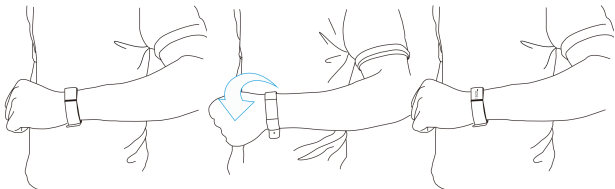







Keep the bracelet screen horizontally.

Then turn wrist over.

The bracelet will be turned on automatically and the time shows up.


## "Touch Screen"

Function	Operation
Starting-up	 Hold finger on the screen. 0000 a code will then appear. This is your Nuband-i code Note and use when binding device
Light up the screen	 Touch the screen or turn the wrist over
Shutdown	Swipe left and right to the interface  swipe up or down swith to  Long press the screen to turn off the device
Switch function	 Swipe left and right
Flip-Over	 Touch the screen
Confirm	 Hold finger on the screen


PS: Function may be changed and upgraded according to the bracelet firmware's update.

### 5. Pairing.


Keep your phone with Bluetooth and WIFI "on" for this step. Keep the screen lit and your nuband- i will show an icon of a radar.




Login the App Nuband i, and the system shows the main page. Tap the left corner button or slide the screen from left to right, and click [ Device Connection ]

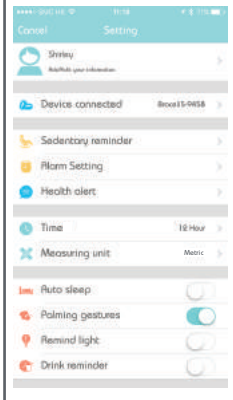


Double click the screen of the Nuband ,the radar icon " shows up on the screen ,Tap the button [ Searching device ] on APP,select your right ID from the device list, and wait for 1-2 seconds

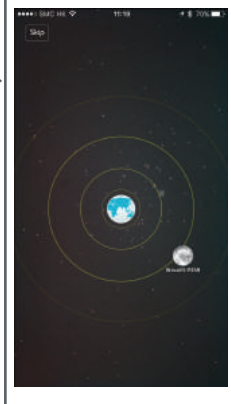


Android device will pop up [Confirm pair with "right ID"] , and it will be connected.

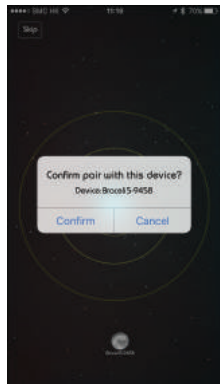

IOS device will pop up [Pair Device Success] , [Bluetooth Pairing Request] , click "pair", and finish pairing.

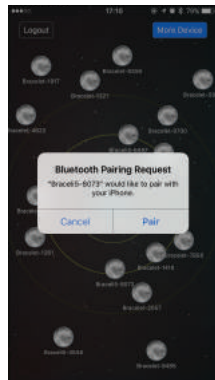

If the pairing pop-up does not appear within 1 minute, repeat the above steps. There would be a Bluetooth icon  instead of the Radar icon .





## 6.SYNC Data


The bracelet will SYNC data automatically after being connected with phone by APP(Nuband i), the bracelet time will be calibrated to the same time as the phone. SYNC data includes: steps, calorie, distance. You can check out if the data SYNC is completed successfully on the APP. First SYNC data takes 1-2 minutes. SYNC data can be done manually by clicking the refresh button on APP.

If unable to sync, disconnect Bluetooth and start process again until successful.

## 7.Sleep monitor

Turn on Sleep Mode : Slide to the moon icon  , hold finger on screen until icon shows and bands buzzes, then it will pop up and show time along with the moon icon,  , This means sleep mode is now active.

Exit the sleep mode : press the screen to light up display, hold finger on screen until till it shakes, then the moon icon will disappear. Now display is back to the original that shows time ,

 this means that awake mode is now active.




## 8.Auto sleeping mode

Turn on the sleeping-mode by setting,  , the band will check if you are in sleeping-mode during 8:00p.m.-9:00a.m.

## 9.Searching for mobile phone

Hold finger on the searching for phone icon  until in shakes, the searching mobile will ring if it is under ringing mode, will shakes one time if it under vibration mode.

## 10.Sedentary reminder




Open the Sedentary reminder  and settle the time quantum by the Sedentary reminder setting. The time settling should be a valid time quantum, like 9:00-17:00 instead of 9:00-5:00, then it under Sedentary reminder mode successfully.  The band will shake and show sedentary icon  if kept motionless for an hour.



### 11. Alarm clock

Add alarm  by the Alarm setting  , when it comes to the programmed time,  , the band will shake to as a reminder and show alarm icon .


### 12. Camera remote controller

Open the camera by APP  the band will show camera icon   , Camera remote controller realized by long pressing the icon.

### 13. Calling and message reminder

Check the push reminders and open all the notification items, for Android. Illustrated below in (13-1), when you are going to open the Message Notify.

If it is unable to get notifications when the band is connected with mobile phone, disconnect the Nuband from your mobile phone and shut down the notification function, then re-open it up. (This is available in Android Apps only)

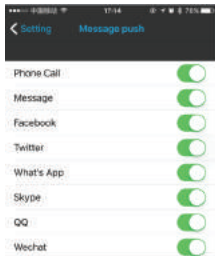

(13-1)

#### 14. OTA Upgrade

Attention: the phone screen must be kept lit when using this function and band connected, the APK, APP can't be hidden in the backstage.

When a new bracelets firmware is uploaded to the server, there will be an upgrade reminder in APP, APK, take the following steps:(14-1 to 14-6)



(14-1)



(14-2)



(14-3)



(14-4)



(14-5)




(14-6)

Two situations will exist while updating:


**Situation 1:**

Wait for a moment during time:

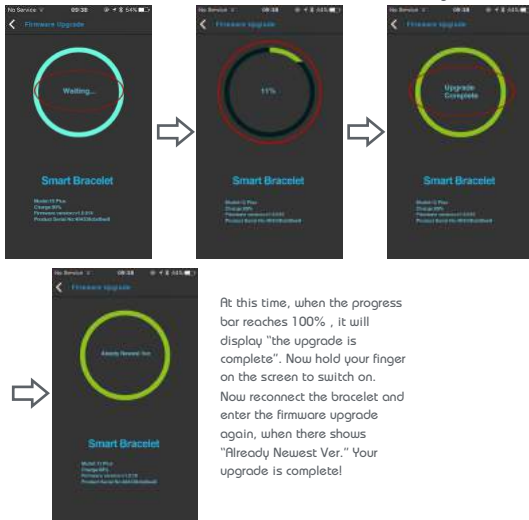

At this time, when the progress bar reaches 100% , it will display "the upgrade is complete". Now hold your finger on the screen to switch on. Now reconnect the bracelet and enter the firmware upgrade again, when there shows "Already Newest Ver." Your upgrade is complete!

## Situation 2:

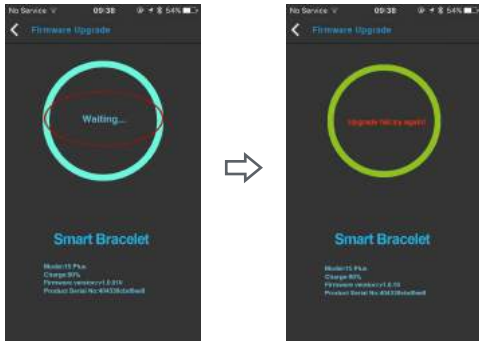

Wait for a moment, there may be a chance for this situation:

At this time, upgrade again. If there is no response, reconnect the bracelet and repeat the upgrade steps! When the situation 1 occurs your upgrade will be complete!

## Nuband-i + 12 month Warranty

Nuband prides ourselves in the quality of our products but every now and then there may be a bump in the road. We therefore guarantee our products for 12 months (1 year) against defects in materials and workmanship under normal use.

If a hardware defect occurs within the warranty period of 12 months Nuband will either replace defective part or provide a replacement product, providing proof of purchase is sent with the item.

A replacement product or part assumes the remaining warranty of the original product or 12 months from the date of replacement or repair, whichever is longer.

When a product is exchanged or part of product is exchanged, any replacement becomes your property and replaced item becomes Nuband's property.

Parts provided by Nuband in fulfilment of this warranty obligation must be used in products for which warranty services is claimed.

When returning product under warranty, item must be returned along with original packaging and retailer receipt. Without the receipt, the warranty will be considered invalid.

It is your responsibility to back any data up. If in repair or replacement, your data is lost Nuband claim no responsibility for this.

Nuband is not responsible for product failure caused by non-compliance with product instructions.

The warranty does not cover the cost of returning the product, this must be borne by the customer.

No Nuband reseller, agent or employee is authorized to make any modification, extension or addition to this limited warranty. If any term is held to be illegal, or unenforceable, the legality or enforceability of the remaining terms shall not be affected or impaired.

## Nuband-i + Product Disclaimer

Nuband is a device developed to assist monitoring aspects of your health but should never replace the professional advice of your Doctor or Physician.

Nuband are not a licensed medical conditions or any kind, or determining the effect of any specific exercise on a medical condition.

We strongly recommend that you should consult a Doctor or Physician before partaking in any type of physical exercise fitness plan or diet.

## Returns

If your Nuband should ever need to be replaced under warranty, send an \$8.00 check or money order payable to AJLE 4 LLC to cover costs of postage, and handling. Please send it to the following address:

**AJLE 4LLC**  
**ATTN: Customer Service**  
**PO Box 2077**  
**Cedar Park, TX 78630**  
**USA**  
**E-mail: [cservice@ajle4.com](mailto:cservice@ajle4.com)**

Because of possible loss, we recommend insuring your Nuband, return receipt requested, when using the mail. If you do not obtain the proper receipt within a reasonable time, start a tracer through the originating post office. Please allow 2 to 3 weeks from the date we receive your package for your replacement Nuband to arrive.

iPhone®, iPod®, iPad®, iPad Mini®, iPad Air®, iOS®, Retina display®, Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries.

App Store is a service mark of Apple Inc.

Android and Google Play are trademarks of Google Inc.

Samsung Galaxy S® and Samsung Galaxy Note® are trademarks of Samsung in the United States and other countries.

All other trademarks are property of their respective owners.

2016 (UK) V1

