
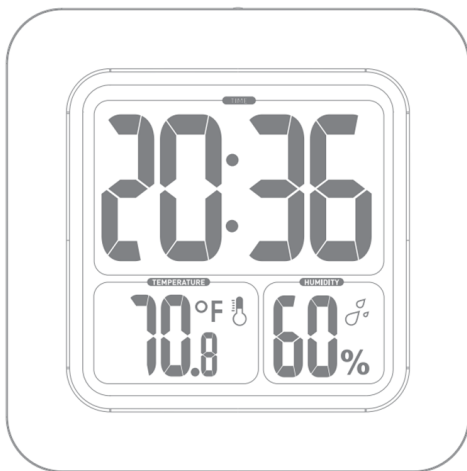
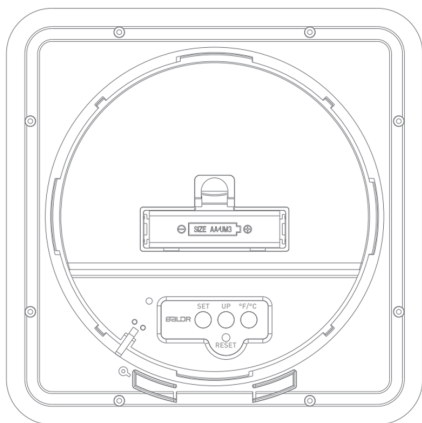


DIGITAL **BATHROOM CLOCK**

We thank you for the purchase of Baldr Digital Bathroom Clock. It has been designed and constructed using innovative components and techniques to enable the perfect display of time, temperature and humidity on this device. Please read the instructions carefully to become familiar with the properties and functions, before you use the unit.

For the start-up of this device you require: 1 x AA Battery (Not included)

OVERVIEW

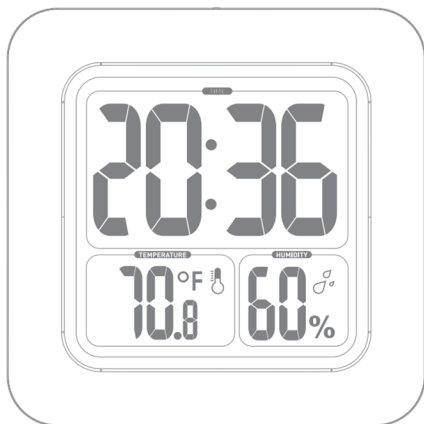

TIME SET

1. The initial preset time is 12:00 AM.
2. Press "SET" to change the time. The figure to be set will be flashing.
3. Press "UP" to adjust, then "SET" to go to the next figure.
4. The setting order is: Minute, Hour, 12/24-hr format, Month, Date.
5. Press "SET" again to confirm and exit setting mode.

TEMPERATURE DISPLAY

1. The indoor temperature will display automatically after powering on.
2. Press "F/C" key to switch between Fahrenheit and Celsius
3. Temperature range: -58 °F ~158 °F (-50 °C ~+70 °C)

HUMIDITY DISPLAY

1. The indoor humidity will display automatically after powering on.
2. Humidity range: 10%~99%

POSITIONED METHODS

The bathroom clock can be positioned in 3 ways as desired:

- A. On a table or desk by pulling out the table stand brackets from behind the clock.
- B. On a wall by using the hanging hole
- C. On smooth vertical surface with four strong suction cups

RESET

Press “RESET” to return to default settings.

PRECAUTIONS

- Do not clean any part of the product with benzene, thinner or other solvent chemicals. When necessary, clean it with a soft cloth.
- Never immerse the product in water. This will damage the product.
- Do not subject the product to extreme force, shock, or fluctuations in temperature or humidity.
- Do not tamper with the internal components.
- Do not mix new and old batteries or batteries of different types.
- Do not mix alkaline, standard or rechargeable batteries with this product.
- Remove the batteries if storing this product for a long period of time.
- Do not dispose of this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.

WARRANTY

BALDR provides a 1-year limited warranty on this product against manufacturing defects in materials and workmanship.

Warranty service can only be performed by our authorized service center. The original dated bill of sale must be presented upon request as proof of purchase to us, or our authorized service center.

The warranty covers all defects in material and workmanship with the following specified exceptions:(1) damage caused by accidents, unreasonable use or neglect (including the lack of reasonable and necessary maintenance); (2) damage occurred during shipment (claims must be presented to the carrier); (3) damage to, or deterioration of any accessory or decorative surface;(4) damage resulting from failure to follow instructions contained in your owner's manual.

This warranty covers only actual defects within the product itself, and does not cover the cost of installation or removal from a fixed installation, normal set-up or adjustments, claims based on misrepresentation by the seller or performance variations resulting from installation-related circumstances. To receive warranty service, the purchaser must contact the BALDR nominated service center for the problem determination and service procedure.

Thank you for your choice of BALDR products!



www.baldr.com

service@baldr.com