


STAMINA[®] 1300

MAGNETIC UPRIGHT EXERCISE BIKE

Owner's Manual

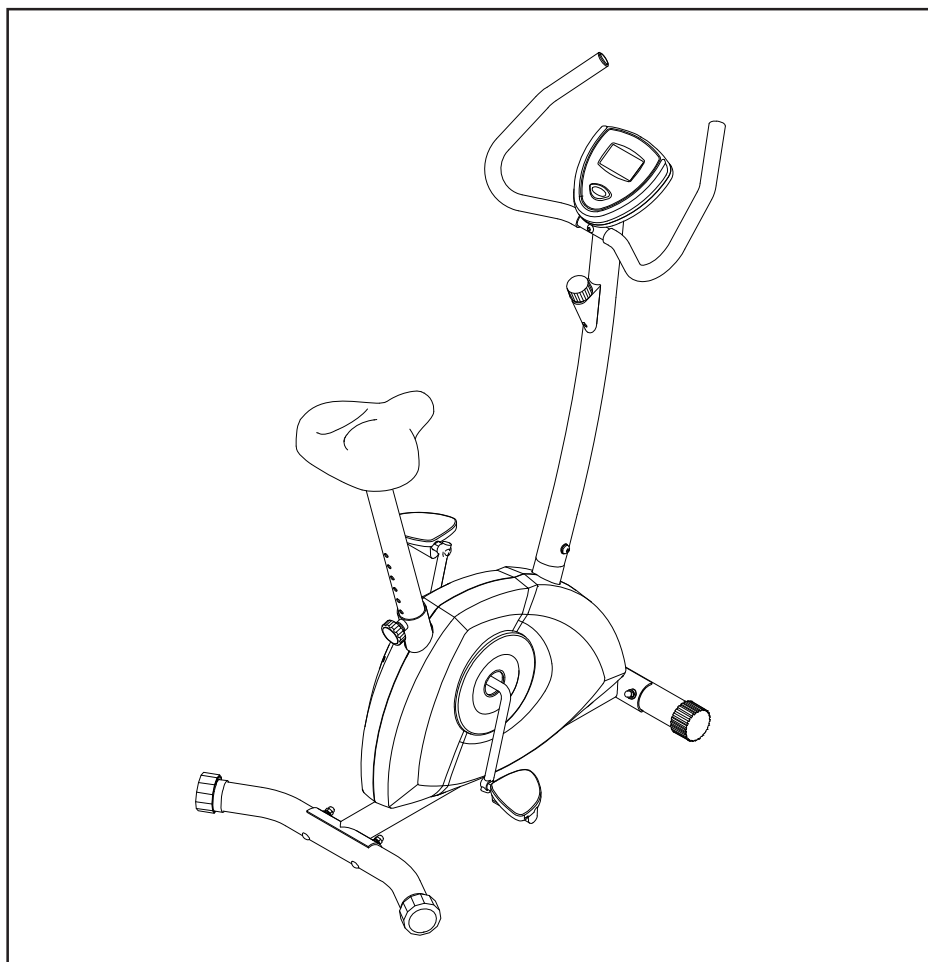

⚠ WARNING ⚠

Exercise can present a health risk. Consult a physician before beginning any exercise program with this equipment. If you feel faint or dizzy, immediately discontinue use of this equipment. Serious bodily injury can occur if this equipment is not assembled and used correctly. Serious bodily injury can also occur if all instructions are not followed. Keep others and pets away from equipment when in use. Always make sure all bolts and nuts are tightened prior to each use. Follow all safety instructions in this manual.

When calling for parts or service, please specify the following number.

CAUTION:
Weight on this product should not exceed 250 lbs.

Model#: 15-1300
STAMINA PRODUCTS
MADE IN CHINA

**Product May Vary Slightly
From Pictured.**

This Product is Produced Exclusively by



2040 N. Alliance, Springfield, MO 65803
Customer Service
1 (800) 375-7520
www.staminaproducts.com

TABLE OF CONTENTS

	Page		Page
Safety Instructions	2	Maintenance	14
Before You Begin	4	Conditioning Guidelines	15
Equipment Warning & Notice Labels	5	Warm-Up and Cool-Down	16
Hardware Identification Chart	6	Warranty	17
Assembly Instructions	7	Product Parts Drawing	18
Set Up Instructions	11	Parts List	19
Operational Instructions	12	Notes	21
Storage	14	Fax/Mail Ordering Form	22

SAFETY INSTRUCTIONS

WARNING: To reduce the risk of serious injury, read the following Safety Instructions before using the Magnetic Upright 1300 Bike.

1. Read all warnings posted on the **Magnetic Upright 1300 Bike**.
2. The **Magnetic Upright 1300 Bike** should only be used after a thorough review of the Owner's Manual.
3. We recommend that two people be available for assembly of this product.
4. Keep children away from the **Magnetic Upright 1300 Bike**. Do not allow children to use or play on the **Magnetic Upright 1300 Bike**. Keep children and pets away from the **Magnetic Upright 1300 Bike** when it is in use.
5. The **Magnetic Upright 1300 Bike** is not a freewheeling exercise bike; therefore, pedal speed should be reduced in a controlled manner to prevent injury from spinning pedals.
6. Make sure the **Magnetic Upright 1300 Bike** is properly assembled and that all nuts and bolts are tightened before use.
7. It is recommended that you place this exercise equipment on an equipment mat.
8. Set up and operate the **Magnetic Upright 1300 Bike** on a solid level surface. Do not position the **Magnetic Upright 1300 Bike** on loose rugs or uneven surfaces.
9. Make sure that adequate space is available for access to and around the **Magnetic Upright 1300 Bike**.
10. Adjust the LEVELING CAPS on the REAR STABILIZER so that the bike sits on the floor without rocking.
11. Before using, inspect the **Magnetic Upright 1300 Bike** for worn or loose components, and tighten or replace any loose or worn components prior to use.
12. Before using, always check the seat post to be sure it is secure. The adjustment knob must be inserted into one of the holes in the seat post and tightened.
13. Consult a physician prior to commencing an exercise program and follow his/her recommendations in developing your fitness program. If at any time during exercise you feel faint, dizzy, or experience pain, stop and consult your physician.
14. Follow your physician's recommendations in developing your own personal fitness program.
15. Always choose the workout which best fits your physical strength and flexibility level. Know your limits and train within them. Always use common sense when exercising.
16. Do not wear loose or dangling clothing while using the **Magnetic Upright 1300 Bike**.
17. Never exercise in bare feet or socks; always wear proper footwear such as running, walking, or cross training shoes that fit well, provide foot support, and feature non-skid rubber soles.
18. Care should be taken in mounting or dismounting the **Magnetic Upright 1300 Bike**.
19. The **Magnetic Upright 1300 Bike** should not be used by persons weighing over 250 pounds.
20. The **Magnetic Upright 1300 Bike** should be used by only one person at a time.
21. Do not ride the **Magnetic Upright 1300 Bike** while standing up.
22. The **Magnetic Upright 1300 Bike** is for consumer use only. It is not for use in public or semipublic facilities.

WARNING: Before starting any exercise or conditioning program you should consult with your personal physician to see if you require a complete physical exam. This is especially important if you are over the age of 35, have never exercised before, are pregnant, or suffer from any illness. **READ AND FOLLOW THE SAFETY PRECAUTIONS. FAILURE TO FOLLOW THESE INSTRUCTIONS CAN RESULT IN SERIOUS BODILY INJURY.**

CALL US FIRST



Customer Service

1 (800) 375-7520

www.staminaproducts.com

THANK YOU FOR PURCHASING THE 1300 Magnetic Upright Exercise Bike

To help you get started, we have pre-assembled most of your Magnetic Upright 1300 Bike at the factory with the exception of those few parts left unassembled for shipping purposes. Simply follow the few assembly instructions set forth in this manual. With regular workouts, you will be getting your body into shape and be on your way to achieving a happier and healthier lifestyle.

Should you have any questions,
please call our Customer Service Department toll-free number,
1 (800) 375-7520

Monday - Thursday, 7:30 A.M. - 5:00 P.M., Central Time.

Friday, 8:00 A.M. - 3:00 P.M., Central Time.



TELEPHONE

CUSTOMER SERVICE
Tel: 1 (800) 375-7520



FAX

CUSTOMER SERVICE
Fax: (417) 889-8064



ONLINE

CUSTOMER SERVICE
customerservice@staminaproducts.com
www.staminaproducts.com



MAIL

STAMINA PRODUCTS, INC.
ATTN: Customer Service
P.O. Box 1071
Springfield, MO. 65801-1071

BEFORE YOU BEGIN

Thank you for choosing the **Magnetic Upright 1300 Bike**. We take great pride in producing this quality product and hope it will provide many hours of quality exercise to make you feel better, look better, and enjoy life to its fullest.

It's a proven fact that a regular exercise program can improve your physical and mental health. Too often, our busy lifestyles limit our time and opportunity to exercise. The **Magnetic Upright 1300 Bike** provides a convenient and simple method to begin your assault on getting your body in shape and achieving a happier and healthier lifestyle.

Before reading further, please review the drawing below and familiarize yourself with the parts that are labeled.


Read this manual carefully before using the **Magnetic Upright 1300 Bike**.

Although Stamina constructs its products with the finest materials and uses the highest standards of manufacturing and quality control, there can sometimes be missing parts or incorrectly sized parts. If you have any questions or problems with the parts included with your **Magnetic Upright 1300 Bike**, please do not return the product. Contact us **FIRST!**

If a part is missing or defective, please call us toll free at 1-800-375-7520 (in the U.S.). Our Customer Service Staff is available to assist you from 7:30 A.M. to 5:00 P.M. (Central Time) Monday through Thursday and 8:00 A.M. to 3:00 P.M. (Central Time) on Friday.

If you would like to contact us online, go to our website at www.staminaproducts.com and access the Customer Service section.


Be sure to have the name and model number of the product available when you contact us.

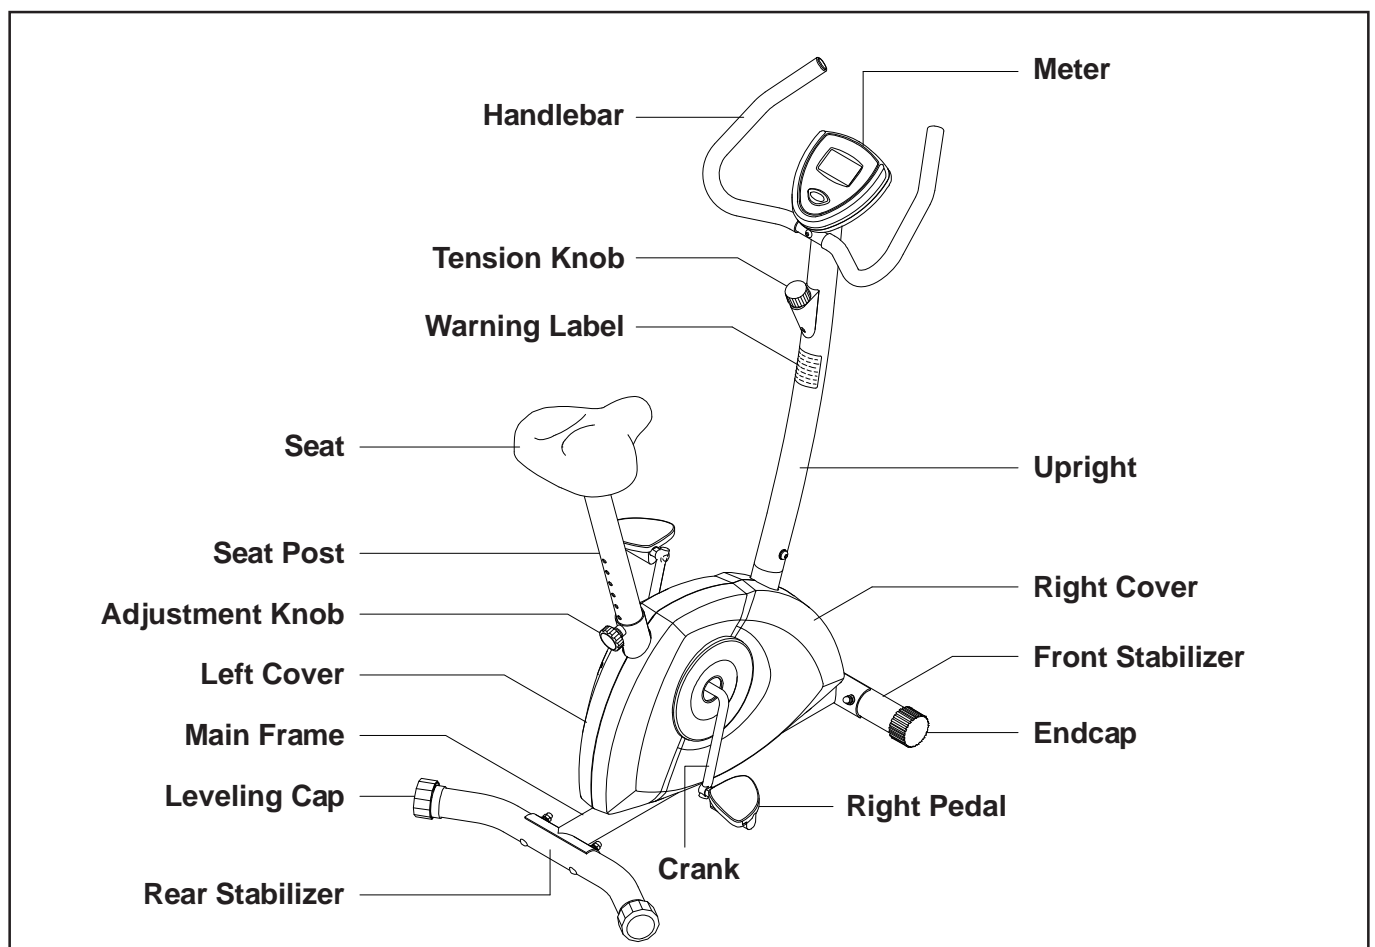

THE FOLLOWING TOOLS ARE INCLUDED FOR ASSEMBLY :



Wrench



Allen Wrench (6mm)

EQUIPMENT WARNING & NOTICE LABELS

This chart is provided to help identify the warning & notice labels on the **Magnetic Upright 1300 Bike**. Please take a moment to familiarize yourself with all of the warning & notice labels.

Label is larger than actual size


W1

WARNING LABEL(59)










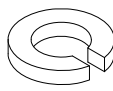
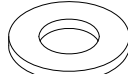
HARDWARE IDENTIFICATION CHART

This chart is provided to help identify the hardware used in the assembly process. Place the washers or the ends of the bolts or screws on the circles to check for the correct diameter. Use the small scale to check the length of the bolts and screws.

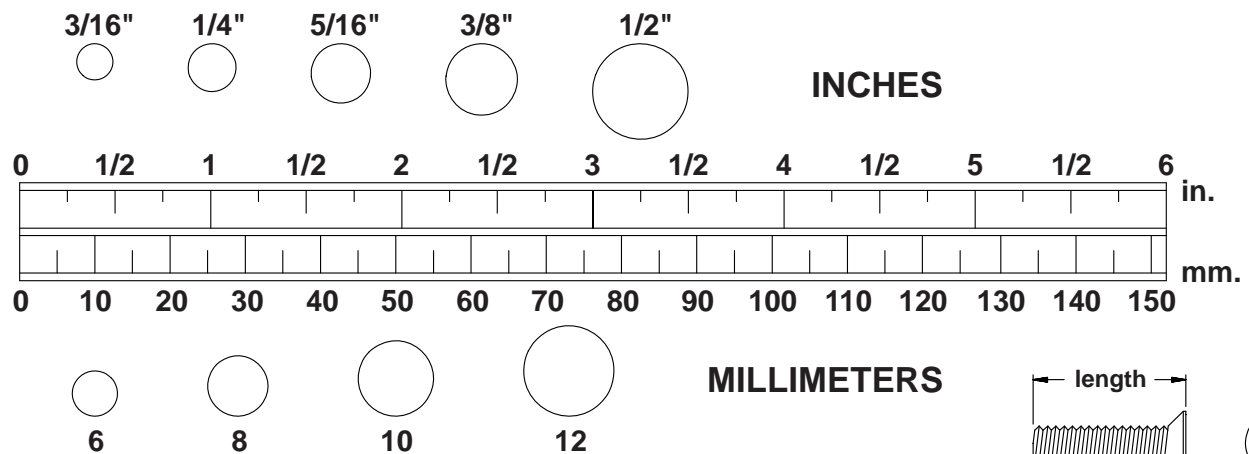


NOTICE: The length of all bolts and screws, except those with flat heads, is measured from below the head to the end of the bolt or screw. Flat head bolts and screws are measured from the top of the head to the end of the bolt or screw.

After unpacking the unit, open the hardware bag and make sure that you have all the following items. Some hardware may be already attached to the part.

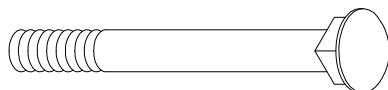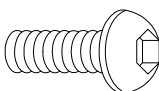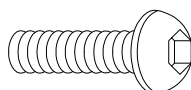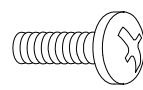	Part No. and Description	Qty
	40 Carriage Bolt (M8 x 1.25 x 65mm)	4
	41 Bolt, Button Head (M8 x 1.25 x 15mm)	4
	42 Bolt, Button Head (M8 x 1.25 x 30mm)	1
	48 Screw, Round Head (M5 x 0.8 x 15mm)	4
	49 Screw, Round Head (M6 x 1 x 8mm)	2
	50 Nylock Nut (M8 x 1.25)	3
	52 Acorn Nut (M8 x 1.25)	4
	55 Arc Washer (M8)	8
	56 Lock Washer (M8)	8
	58 Washer (M8)	3

ASSEMBLY INSTRUCTIONS

Place all parts from the box in a cleared area and position them on the floor in front of you. Remove all packing materials from your area and place them back into the box. Do not dispose of the packing materials until assembly is completed. Read each step carefully before beginning. If you are missing a part please call our toll-free number for assistance 1-800-375-7520 or e-mail us at: customerservice@staminaproducts.com

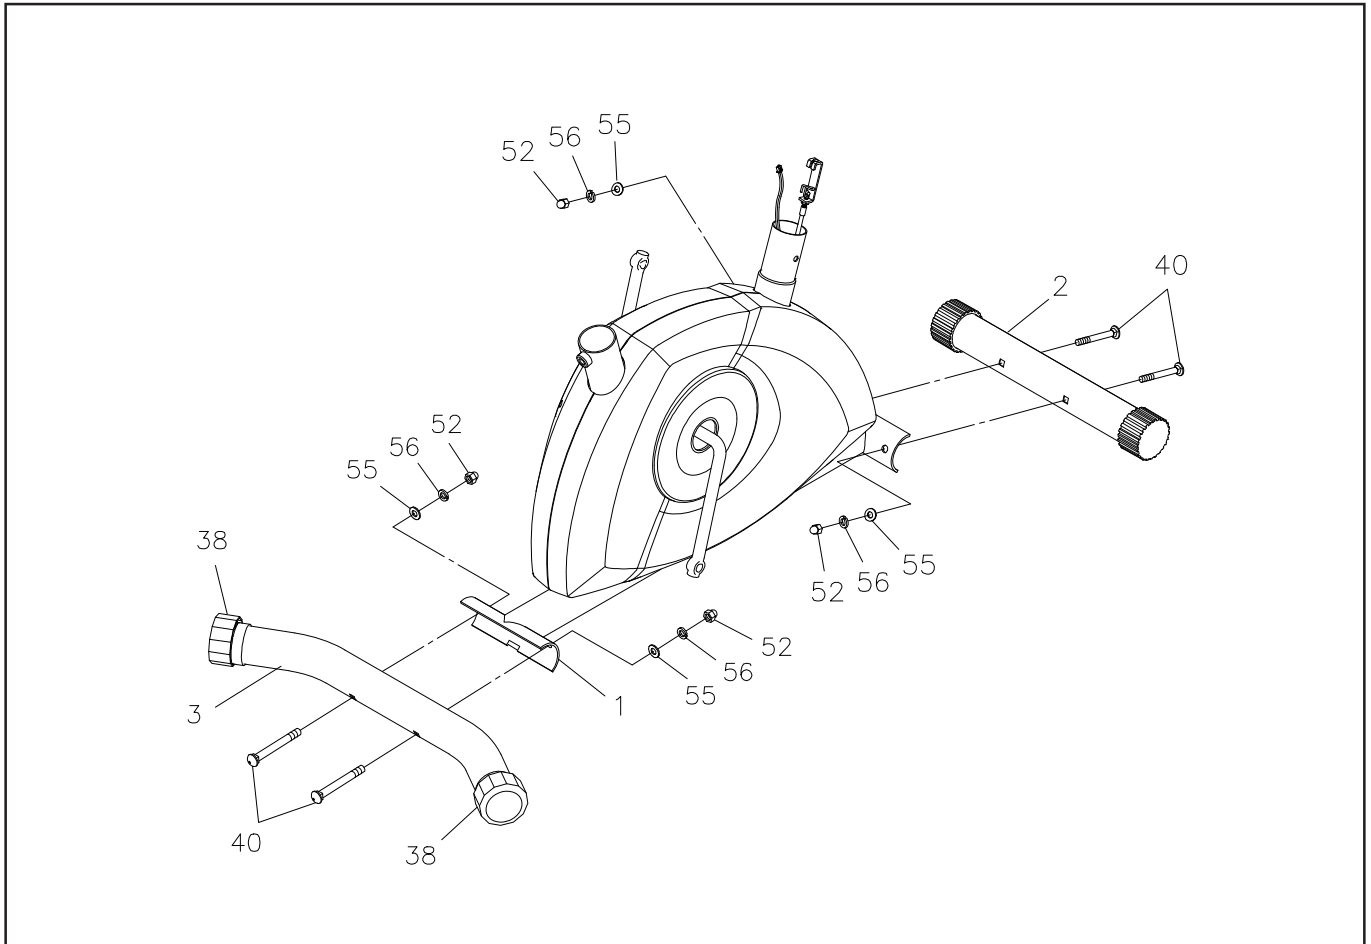

STEP 1


Attach the **FRONT STABILIZER(2)** to the front of the **MAIN FRAME(1)** with **CARRIAGE BOLTS (M8x1.25x65mm)(40)**, **ARC WASHERS(M8)(55)**, **LOCK WASHERS(M8)(56)**, and **ACORN NUTS(M8x1.25)(52)**.

STEP 2

Attach the **REAR STABILIZER(3)** to the **MAIN FRAME(1)** with **CARRIAGE BOLTS(M8x1.25x65mm)(40)**, **ARC WASHERS(M8)(55)**, **LOCK WASHERS(M8)(56)**, and **ACORN NUTS(M8x1.25)(52)**.

NOTE: You can adjust the **LEVELING CAPS(38)** on the **REAR STABILIZER(3)** to keep the Bike stable.

ASSEMBLY INSTRUCTIONS

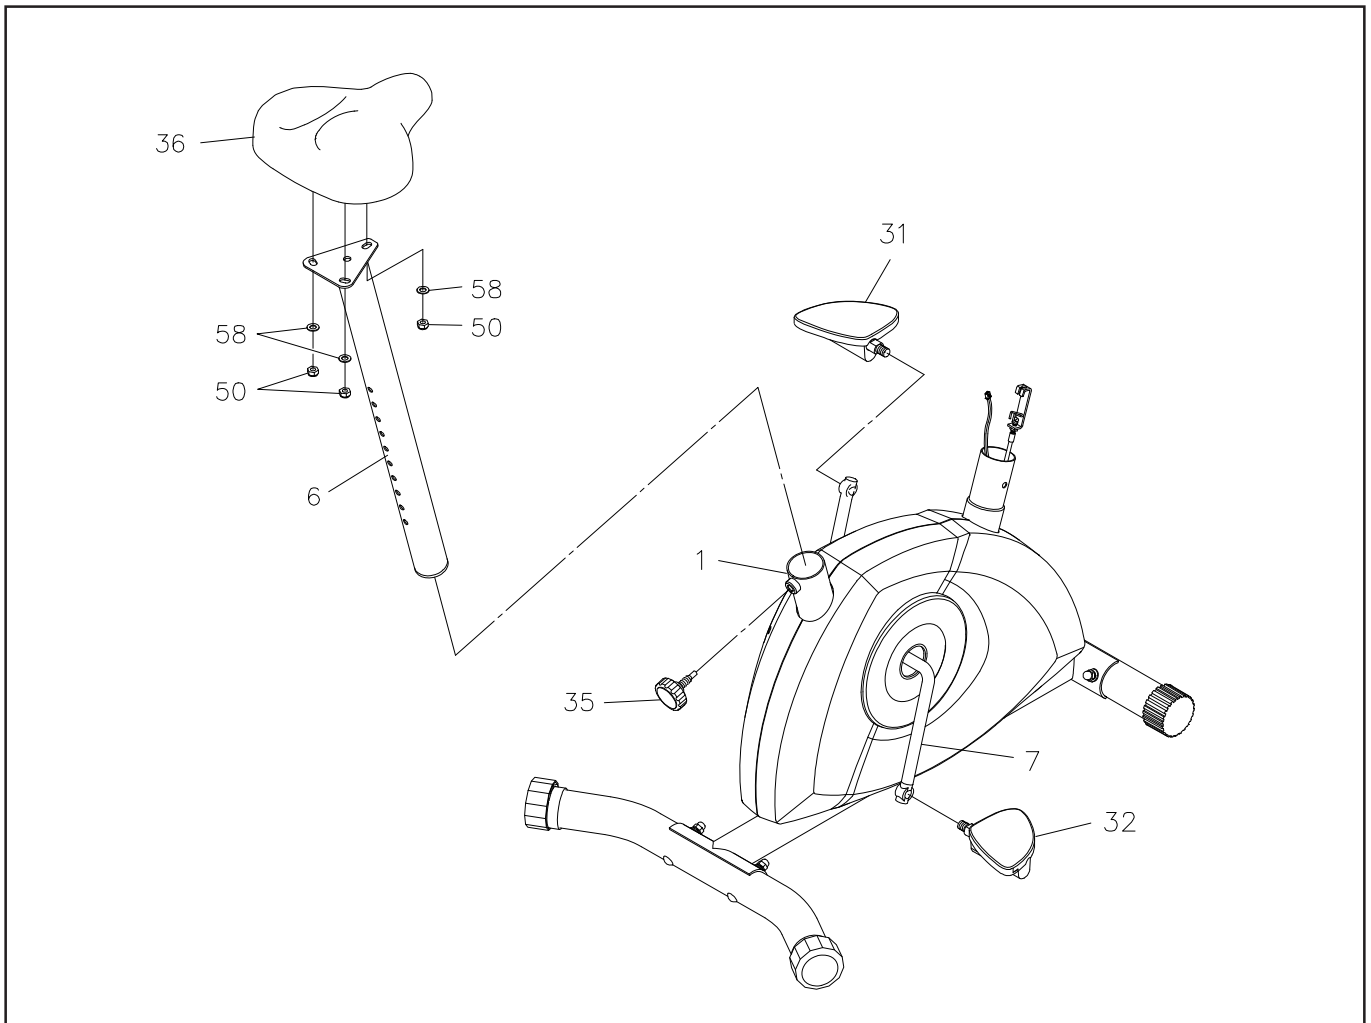

STEP 3

NOTE: The **RIGHT PEDAL(32)** has **R** stamped on the end of the pedal shaft. The **RIGHT PEDAL(32)** has right hand threads and is tightened by turning clockwise. The **LEFT PEDAL(31)** has **L** stamped on the end of the pedal shaft. The **LEFT PEDAL(31)** has left hand threads and is tightened by turning counterclockwise.


Thread the **RIGHT PEDAL(32)** to the right side of the **CRANK(7)** as shown. Tighten the pedal securely. Do the same to attach the **LEFT PEDAL(31)** to the left side of the **CRANK(7)**.

STEP 4

Attach the **SEAT(36)** to the **SEAT POST(6)** with **NYLOCK NUTS(M8x1.25)(50)** and **WASHERS(M8)(58)**. Insert the **SEAT POST(6)** into the **MAIN FRAME(1)** and secure with the **ADJUSTMENT KNOB(35)**.

NOTE: The **ADJUSTMENT KNOB(35)** should be screwed in tight to make the **SEAT POST(6)** fit securely in the **MAIN FRAME(1)**.

ASSEMBLY INSTRUCTIONS

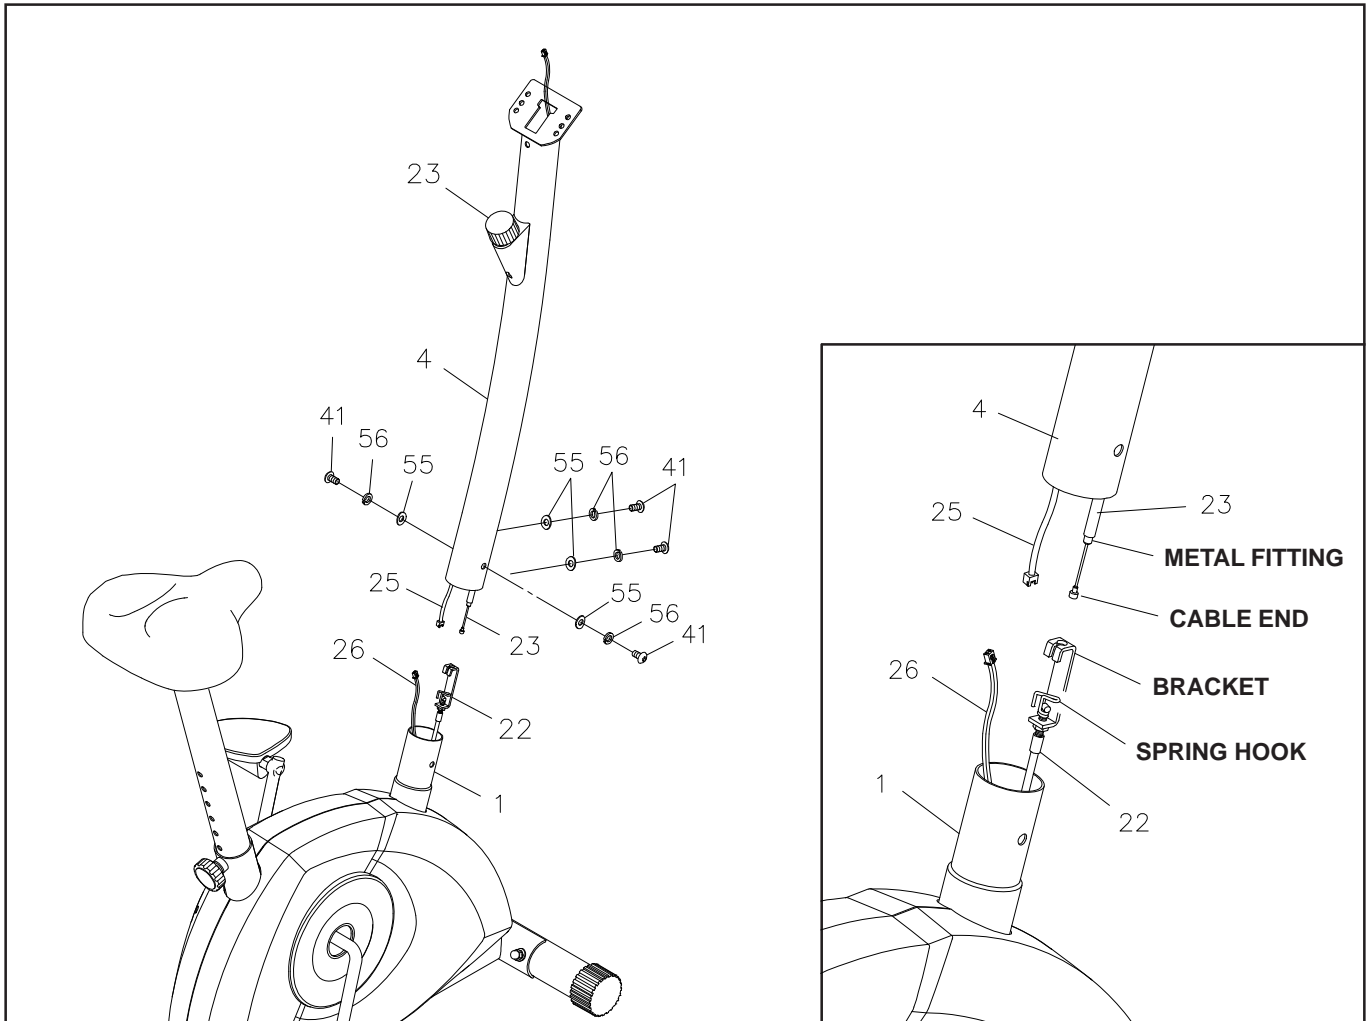


STEP 5

Turn the **TENSION KNOB(23)** on the **UPRIGHT(4)** counterclockwise as far as it can go, so the cable end extends out of the metal fitting as far as possible. Pull the ends of the **TENSION CABLE(22)** and **SENSOR WIRE(26)** out of the **MAIN FRAME(1)**. Refer to the inset drawing. Connect the **CABLE END** of the **TENSION KNOB(23)** into the **SPRING HOOK** on the end of the **TENSION CABLE(22)**. Pull on the Cable of the **TENSION KNOB(23)** firmly so that enough cable is available to insert the cable through the slot in the **BRACKET**. Then insert the **METAL FITTING** on the cable of the **TENSION KNOB(23)** into the hole at the end of the slot in the **BRACKET**. Adjust the **TENSION KNOB(23)** and verify that the **SPRING HOOK** moves when the **TENSION KNOB(23)** is adjusted.

STEP 6

Connect the **CONNECTION WIRE(25)** to the **SENSOR WIRE(26)**. Insert the **UPRIGHT(4)** onto the **MAIN FRAME(1)** and secure with **BUTTON HEAD BOLTS(M8x1.25x15mm)(41)**, **LOCK WASHERS(M8)(56)**, and **ARC WASHERS(M8)(55)**.

ASSEMBLY INSTRUCTIONS

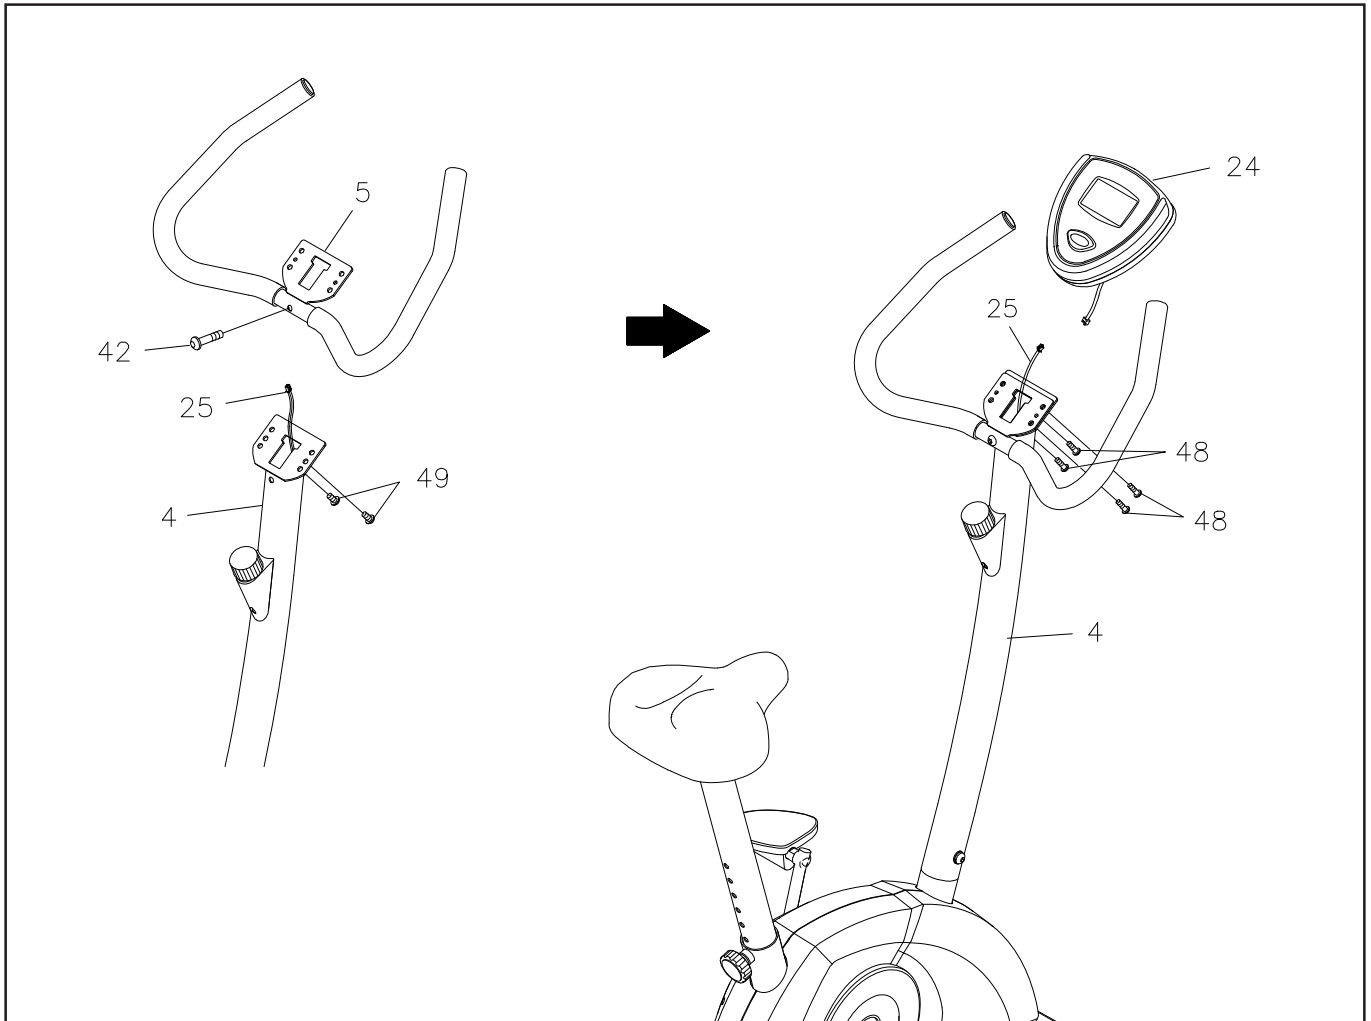

STEP 7

Run the **CONNECTION WIRE(25)** through the hole in the plate on the **HANDLEBAR(5)**. Attach the **HANDLEBAR(5)** to the **UPRIGHT(4)** with **BUTTON HEAD BOLT(M8x1.25x30mm)(42)** and **ROUND HEAD SCREWS(M6x1x8mm)(49)**.

STEP 8

Install two AA batteries into the **METER(24)**, two batteries included. See page 13 for detailed battery installation instructions. Plug the **CONNECTION WIRE(25)** to the **METER(24)**, and push the excess wires back into the **UPRIGHT(4)**. Place the **METER(24)** onto the plate on the **HANDLEBAR(5)** and secure with **ROUND HEAD SCREWS(M5x0.8x15mm)(48)**.


NOTE: Be careful not to damage the wires when attaching the **METER(24)**.

SET UP INSTRUCTIONS

Place the **Magnetic Upright 1300 Bike** in the area where it will be used. It is recommended that the **Magnetic Upright 1300 Bike** be placed on an equipment mat. The **Magnetic Upright 1300 Bike** is approximately 35 inches long x 22 5/8 inches wide x 48 1/2 inches tall. An area 4 feet wide x 5 feet long is required for safe operation of the **Magnetic Upright 1300 Bike**. Make sure that adequate space is available for access to and passage around the **Magnetic Upright 1300 Bike**.

LEVELING: Adjust the **LEVELING CAPS(38)** on the **REAR STABILIZER(3)** so the Bike sits on the floor without rocking.

MOVING: The **Magnetic Upright 1300 Bike** must be lifted to be moved. Two people are required to grasp the **HANDLEBAR(5)** and the **REAR STABILIZER(4)**, lift and move.

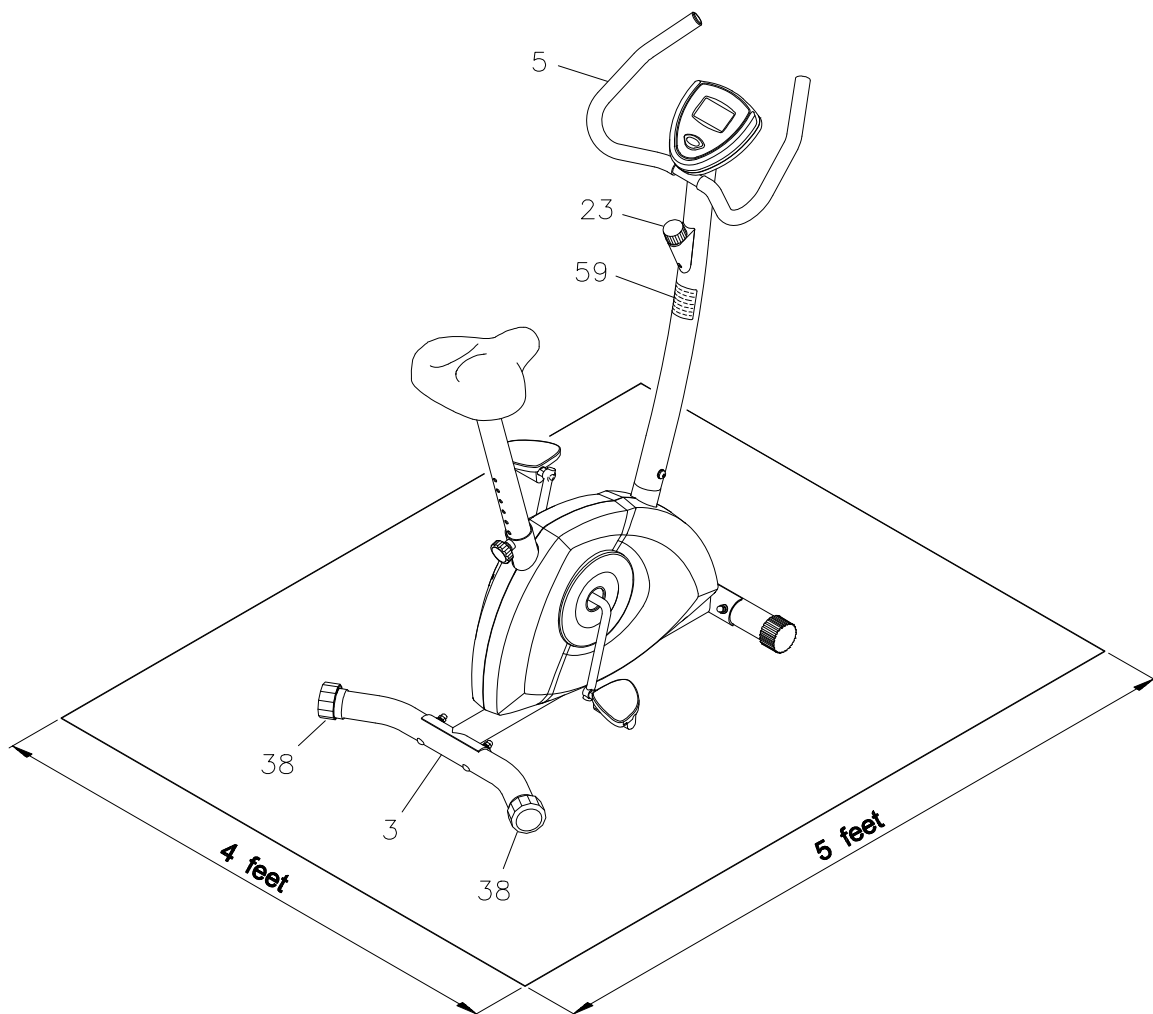

FUNCTION INSPECTION:

Visually inspect the **Magnetic Upright 1300 Bike** to verify that assembly is as shown in the above illustration. Check the function of the **Magnetic Upright 1300 Bike** by turning the crank slowly through one complete revolution to verify that the drive train functions properly. Adjust the **TENSION KNOB(23)** and verify that it functions properly.

CAUTION: Locate and read the **WARNING LABEL(59)** on the **Magnetic Upright 1300 Bike**. Make sure that all users read the **WARNING LABEL(59)**.


OPERATIONAL INSTRUCTIONS

SEAT HEIGHT ADJUSTMENT

Proper seat height is important for efficient exercise. To determine proper seat height, sit on the BIKE and center the ball of your foot on the pedal in the down position. Your leg should be slightly bent and relaxed as shown.

If your leg is too straight or if your foot cannot touch the pedal when extended at the downstroke, you will need to lower the seat. If your leg is bent too much, you will need to raise the seat. Remove the **ADJUSTMENT KNOB(35)**, lower or raise the **SEAT(36)** to the desired height, and secure with the **ADJUSTMENT KNOB(35)**.


NOTE: The **ADJUSTMENT KNOB(35)** should be screwed in tight to make the **SEAT POST(6)** fit securely in the **MAIN FRAME(1)**.

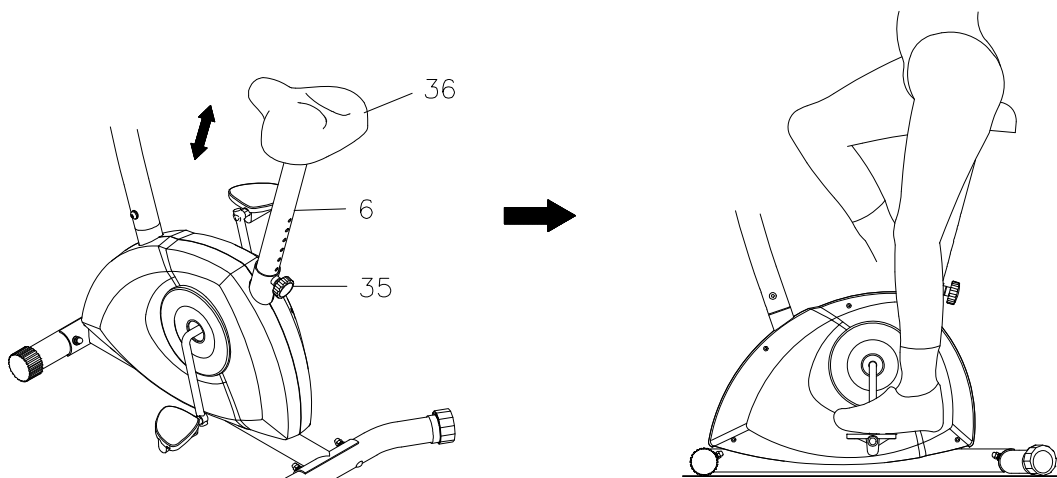

LOAD ADJUSTMENT

To increase the load, turn the **TENSION KNOB(23)** clockwise. To decrease the load, turn the **TENSION KNOB(23)** counterclockwise.

NOTE: The load will increase as you pedal faster.

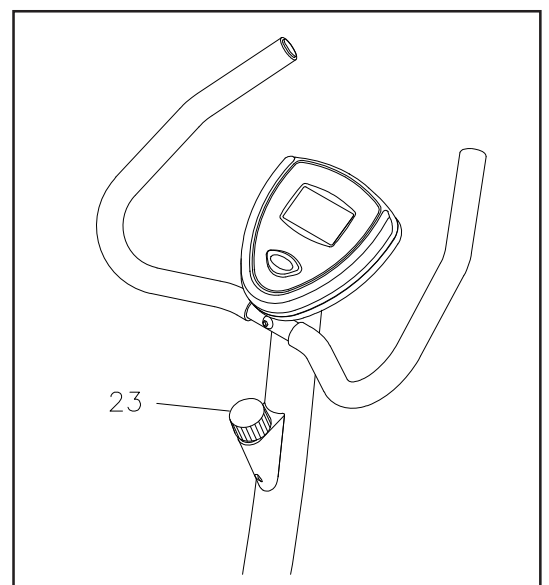

OPERATIONAL INSTRUCTIONS

USING THE METER


POWER ON : Pedal movement or push the button.

POWER OFF : Automatic shut off after four minutes of inactivity.

MODE/RESET BUTTON:

Press to select display functions, include **SCAN**, **TIME**, **SPEED**, **DISTANCE**, and **CALORIES**.

Press and hold for three seconds to reset all functions to zero.

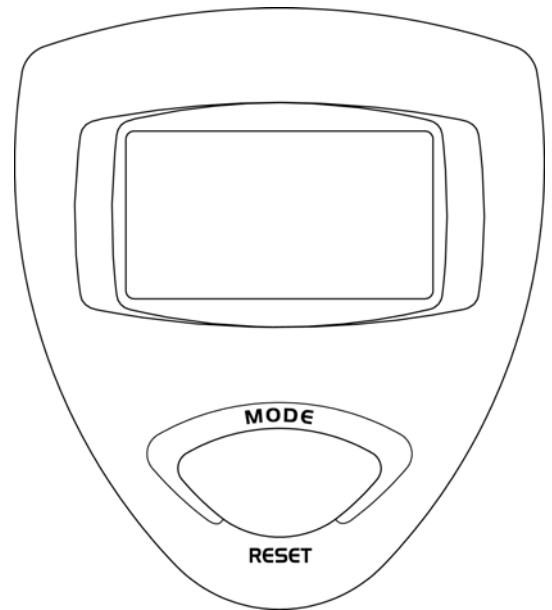

FUNCTIONS:

SCAN: Automatically scans each function of **TIME**, **SPEED**, **DISTANCE**, and **CALORIES** in sequence with change every four seconds. Press and release the button until "**SCAN**" appears on the display.

TIME: Displays the time from one second up to 99:59 minutes.

SPEED: Displays the current speed from zero to 999.9 miles per hour.

DISTANCE: Displays the distance from zero to 99.99 miles.

CALORIES: Displays the calorie consumption from zero to 999.9 Kcal.
The calorie readout is an estimate for an average user. It should be used only as a comparison between workouts on this unit.


NOTE: The meter will shut off automatically after four minutes of inactivity. All function values will be kept. Push the button and hold it down for three seconds to reset all functions to zero.

HOW TO INSTALL AND REPLACE BATTERIES:

1. Open the Battery Door on the back of the meter.
2. The meter operates with two AA batteries, two batteries included. Refer to the illustration to install or replace the batteries.

NOTE:

1. Do not mix a new battery with an old battery.
2. Use the same type of battery. Do not mix an alkaline battery with another type of battery.
3. Rechargeable batteries are not recommended.

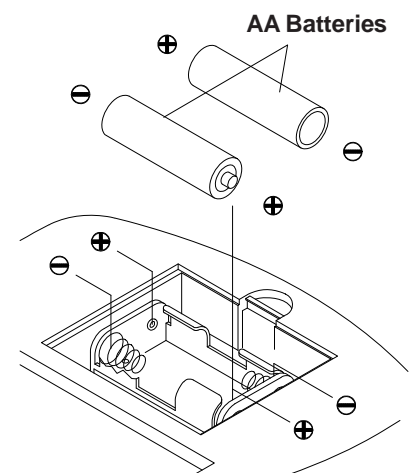

STORAGE

1. To store the **Magnetic Upright 1300 Bike**, simply keep it in a clean dry place.
2. The **Magnetic Upright 1300 Bike** is approximately 38 1/2 inches long x 22 inches wide x 52 inches tall. These dimensions may vary. Please measure your **Magnetic Upright 1300 Bike** if exact dimensions are needed.
3. Lift the **Magnetic Upright 1300 Bike** from the **HANDLEBAR(5)** and **REAR STABILIZER(3)** to move.
4. To avoid damage to the electronics, remove the batteries before storing the **Magnetic Upright 1300 Bike** for one year or more.

MAINTENANCE

The safety and integrity designed into the **Magnetic Upright 1300 Bike** can only be maintained when the **Magnetic Upright 1300 Bike** is regularly examined for damage and wear. Special attention should be given to the following:

1. Adjust the **TENSION KNOB(23)** and verify that the Magnetic System provides tension. The Magnetic System should provide many years of use.
2. Use a wrench to verify that the pedals are tightened securely. If tightening is required, remember that the left pedal has left hand threads and is tightened by turning counterclockwise.
3. Verify that the **WARNING LABEL(59)** is in place and easy to read. Call Stamina Products immediately at 1-800-375-7520 for a replacement **WARNING LABEL(59)** if it is missing or damaged.
4. Do not step on any portion of the plastic cover when getting on or off the Bike. This can cause the plastic cover to crack.
5. It is the sole responsibility of the user/owner to ensure that regular maintenance is performed.
6. Worn or damaged components shall be replaced immediately or the **Magnetic Upright 1300 Bike** removed from service until repair is made.
7. Only Stamina Products supplied components shall be used to maintain/repair the **Magnetic Upright 1300 Bike**.
8. Keep your **Magnetic Upright 1300 Bike** clean by wiping with an absorbent cloth after use.

CONDITIONING GUIDELINES

How you begin your exercise program depends on your physical condition. If you have been inactive for several years or are severely overweight, start slowly and increase your workout time gradually. Increase your workout intensity gradually by monitoring your heart rate while you exercise.


Remember to follow these essentials:

- Have your doctor review your training and diet programs.
- Begin your training program slowly with realistic goals that have been set by you and your physician.
- Warm up before you exercise and cool down after you work out.
- Take your pulse periodically during your workout and strive to stay within a range of 60% (lower intensity) to 90% (higher intensity) of your maximum heart rate zone. Start at the lower intensity, and build up to higher intensity as you become more aerobically fit.
- If you feel dizzy or lightheaded you should slow down or stop exercising.

Initially you may only be able to exercise within your target zone for a few minutes; however, your aerobic capacity will improve over the next six to eight weeks. It is important to pace yourself while you exercise so you don't tire too quickly.

To determine if you are working out at the correct intensity, use a heart rate monitor or use the table below. For effective aerobic exercise, your heart rate should be maintained at a level between 60% and 90% of your maximum heart rate. If just starting an exercise program, work out at the low end of your target heart rate zone. As your aerobic capacity improves, gradually increase the intensity of your workout by increasing your heart rate.

Measure your heart rate periodically during your workout by stopping the exercise but continuing to move your legs or walk around. Place two or three fingers on your wrist and take a six second heartbeat count. Multiply the results by ten to find your heart rate. For example, if your six second heartbeat count is 14, your heart rate is 140 beats per minute. A six second count is used because your heart rate will drop rapidly when you stop exercising. Adjust the intensity of your exercise until your heart rate is at the proper level.

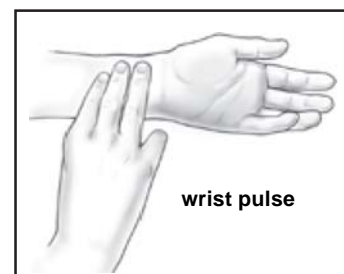

Target Heart Rate Zone Estimated by Age*

Age	Target Heart Rate Zone (55%-90% of Maximum Heart Rate)	Average Maximum Heart Rate 100%
20 years	110-180 beats per minute	200 beats per minute
25 years	107-175 beats per minute	195 beats per minute
30 years	105-171 beats per minute	190 beats per minute
35 years	102-166 beats per minute	185 beats per minute
40 years	99-162 beats per minute	180 beats per minute
45 years	97-157 beats per minute	175 beats per minute
50 years	94-153 beats per minute	170 beats per minute
55 years	91-148 beats per minute	165 beats per minute
60 years	88-144 beats per minute	160 beats per minute
65 years	85-139 beats per minute	155 beats per minute
70 years	83-135 beats per minute	150 beats per minute


* For cardiorespiratory training benefits, the American College of Sports Medicine recommends working out within a heart rate range of 55% to 90% of maximum heart rate. To predict the maximum heart rate, the following formula was used: $220 - \text{Age} = \text{predicted maximum heart rate}$

WARM-UP and COOL-DOWN

Warm-Up The purpose of warming up is to prepare your body for exercise and to minimize injuries. Warm up for two to five minutes before strength training or aerobic exercising. Perform activities that raise your heart rate and warm the working muscles. Activities may include brisk walking, jogging, jumping jacks, jump rope, and running in place


Stretching Stretching while your muscles are warm after a proper warm-up and again after your strength or aerobic training session is very important. Muscles stretch more easily at these times because of their elevated temperature, which greatly reduces the risk of injury. Stretches should be held for 15 to 30 seconds. Do not bounce.

Suggested Stretching Exercises

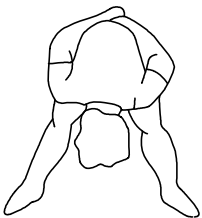


Lower Body Stretch

Place feet shoulder-width apart and lean forward. Keep this position for 30 seconds using the body as a natural weight to stretch the backs of the legs. **DO NOT BOUNCE!** When the pull on the back of the legs lessens, gradually try a lower position.

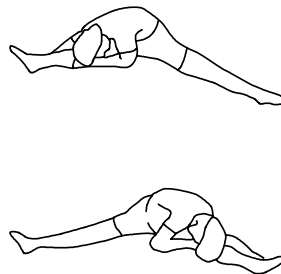



Floor Stretch

While sitting on the floor, open the legs as wide as possible. Stretch the upper body toward the knee on the right leg by using your arms to pull your chest to your thighs. Hold this stretch 10 to 30 seconds. **DO NOT BOUNCE!** Do this stretch 10 times. Repeat the stretch with the left leg.

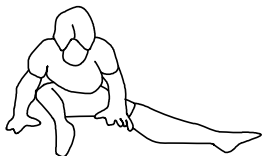

Bent Torso Pulls

While sitting on the floor, have legs apart, one leg straight and one knee bent. Pull the chest down to touch the thigh on the leg that is bent, and twist at the waist. Hold this position at least 10 seconds. Repeat 10 times on each side.

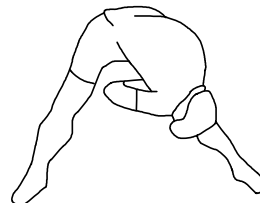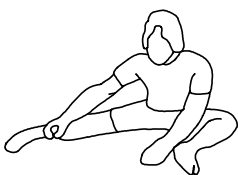

Bent Over Leg Stretch

Stand with feet shoulder-width apart and lean forward as illustrated. Using the arms, **gently** pull the upper body towards the right leg. Let the head hang down. **DO NOT BOUNCE!** Hold the position a minimum of 10 seconds. Repeat pulling the upper body to the left leg. Do this stretch several times slowly.

Remember to always check with your physician before starting any exercise program.

Cool-Down The purpose of cooling down is to return the body to its normal, or near normal, resting state at the end of each exercise session. A proper cool-down slowly lowers your heart rate and allows blood to return to the heart. Your cool-down should include the stretches listed above and should be completed after each strength training session.

WARRANTY

Stamina Products, Inc. warrants that this product will be free from defects in materials and workmanship under normal use, service and proper operation for a period of 90 days on the parts and one year on the frame from the date of the original purchase from an authorized retailer. **THIS WARRANTY SHALL NOT APPLY TO ANY PRODUCT WHICH HAS BEEN SUBJECT TO COMMERCIAL USE, ABUSE, MISUSE, ALTERATION OF ANY TYPE OR CAUSE OR TO ANY DEFECT OR DAMAGE CAUSED BY REPAIR, REPLACEMENT, SUBSTITUTION OR USE WITH PARTS OTHER THAN PARTS PROVIDED BY STAMINA PRODUCTS, INC.** Commercial use includes use of the product in athletic clubs, health clubs, spas, gymnasiums, exercise facilities, and other public or semipublic facilities whether or not the product's use is in furtherance of a profit making enterprise, and all other use which is not for personal, family, or household purposes.


To implement this limited warranty, send a written notice stating your name, date, and place of purchase and a brief description of the defect along with your receipt to **Stamina Products, Inc. P.O. Box 1071, Springfield Missouri, USA, 65801-1071**, or email us at **customerservice@staminaproducts.com**, or call us at **1-800-375-7520**. If the defect is covered under this limited warranty, you will be requested to return the product or part to us for free repair or replacement at our option. **NO ACTION FOR BREACH OF THIS LIMITED WARRANTY MAY BE COMMENCED MORE THAN ONE (1) YEAR AFTER THE DATE THE ALLEGED BREACH WAS OR SHOULD HAVE BEEN DISCOVERED. NO ACTION FOR BREACH OF ANY IMPLIED WARRANTY MAY BE COMMENCED MORE THAN ONE (1) YEAR AFTER DELIVERY OF THE PRODUCT TO THE PURCHASER.** This limited warranty is not transferable. **IF ANY PART OF THE PRODUCT IS NOT IN COMPLIANCE WITH THIS LIMITED WARRANTY OR ANY IMPLIED WARRANTY, THE REMEDY OF REPAIR OR REPLACEMENT IS THE EXCLUSIVE REMEDY AVAILABLE TO YOU.** In the event that the purchaser makes any claim under this limited warranty or any implied warranty, the Warrantor reserves the right to require the product to be returned for inspection, at the purchaser's expense, to the Warrantor's premises in Springfield, Missouri. Return of the enclosed warranty registration card is not required for warranty coverage, but is merely a way of establishing the date and place of purchase.

Stamina Products, Inc. **SHALL NOT BE LIABLE FOR THE LOSS OF USE OF ANY PRODUCT, LOSS OF TIME, INCONVENIENCE, COMMERCIAL LOSS OR ANY OTHER INDIRECT, CONSEQUENTIAL, SPECIAL OR INCIDENTAL DAMAGES DUE TO BREACH OF THE ABOVE WARRANTY OR ANY IMPLIED WARRANTY.**

This limited warranty is the only written or express warranty given by Stamina Products, Inc. This warranty gives you specific legal rights, and you may also have other legal rights which vary from state to state. **ANY OTHER RIGHT WHICH YOU MAY HAVE, INCLUDING ANY IMPLIED WARRANTY OR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.**

The laws in some jurisdictions restrict the rights of manufacturers and distributors of consumer goods to disclaim or limit implied warranties and consequential and incidental damages with respect thereto. If any such law is found to be applicable, the foregoing disclaimers and limitations of and on implied warranties and consequential and incidental damages with respect thereto shall be disregarded and shall be deemed not to have been made to the extent necessary to comply with such legal restriction.

PRODUCT PARTS DRAWING

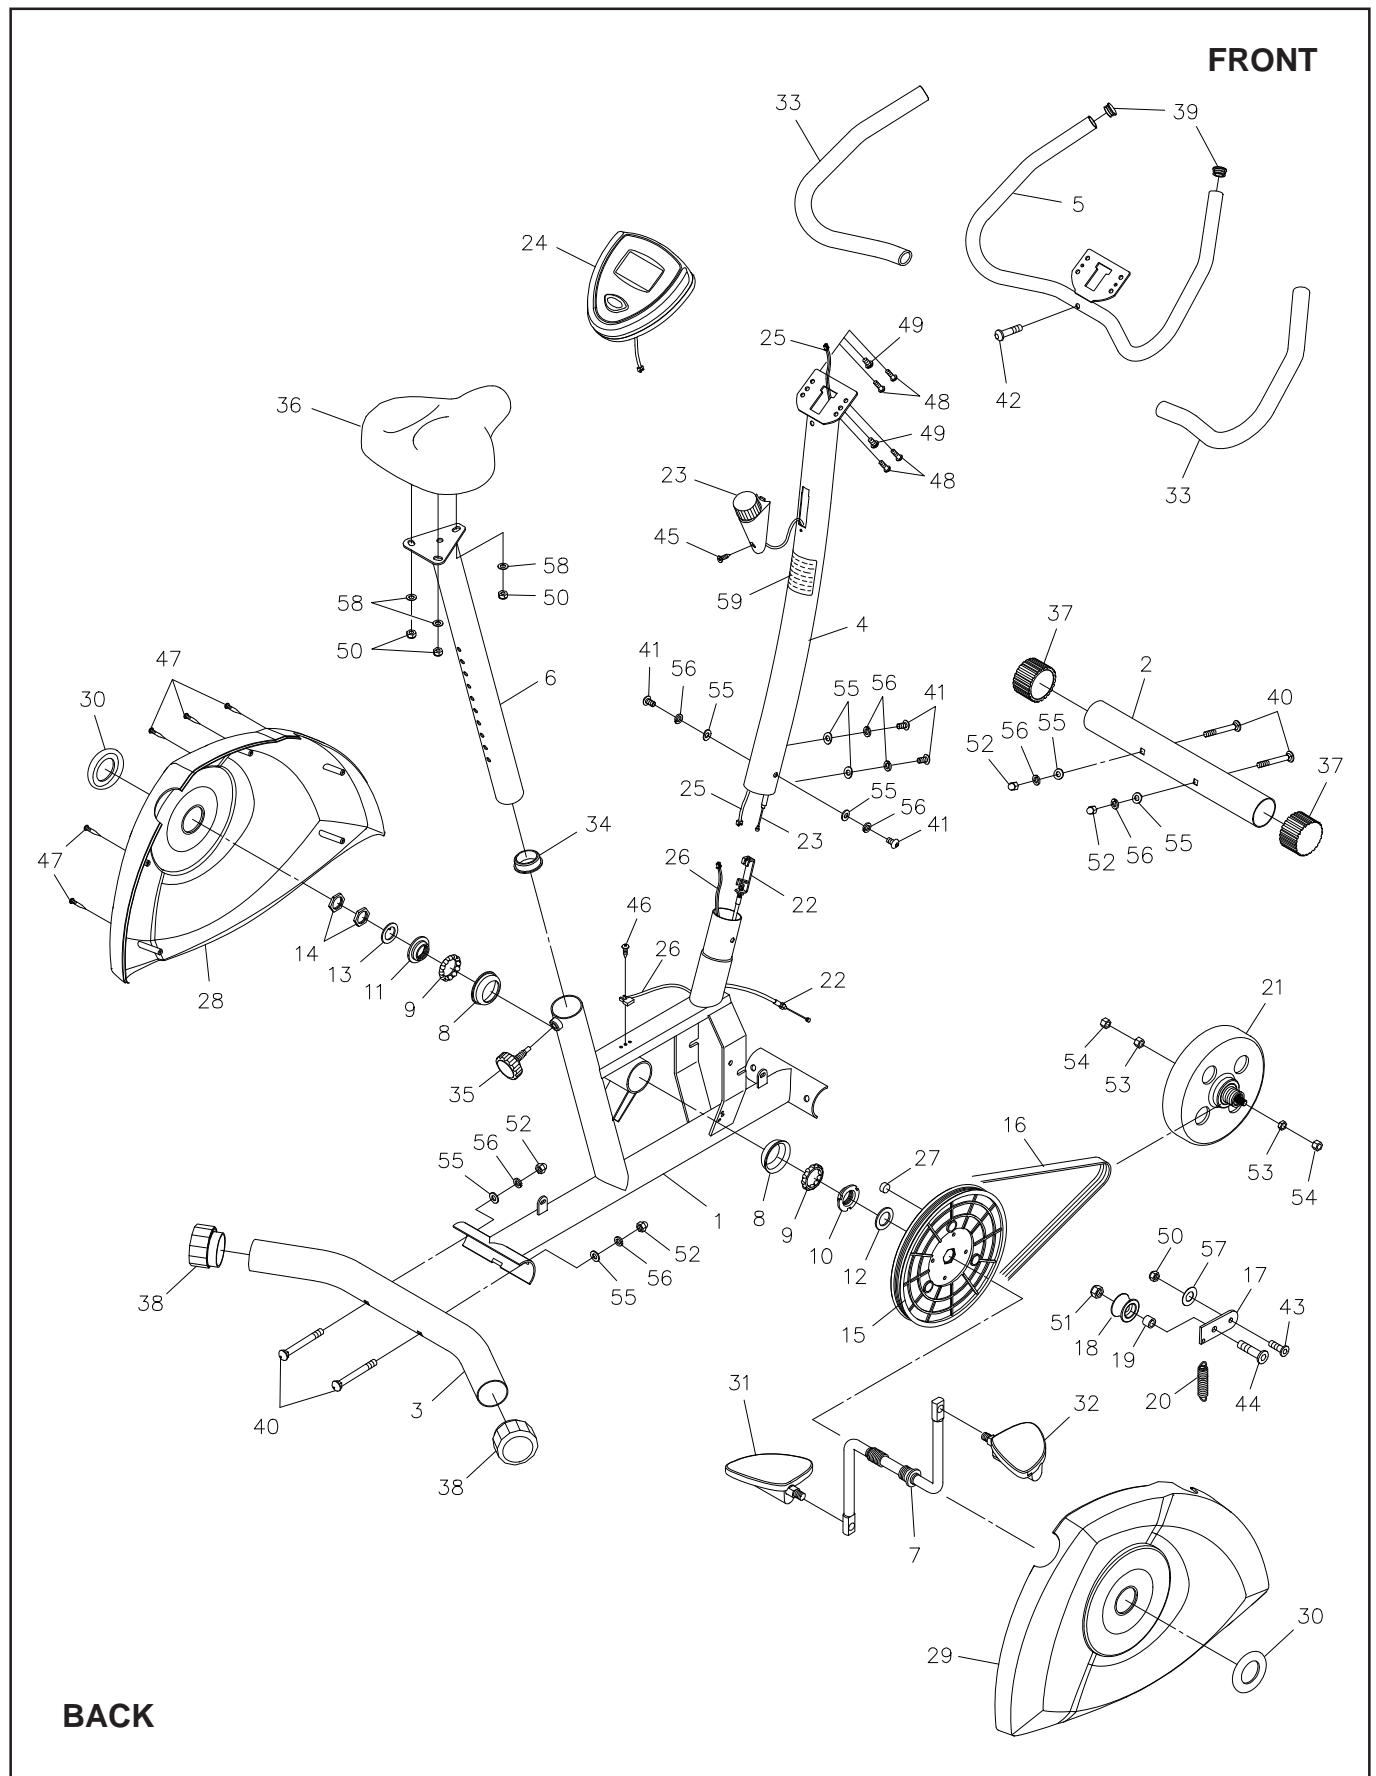

PARTS LIST

PART#	PART NAME	QTY
1	Main Frame	1
2	Front Stabilizer	1
3	Rear Stabilizer	1
4	Upright	1
5	Handlebar	1
6	Seat Post	1
7	Crank	1
8	Bearing Housing	2
9	Ball Bearing	2
10	Inside Bearing Collar	1
11	Outside Bearing Collar	1
12	Bearing Washer	1
13	Bearing Snap Washer	1
14	Bearing Nut	2
15	Pulley	1
16	V-Ribbed Belt	1
17	Idler Arm	1
18	Idler Wheel	1
19	Idler Wheel Spacer	1
20	Tension Spring	1
21	Magnetic Unit	1
22	Tension Cable	1
23	Tension Knob	1
24	Meter	1
25	Connection Wire	1
26	Sensor Wire	1
27	Magnet	1
28	Left Cover	1
29	Right Cover	1
30	Cover Cap	2
31	Left Pedal	1
32	Right Pedal	1
33	Foam Grip	2
34	Post Plug	1
35	Adjustment Knob	1
36	Seat	1
37	Endcap (50.8mm)	2
38	Leveling Cap (50.8mm)	2
39	Round Plug (22mm)	2
40	Carriage Bolt (M8 x 1.25 x 65mm)	4
41	Bolt, Button Head (M8 x 1.25 x 15mm)	4
42	Bolt, Button Head (M8 x 1.25 x 30mm)	1
43	Bolt, Flat Head (M8 x 1.25 x 20mm)	1
44	Bolt, Flat Head (M10 x 1.5 x 35mm)	1
45	Screw, Flat Head (M5 x 15mm)	1
46	Screw, Big Round Head (M5 x 15mm)	1
47	Screw, Round Head (M4 x 25mm)	5

PARTS LIST

PART#	PART NAME	QTY
48	Screw, Round Head (M5 x 0.8 x 15mm)	4
49	Screw, Round Head (M6 x 1 x 8mm)	2
50	Nylock Nut (M8 x 1.25)	4
51	Nylock Nut (M10 x 1.5 x 7mm thick)	1
52	Acorn Nut (M8 x 1.25)	4
53	Thin Nut (3/8" - 26 x 5/32" thick)	2
54	Nut (3/8" - 26 x 9/32" thick)	2
55	Arc Washer (M8)	8
56	Lock Washer (M8)	8
57	Large Washer (ø16.5 x ø32 x 0.5mm thick)	1
58	Washer (M8)	3
59	Warning Label	1
60	Wrench	1
61	Allen Wrench (6mm)	1
62	Manual	1

NOTES



MAIL
STAMINA PRODUCTS, INC.
ATTN: Customer Service
P.O. Box 1071
Springfield, MO. 65801-1071



City: _____ State: _____ Zip Code: _____

Purchased From: _____

[illegible]