


# PLANK INSTRUCTIONS


FOR USE WITH LITTLE GIANT®™ ARTICULATED EXTENDABLE  
LADDER MODELS



If your ladder has **ROCK LOCK®™** or **RAPID LOCK®™** outer lock assemblies, additional trestle brackets (sold separately) are required to achieve this mode. If your ladder has lock tab outer lock assemblies, using the trestle brackets is recommended, but are not required.


## TRESTLE BRACKET METHOD SETUP

- Starting from the small stepladder mode, unlock the outer lock assemblies and completely remove both outer ladder assemblies from the inner ladder assembly. Set the inner ladder assembly aside; it makes up the first of the two trestles.
- Insert the trestle brackets (sold separately) into the tops of one outer ladder assembly with the tabs on the brackets facing outward, then lock the outer lock assemblies, and then repeat for the other outer ladder assembly (Fig. 1-3). The second trestle is now ready.
- Space the two trestles out and place LITTLE GIANT®™ Telescoping Plank between them at the standing height covered on bullet #3 on back side (Fig. 4).

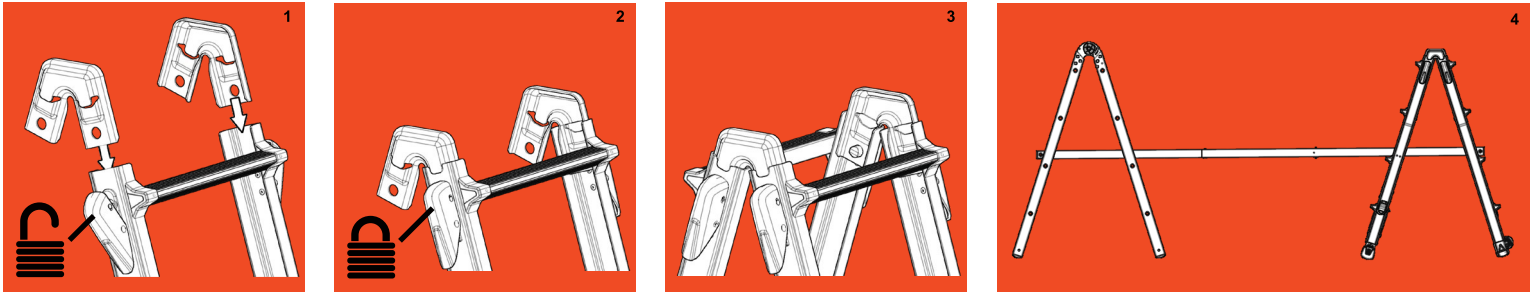

## TRADITIONAL METHOD SETUP (LOCK TABS ONLY)

- Starting from the small stepladder mode, unlock the outer ladder locks, and completely remove both outer ladder assemblies from the inner ladder assembly. Set the inner ladder assembly aside; it makes up the first of the two trestles.
- Turn the two outer ladder assemblies so they are facing the same direction, then hold them together and stand them up vertically. If your ladder has **TIP & GLIDE™** wheels, position the outer ladder assemblies so the wheels face out (Fig. 5).
- Take the lock tabs from the back outer ladder assembly and lock them into the holes on the front section (Fig. 6).
- To form the second trestle, lift up slightly on the back section, and then pull the two sections out into an A-frame position (Fig. 7-8).  
**NOTE: IF THIS STEP IS DONE INCORRECTLY, YOU WILL DAMAGE YOUR LADDER AND VOID YOUR WARRANTY.**

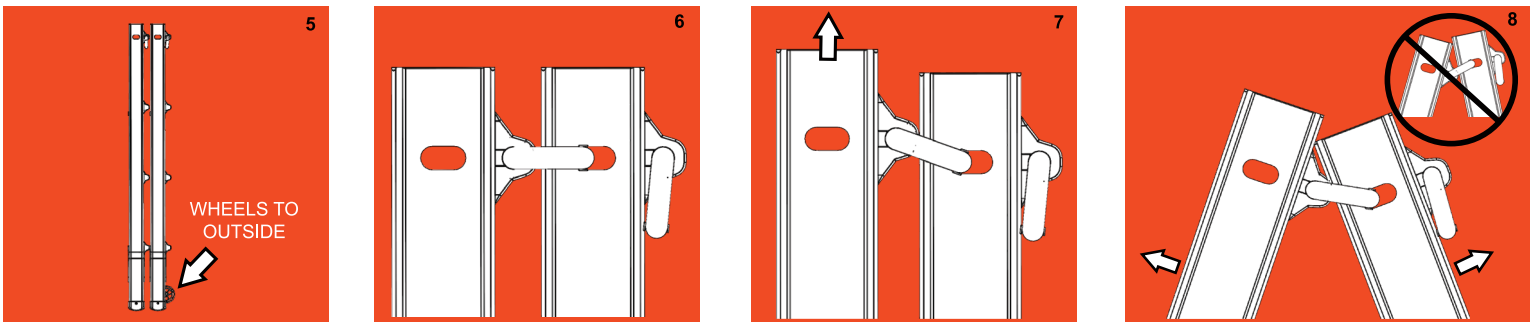



## WARNING

### Additional Scaffolding Trestle Safety Information

- Regardless of your ladder's duty rating (Type I, IA, or IAA), when used as a scaffolding system, it has a two-person, 500 lb. [227 kg] duty rating. For your safety, do not exceed this duty rating.
- Do not use either of the trestles as individual stepladders.
- ANSI rules state that the scaffolding plank should not be used as a standing platform at heights greater than three times the minimum width of the base section. As such, only use the plank as a standing platform up to the third rung. If the plank is above the third rung, it may be used as a work bench, but not a standing platform, and it should be secured or guyed for stability.
- If your plank is not equipped with cleats or hooks, extend the ends of the plank at least 6", but not more than 12", past the support point, and never stand on cantilevered ends of the plank.
- When reassembling the ladder, make sure the outer rungs point outward.

### LITTLE GIANT™ Limited One-Year Warranty Terms and Conditions

Little Giant Ladder Systems, LLC warrants each new product to the original purchaser thereof, to be free from defects in workmanship and materials when operated under normal conditions and maintained properly. This warranty covers all parts of the product, and shall be in lieu of any other warranty, expressed or implied, including, but not limited to, any implied warranty of merchantability or fitness for a particular purpose.

In the unlikely event that within the warranty period from the date of the original purchase, there is a problem caused by defects in either workmanship or materials, Little Giant Ladder Systems, LLC will repair or replace, at its option and without cost to the original purchaser. All freight to and from the factory is to be paid by the customer. If a replacement is necessary and your product is no longer available, a comparable product will be substituted.

The liability of Little Giant Ladder Systems, LLC under this warranty shall be limited solely to the repair or replacement of the product within the warranty period. Little Giant Ladder Systems, LLC shall not be liable, under any circumstances, for consequential or incidental damages, including, but not limited to, personal injury or labor costs. Some states do not allow the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

Under no circumstances will Little Giant Ladder Systems, LLC be responsible for any expense in connection with any repairs made by anyone other than the factory or authorized service provider unless such repairs have been specifically authorized in writing by Little Giant Ladder Systems, LLC. This warranty applies only to North America. Manufacturing specifications are subject to change without notice.

#### Register Your Warranty

Register your warranty within 30 days after receipt of the product. You may register your product by going online to [www.LittleGiantLadders.com/registration](http://www.LittleGiantLadders.com/registration).

LITTLE GIANT™ products are protected by several U.S. and international patents, and may have additional patents pending. To view a complete list, visit [www.LittleGiantLadders.com/patents](http://www.LittleGiantLadders.com/patents).

LITTLE GIANT is a trademark of Little Giant Ladder Systems, LLC, and is registered in the European Union, United States, Australia, Canada, China, Hong Kong, Iceland, Israel, Japan, Malaysia, New Zealand, South Korea, Singapore, Taiwan, and Thailand. CLIMB ON, ROCK LOCK, and RAPID LOCK are trademarks of Little Giant Ladder Systems, LLC, and are registered in the United States. QR SAFETY SCAN and TIP & GLIDE are trademarks of Little Giant Ladder Systems, LLC.