

Bluetooth Phone Adapter User Manual (Model HQTBTA340)

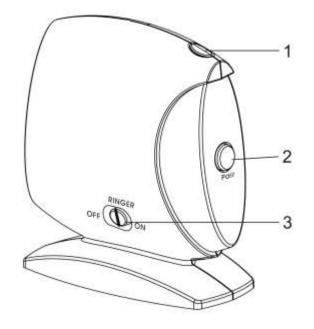

- 1. LED indicator
- 2. Pair button
- 3. Ringer (ON/OFF) switch
- 4. Mini USB DC jack
- 5. LINE jack
- 6. TELEPHONE Jack

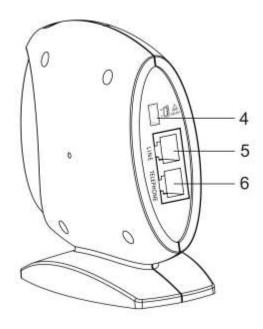

Packing Content:

- (1) Bluetooth phone adapter
- (1) Extension cord
- (1) Power adapter
- (1) User manual

Overview of Bluetooth Phone Adapter

The Bluetooth phone adapter connects to your traditional non-Bluetooth telephone line and allows you to answer PSTN calls using your remote Bluetooth device (Bluetooth headset). With the Bluetooth phone adapter, you can enjoy the comfort and convenience of hands-free communication.

SETUP / INSTALLATION:

Connecting the phone adapter with your telephone

- 1. Plug one end of the telephone cord into the "LINE" jack of the Bluetooth phone adapter and the other end into the wall jack.
- 2. Plug one end of the extension cord into the "TELEPHONE" jack of the Bluetooth phone adapter and the other end into your telephone itself.

Powering on the Bluetooth phone adapter

- 1. Connect one end of the power adapter to the mini USB DC jack of the Bluetooth phone adapter.
- 2. Connect the other end of the power adapter to a wall outlet (wall socket).

Pairing the Bluetooth phone adapter and your Bluetooth headset

The Bluetooth phone adapter can support the following PINs: 0000, 1234, 6666, and 8888. To know what PIN your Bluetooth headset adopts, please refer to its user guide. If the PIN of your Bluetooth headset is none of the four defaults, please consult your headset manual to see if you can change it to one of the supported PINs.

If the PIN of your Bluetooth headset is one of the PINs supported, please follow the steps below to pair the Bluetooth phone adapter with your Bluetooth headset.

- 1. Put your Bluetooth headset into the pairing mode by following the instructions in its user guide.
- 2. Press and hold the Pair button of the Bluetooth phone adapter for 3 seconds, until you see the LED indicator flashes quickly. Next, the Bluetooth phone adapter will attempt to pair and connect with your Bluetooth headset automatically.

 Note: In some cases, the pairing process can take up to 2 minutes.
- 3. If paired was successful, the LED indicator on the Bluetooth phone adapter will flash every second (as shown in the LED indicator chart below). If pairing fails (LED light flashing every 3 seconds (idle mode), then repeat the steps above.

Using the phone adapter to answer PSTN calls

Once the Bluetooth phone adapter is connected to your Bluetooth headset, you can use the Bluetooth headset by pressing its Talk button to receive or end a PSTN call.

You can also use your telephone to receive and answer PSTN calls as usual.

You may adjust the "Ringer" switch to let the phone adapter ring or not according to your interest.

LED indicator chart

LED indicator Phone adapter	Status
Flashing once every three seconds	Idle mode (Powered on)
Flashing once every one second	Pairing mode
Flashing twice every three seconds	Connected mode
Flashing five times every one second	A call incoming
On (steadily)	Call active mode

Pairing additional devices

Your Bluetooth phone adapter can store pairing information for up to eight different headsets equipped with Bluetooth wireless technology. If you want to pair the phone adapter and more than one headset, please follow the pairing process to pair them one by one, as shown above. Headset information is stored in a "Paired Device List" in memory in chronological order. When an attempt to pair with more than eight headsets is made, the oldest paired headset will be removed from the list. Any of the eight paired headsets can initiate a paired connection to the Bluetooth phone adapter while the phone adapter is in the idle mode. The Bluetooth phone adapter will automatically initiate a paired connection (when powered on) with the last headset it was connected to. When there is an incoming call, the Bluetooth phone adapter can also connect the latest connected headset automatically even if the Bluetooth phone adapter is in "idle" mode (not paired to any headset). In case the connection is lost, you can manually connect the phone adapter to the headset by pressing the Pair button (2).

For additional questions on this <u>Bluetooth phone adapter</u>, please visit https://hqtelecom.com.